

...a, you can fit an inner tube. This will enable you to proceed on your way until the necessary repair can be carried out.

**Jack-up the Car.** The jack, housed with the tool kit in the boot, is designed to lift either side of the car as required. First apply the handbrake firmly and remove the spare wheel from the boot where it is held in position by a

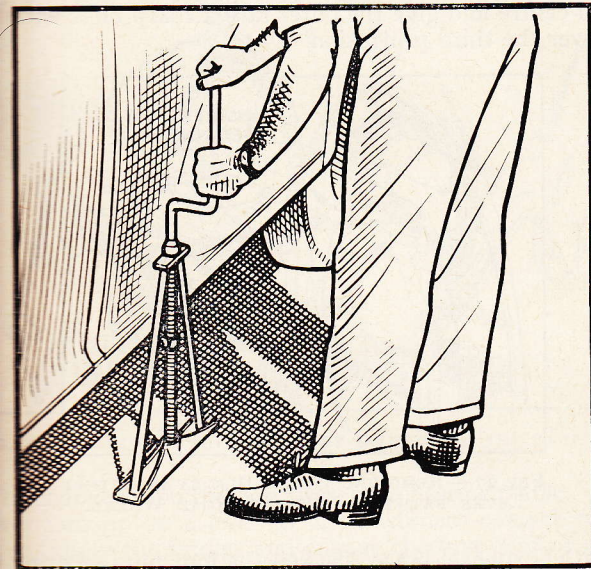


FIG. 26.—TO JACK-UP THE CAR, REMOVE THE RUBBER PLUG AND INSERT THE LIFTING ARM OF THE JACK.

...ted clamp plate (Fig. 5). Place it near to the wheel to be changed so that the car does not remain without a supporting wheel longer than is necessary. Before fitting, check that the tyre of the spare wheel is inflated to the correct pressure.

Remove the rubber plug from the socket under the door and insert the arm of the jack (Fig. 26). Because the car will swing over when one side is raised, the jack should