

Illus. No.	DESCRIPTION	Part No.	Quantity	Change Point	REMARKS
ENGINE—continued					
INLET AND EXHAUST MANIFOLDS—HEAT SHIELD					
1	Manifold—inlet	12B 1831	1	(E) 29AA, 29AB,	
2	Plug—welch	2K 8159	2	(E) 29G, 29GB	
3	Washer—adaptor (fibre)	1B 3664	1		
5	Adaptor—brake servo	21K 8342	1	(E) 29AA, 29AB	
7	Washer (fibre)	6K 518	1	(E) 29G, 29GB	
4	Manifold—inlet—sand-cast	†12B 1541	1		W.S.E. use 12B 2645 with connection—gulp valve sensing control—12B 2615
4A	Manifold—inlet—die-cast	\$ 12B 2645	1	(E) 29GA	
2	Plug—welch	2K 8159	1		
3	Washer—adaptor (fibre)	1B 3664	1		
5	Adaptor—brake servo	21K 8342	1		
Manifold—exhaust					
8A	Front	12B 1961	1	(E) 29AA, 29AB	
9A	Rear	12B 1962	1		
8	Front	12B 1829	1	(E) 29G, 29GB	
9	Rear	12B 1830	1		
10	Front	\$ 12B 2496	1	(E) 29GA	
11	Rear	\$ 12B 2497	1		
12	Gasket—manifold to head	12B 1545	1		
13	Stud—exhaust pipe	\$ AEH 194	6		
14	Stud—manifold to head	FHS 2614	15		
15	Washer—plain	PWZ 206	15		
16	Nut	AEC 250	15		
17	Connector—front hot spot	12B 1833	1		
18	Connector—rear hot spot	12B 1834	1		
19	Screw—hot spot—long	HCZ 0510	4	(E) 29G, 29GB	
20	Screw—hot spot—short	ZCS 0509	4		
21	Washer—plain	PWZ 305	8		
22	Washer—spring	LWZ 305	8		
23	Gasket—hot spot	12B 1578	2		
24	Stud	CHS 2510	4	(E) 29GA	
25	Washer—spring	LWZ 305	4		
26	Nut	FNN 105	4		
27A	Shield—heat	12B 1949	1	(E) 29AA	
28A	Plate—spring anchor	12B 1948	1		
27	Shield—heat	12B 2317	1	(E) 29G, 29GB	
28	Plate—spring anchor	12B 1948	1		
29	Shield—heat	12B 2498	1	(E) 29GA	
30	Plate—spring anchor	12B 2597	1		
31	Bracket—heat shield	12B 2058	1		
32	Screw—shield to manifold	ZCS 0405	6		
33	Washer—plain	PWZ 404	6		
34	Washer—spring	LWZ 204	6		
35	Bolt—plate and bracket to shield	HZS 0405	1		
36	Washer—plain	PWZ 204	1		
37	Washer—spring	LWZ 404	1		
38	Spring—carburettor to shield	AHC 70	2		
39	Extension—heat shield	12B 2637	1	(E) 29GA	

ABBREVIATIONS AND SYMBOLS

(E) Engine number W.S.E. When stock is exhausted † Revised information \$ This item is subject to safety regulations
Issue 7