



MG TF

Electrical Circuit Diagrams

Publication Part No. RCL 0496EXP
Published by MG Rover Group After Sales
© MG Rover Group Limited 2002

COLOUR CODES**DRAADKLEURCODES****CODICI COLORI DEI CAVI****CODES DES COULEURS DES FILS****CODIGOS DE COLORES DE LOS CABLES****KABELFARBCODES****CÓDIGOS DAS CORES DOS FIOS**

CODE	COLOUR	CODE	KLEUR	CODE	COULEUR	CODE	FARBE	CODICE	COLORE	CODIGO	COLOR	CÓDIGO	COR
B	BLACK	B	ZWART	B	NOIR	B	SCHWARZ	B	NERO	B	NEGRO	B	PRETO
G	GREEN	G	GROEN	G	VERT	G	GRÜN	G	VERDE	G	VERDE	G	VERDE
K	PINK	K	ROZE	K	ROSE	K	ROSA	K	ROSA	K	ROSA	K	ROSA
LG	LIGHT GREEN	LG	LICHTGROEN	LG	VERT CLAIR	LG	HELLGRÜN	LG	VERDE CHIARO	LG	VERDE CLARO	LG	VERDE CLARO
N	BROWN	N	BRUIN	N	BRUN	N	BRAUN	N	MARRONE	N	MARRON	N	CASTANHO
O	ORANGE	O	ORANJE	O	ORANGE	O	ORANGE	O	ARANCIONE	O	NARANJA	O	LARANJA
P	PURPLE	P	PAARS	P	VIOLET	P	LILA	P	PORPORA	P	PURPURA	P	ROXO
R	RED	R	ROOD	R	ROUGE	R	ROT	R	ROSSO	R	ROJO	R	VERMELHO
S	SLATE (grey)	S	LEIGRIJS	S	GRIS	S	GRAU	S	ARDESIA (grigio)	S	PIZARRO (gris)	S	CINZENTO
U	BLUE	U	BLAUW	U	BLEU	U	BLAU	U	BLU	U	AZUL	U	AZUL
W	WHITE	W	WIT	W	BLANC	W	WEISS	W	BIANCO	W	BLANCO	W	BRANCO
Y	YELLOW	Y	GEEL	Y	JAUNE	Y	GELB	Y	GIALLO	Y	AMARILLO	Y	AMARELO

CONTENTS

4 POWER DISTRIBUTION	6	64 SUPPLEMENTARY RESTRAINT SYSTEM	29	120 INSTRUMENTS	48
8 EARTH DISTRIBUTION	10	76 HEATER	30	124 CLOCK	52
12 ENGINE MANAGEMENT	14	84 AIR CONDITIONING	31	128 CIGAR LIGHTER	53
16 STARTING AND CHARGING	21	88 COOLING FANS	33	132 HORNS	54
20 FUEL PUMP	22	92 HEATED WINDOW	34	140 DOOR MIRRORS	55
28 ANTI-THEFT ALARM AND CENTRAL		96 WINDOWS	35	144 AUDIO SYSTEMS	56
DOOR LOCKING	23	104 WIPERS AND WASHERS	36	164 DIAGNOSTIC SOCKET	58
40 SHIFT INTERLOCK	26	108 EXTERIOR LAMPS	37	180 HEADER JOINTS	59
44 ANTI-LOCK BRAKING SYSTEM	27	112 INTERIOR LAMPS	44	184 SPLICES AND CENTRE TAPS	62
50 ELECTRONIC POWER ASSISTED STEERING	28	116 INTERIOR ILLUMINATION	46		


HOW TO USE THE CIRCUIT DIAGRAMS

All of the information in this folder is intended for use with the **Electrical Reference Library booklet**.

The circuit diagrams are presented with Power and Earth distribution first, followed by individual circuits for each electrical system on the car.

Power Distribution

The Power Distribution diagram shows the connections from the battery to the engine and passenger compartment fuseboxes. It also shows the internal circuitry of the fuseboxes.

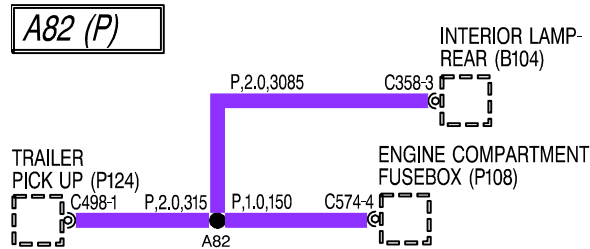

86M4227A

The fuse box details are followed by independent functionally specific circuits and then a Splices and centre taps section outlining the way in which internal harness splices and centre taps distribute power in the harnesses. This information should be used during diagnosis of electrical faults to check for symptoms in associated circuits and narrow down the search area.

Earth Distribution

The ground distribution section comprises a number of Headers and Splices tables. These are used in a similar manner to those in Power Distribution; to narrow the search area by checking for fault symptoms in associated circuits.

Splices and centre taps

Header and splice tables present the joint(s) and wiring up to the first component. Splices are identified by a number with an alphabetical prefix and the wire colour.

The splice information shown on individual system circuits is not complete. Always refer to the splices circuit for complete information on each splice.

Wire attributes

Additional information (separated by a ',') is shown alongside the wire colour:

Wire gauge - the cross-sectional area of the wire in square millimetres. This is included to help you select the correct wire during harness repair.

Some wires do not have a gauge shown, these wires are of unique construction and will have a three or four letter code printed after the colour code, eg MAB. The code identifies the type of wire for manufacturing purposes. Usually, only the first two characters have significance in service, but in some instances the third character also becomes significant, see table.

Wire type

The following table list the wire type codes together with an explanation of their meaning.


Code	Description
D	Single core DIN wire
F	Single core flexible wire
H	Single core high temperature wire
SA*	Single core resistive wire (0.9 ohms/m)
SB*, SC*, SD*	Single core dual extruded wire
SE*, SF*	Single core fusible wire
MAC, MAD, MAE, MAF, MAG, MAH	Coaxial screened wire
MB*, MO*, MAK	Single core screened wire
MC*, MI*, MP*, MQ*, MAB, MAP	Twin core screened wire
MD*, MJ*, MAM	Twin core ABS sensor wire
ME*, TA*, TB*, MM*, MN*, MU*,MAI	Twisted pair of wires
MF*	Heated oxygen sensor (HO2S) screened wire
MG*	Twin core twisted, screened wire
MH	four core twisted, screened wire
MK*	Three core SRS sensor wire
ML*, MAA, MAR	Four core screened wire
MR*	Six core screened, flexible wire
MS*	Four core screened, flexible wire
MT*	Single core screened, flexible wire
MV*	Twin core flat wire
MW*	Three core round wire
MX*, MY*	Seven core round wire
MZ*	Three core screened, flexible wire
MAJ	Twin core round cable
MAQ, MAU	Three core screened wire
MAS	Single core, double sheath wire
MAT	Double core, double sheath wire
MAL	SRS wire
MAN	Twin core braided, screened wire

HOW TO USE THE CIRCUIT DIAGRAMS

Wire length (Power & Earth Distribution only)

The length of the wire in millimetres. This can be used to locate internal harness splices; look for the shortest wire between the joint and connector. For example, it can be seen that C574-4 is 150mm from joint A82.

Connectors

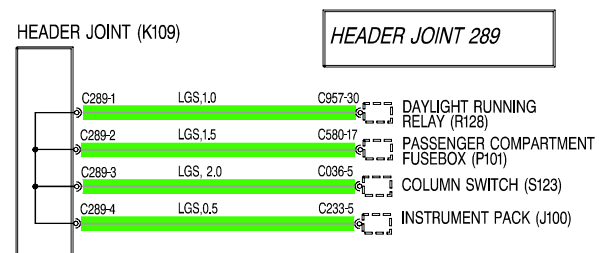

86M4228A


Header joints are identified by their corresponding connector number with a numbered suffix to indicate the pin-out detail of the wire, i.e. C289-1 identifies connector 289, pin number 1. Wire insulation colour is identified in the normal way. Where wires have a predominant colour with a secondary colour stripe, the main colour is identified first, i.e. LGS - Light Green with a Slate stripe.

Line Types



86M4229A

This means the wire connects to another circuit.

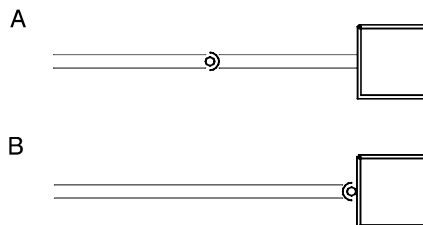


86M4230A

The cup and ball symbol indicates the male and female halves of connector.

A. Plug on lead (Flylead) wired directly to the component.

B. Connector plugs directly into component.


Components

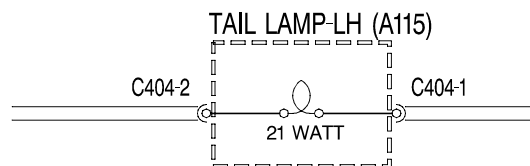

86M4231A

The name or description of the component is shown. A dotted outline indicates that the component is not shown in its entirety.


Earth points

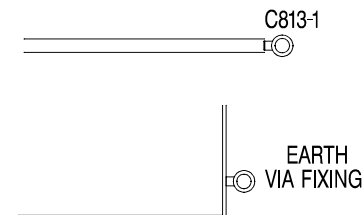

86M4232A

Earth points are identified with an eyelet symbol and a connector number, except where components are grounded through their fixings, when only the eyelet is shown.

Fuses and Diodes

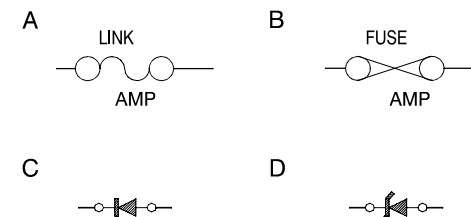


86M4234A

Fusible links (A) and current rated fuses (B) are identified as shown.


The direction of the arrow in a Diode symbol (C) indicates the direction of current flow. The Zener diode (D) - prevents current flow until a precise voltage is reached.

4 POWER DISTRIBUTION

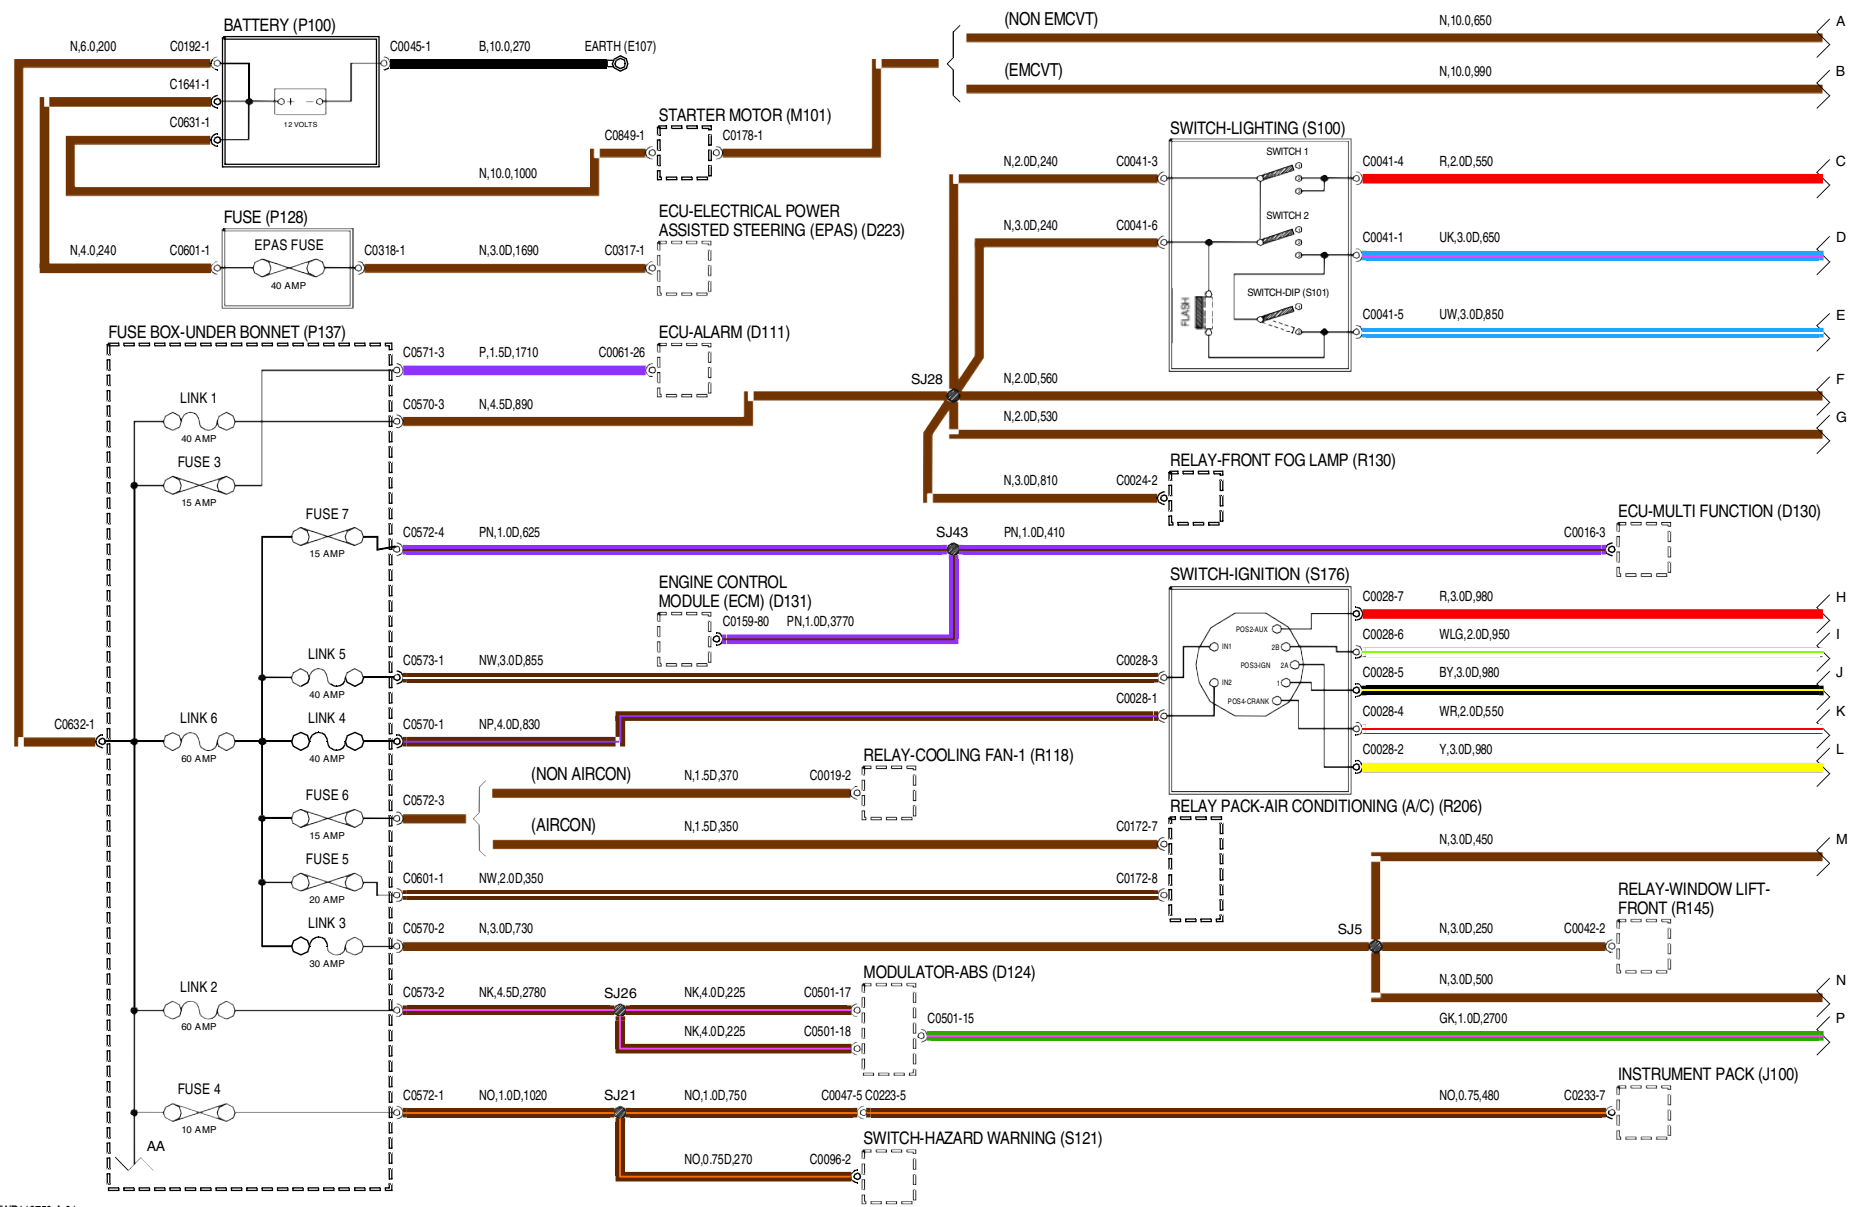


WVR119750-A-01

4 POWER DISTRIBUTION

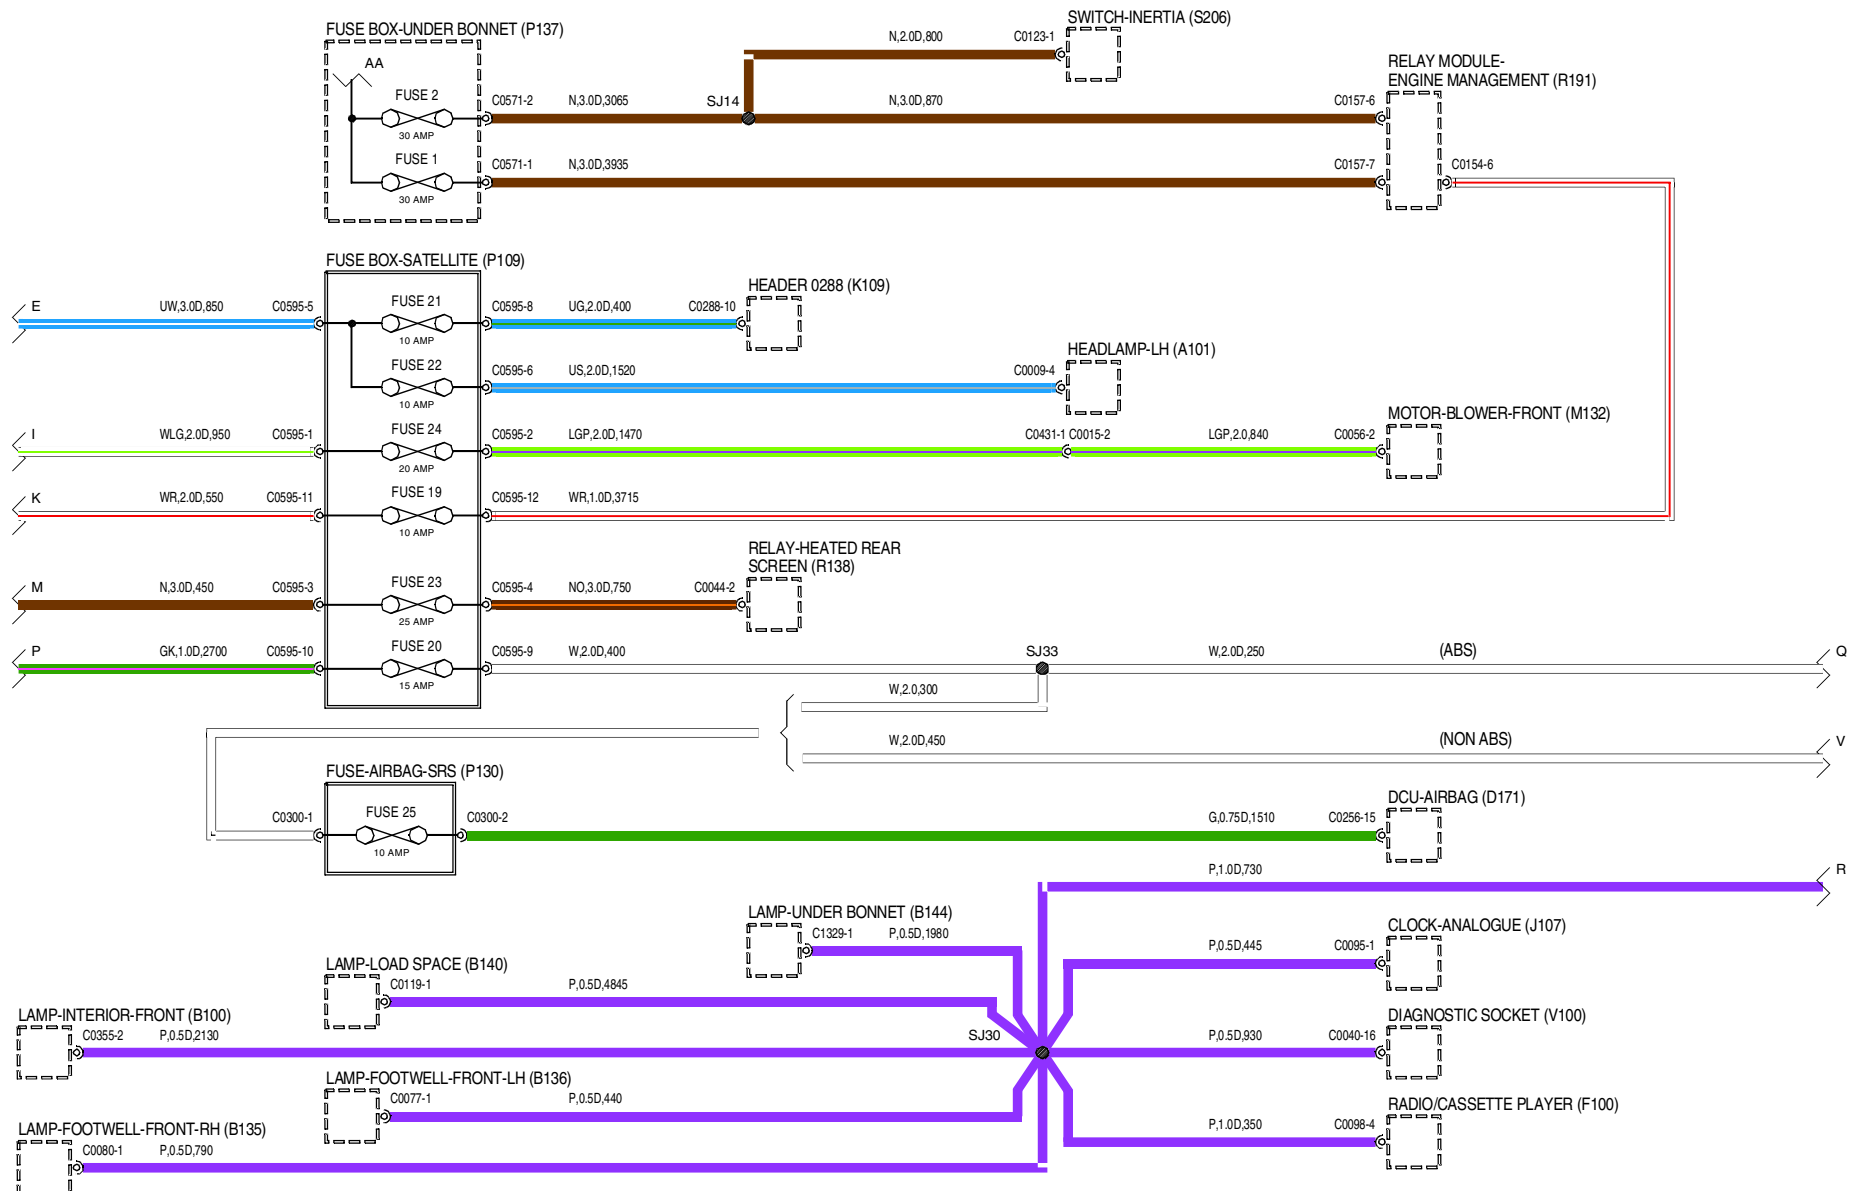


VWR119750-A-02

4 POWER DISTRIBUTION

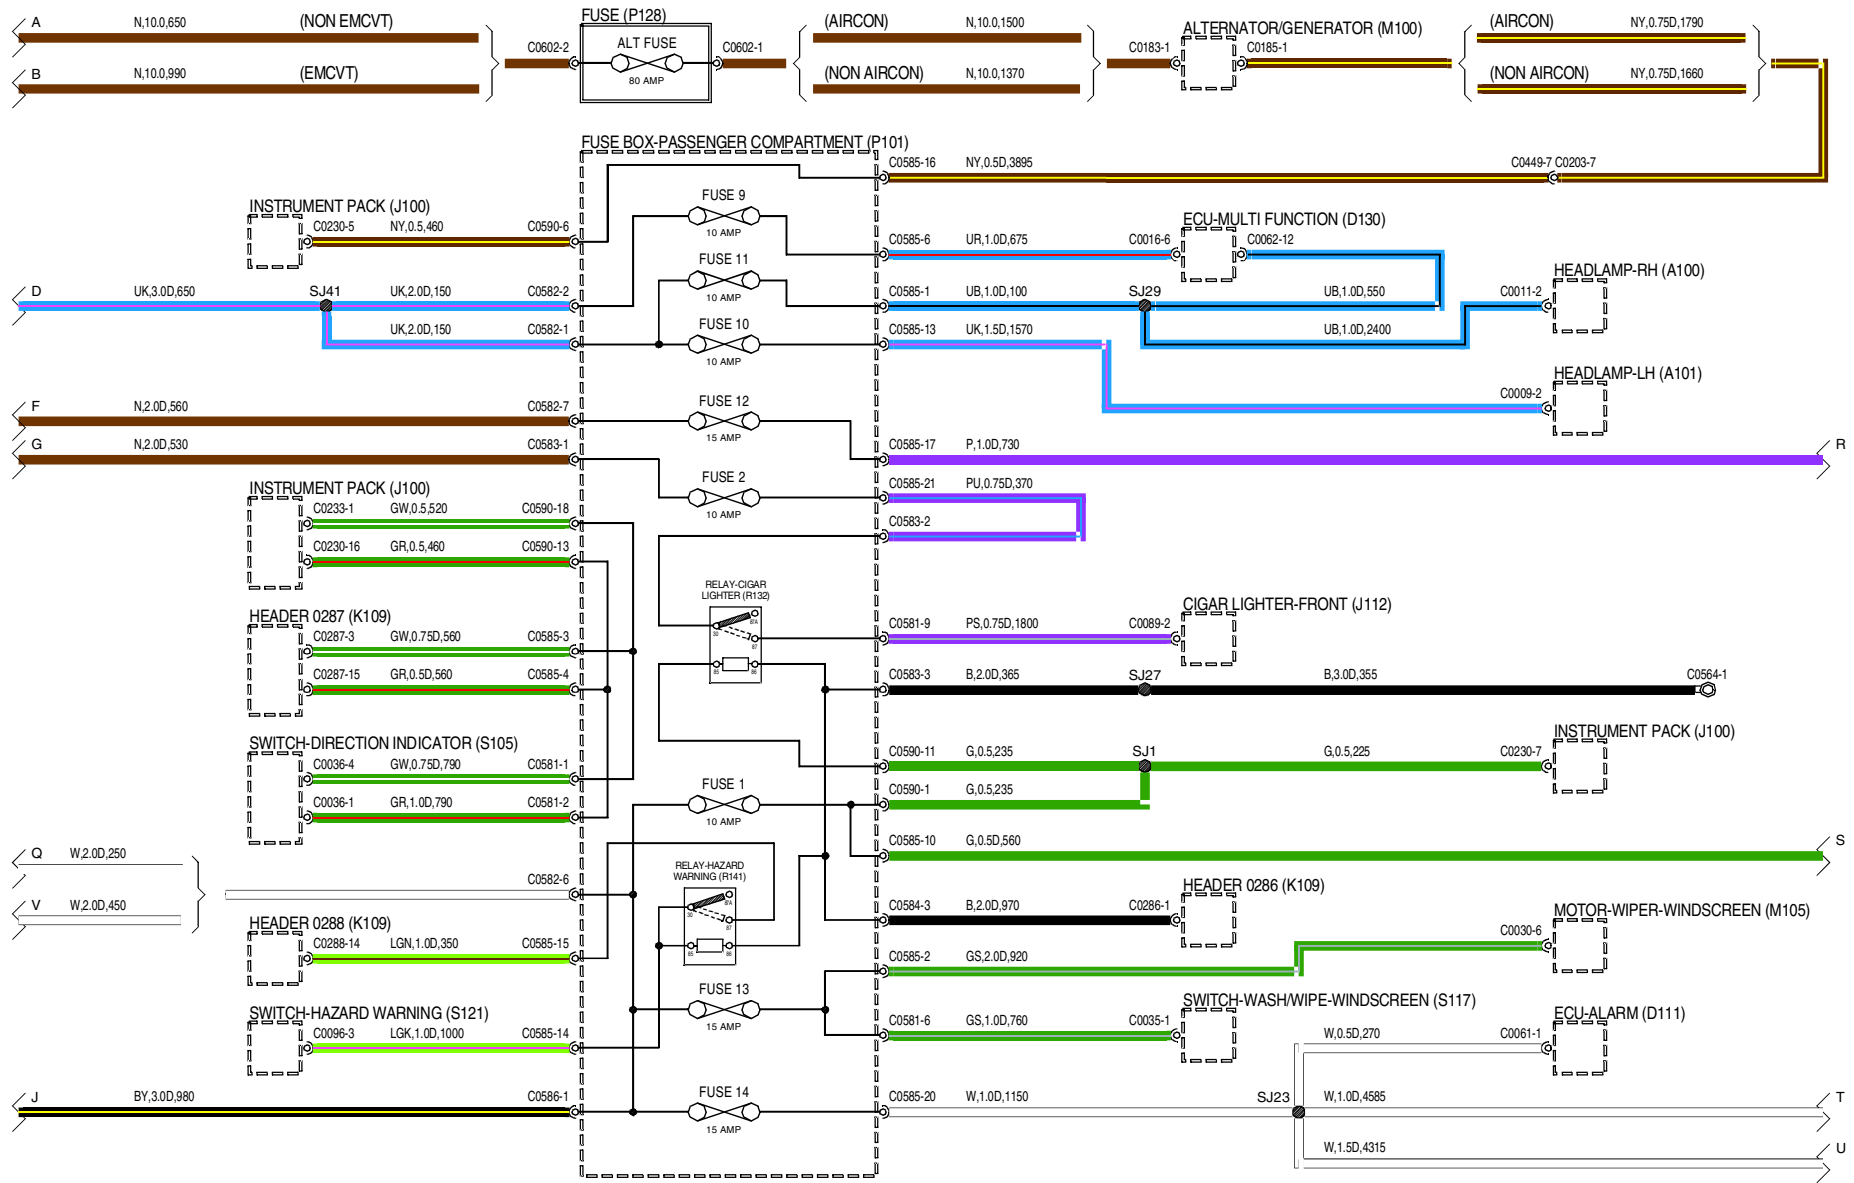




VWR119750-A-03

4 POWER DISTRIBUTION

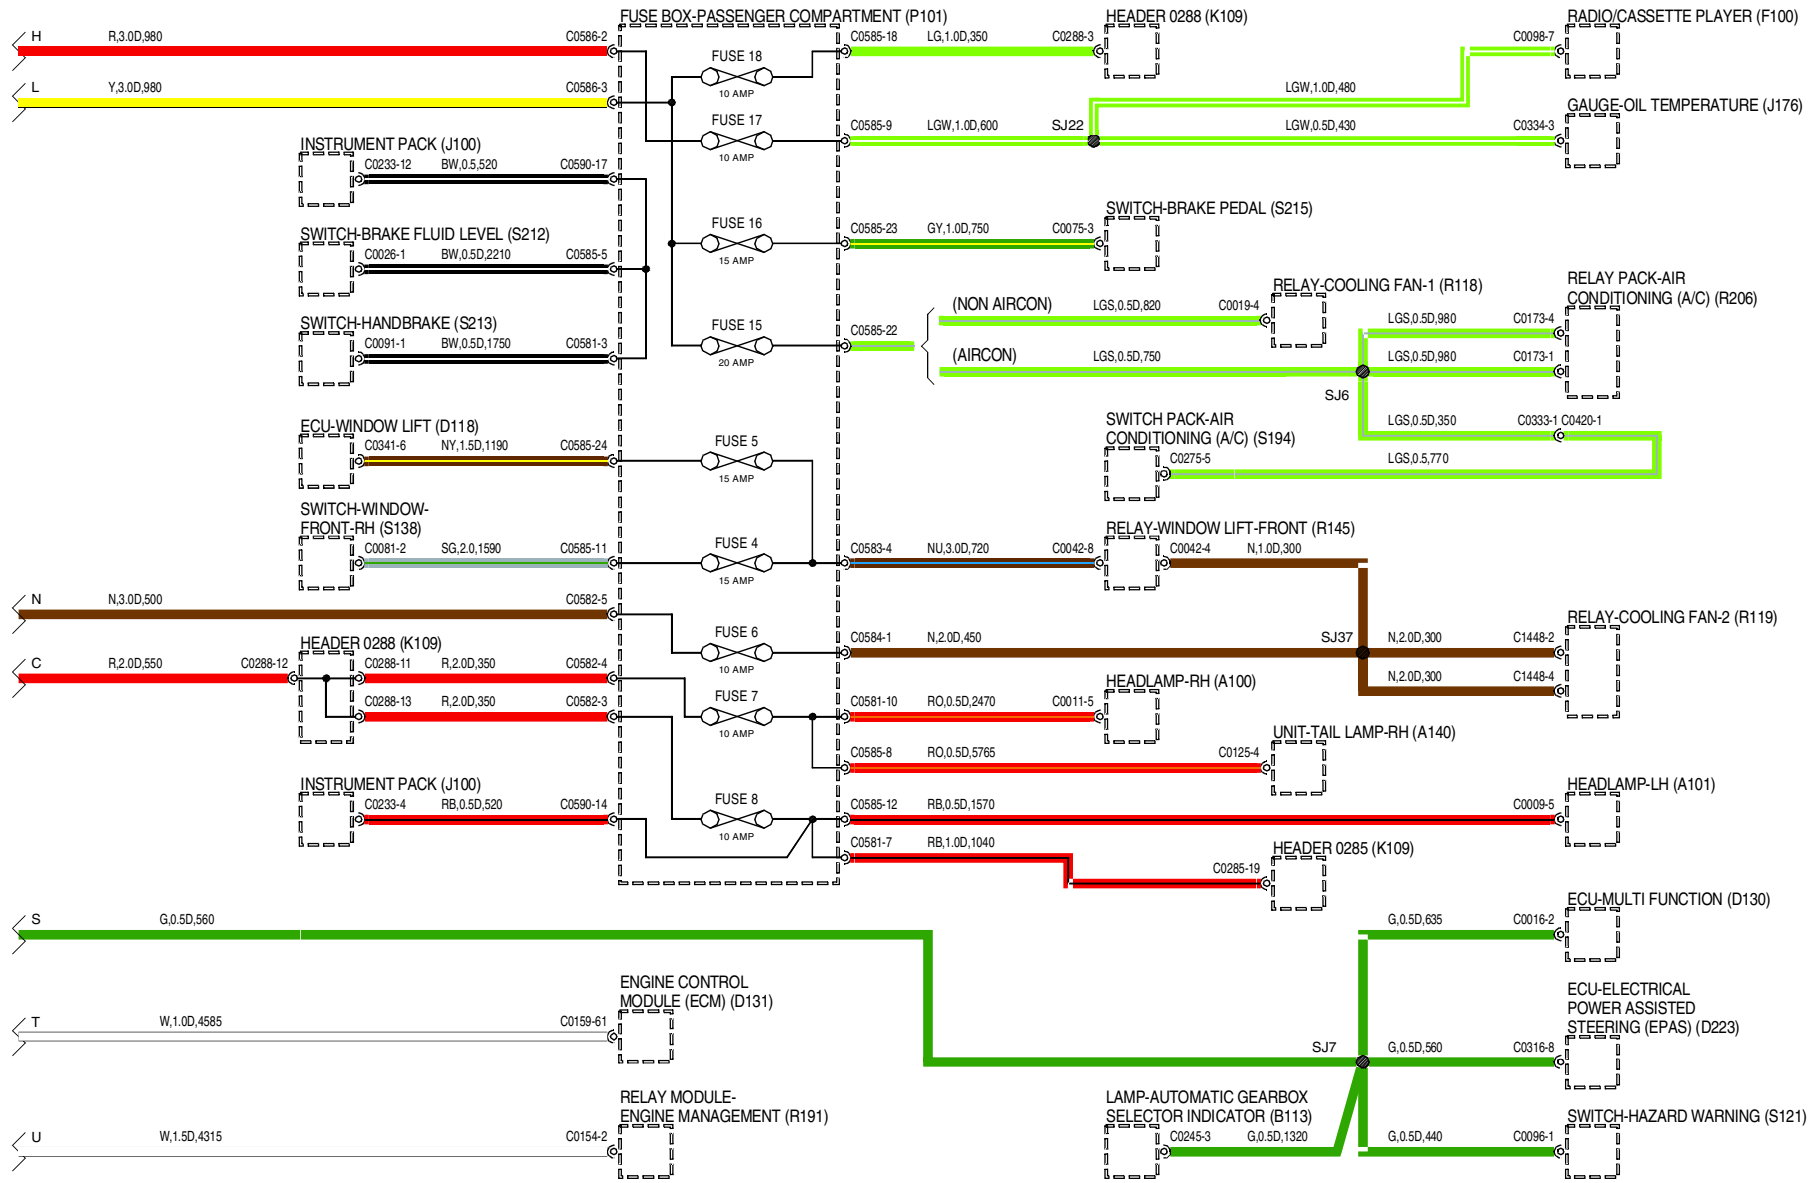


VWR119750-A-04

8 EARTH DISTRIBUTION

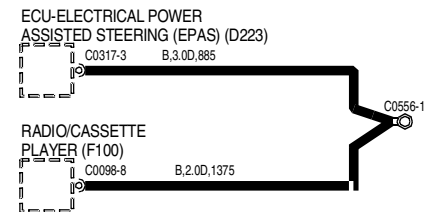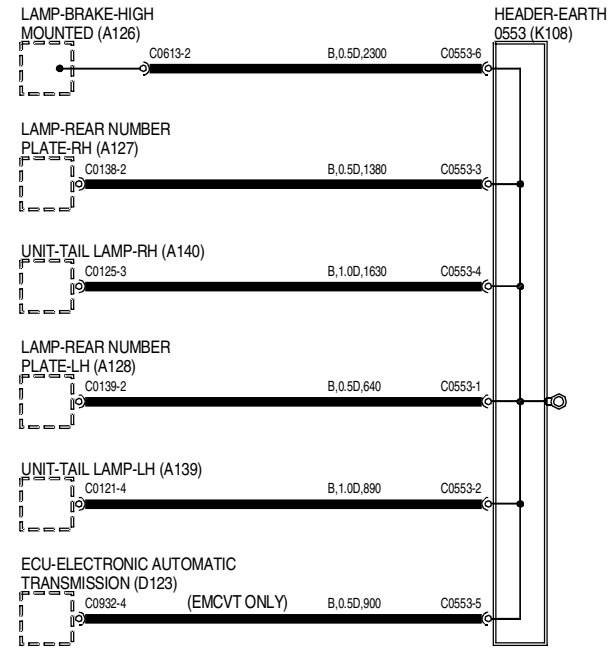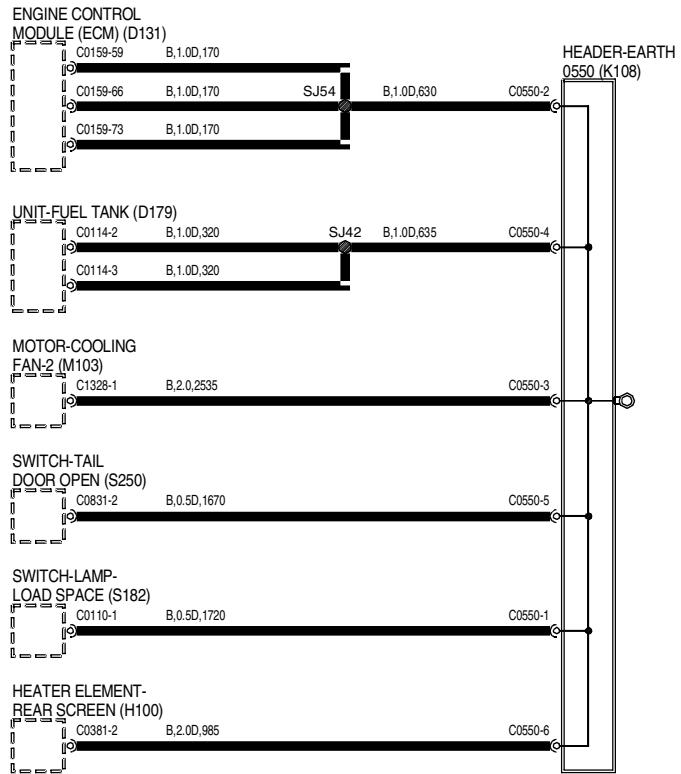


8 EARTH DISTRIBUTION

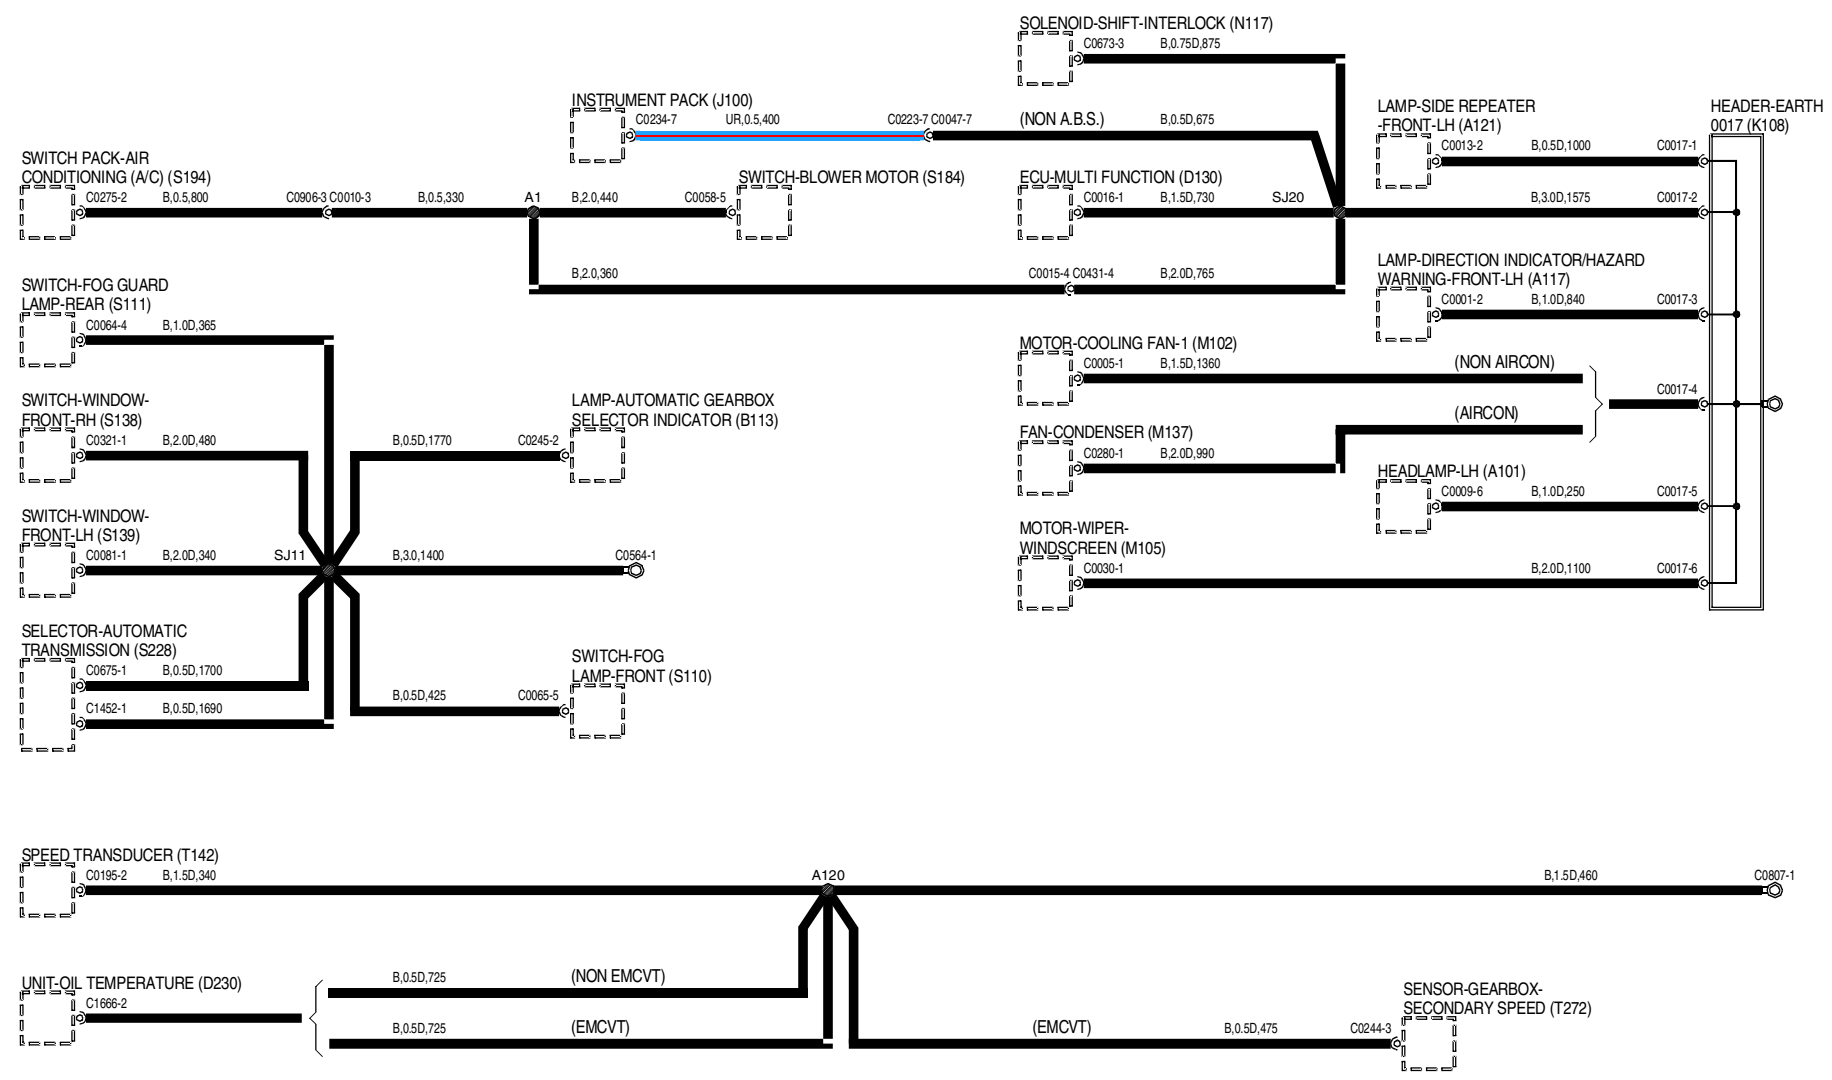


VWR119330-A-02

8 EARTH DISTRIBUTION

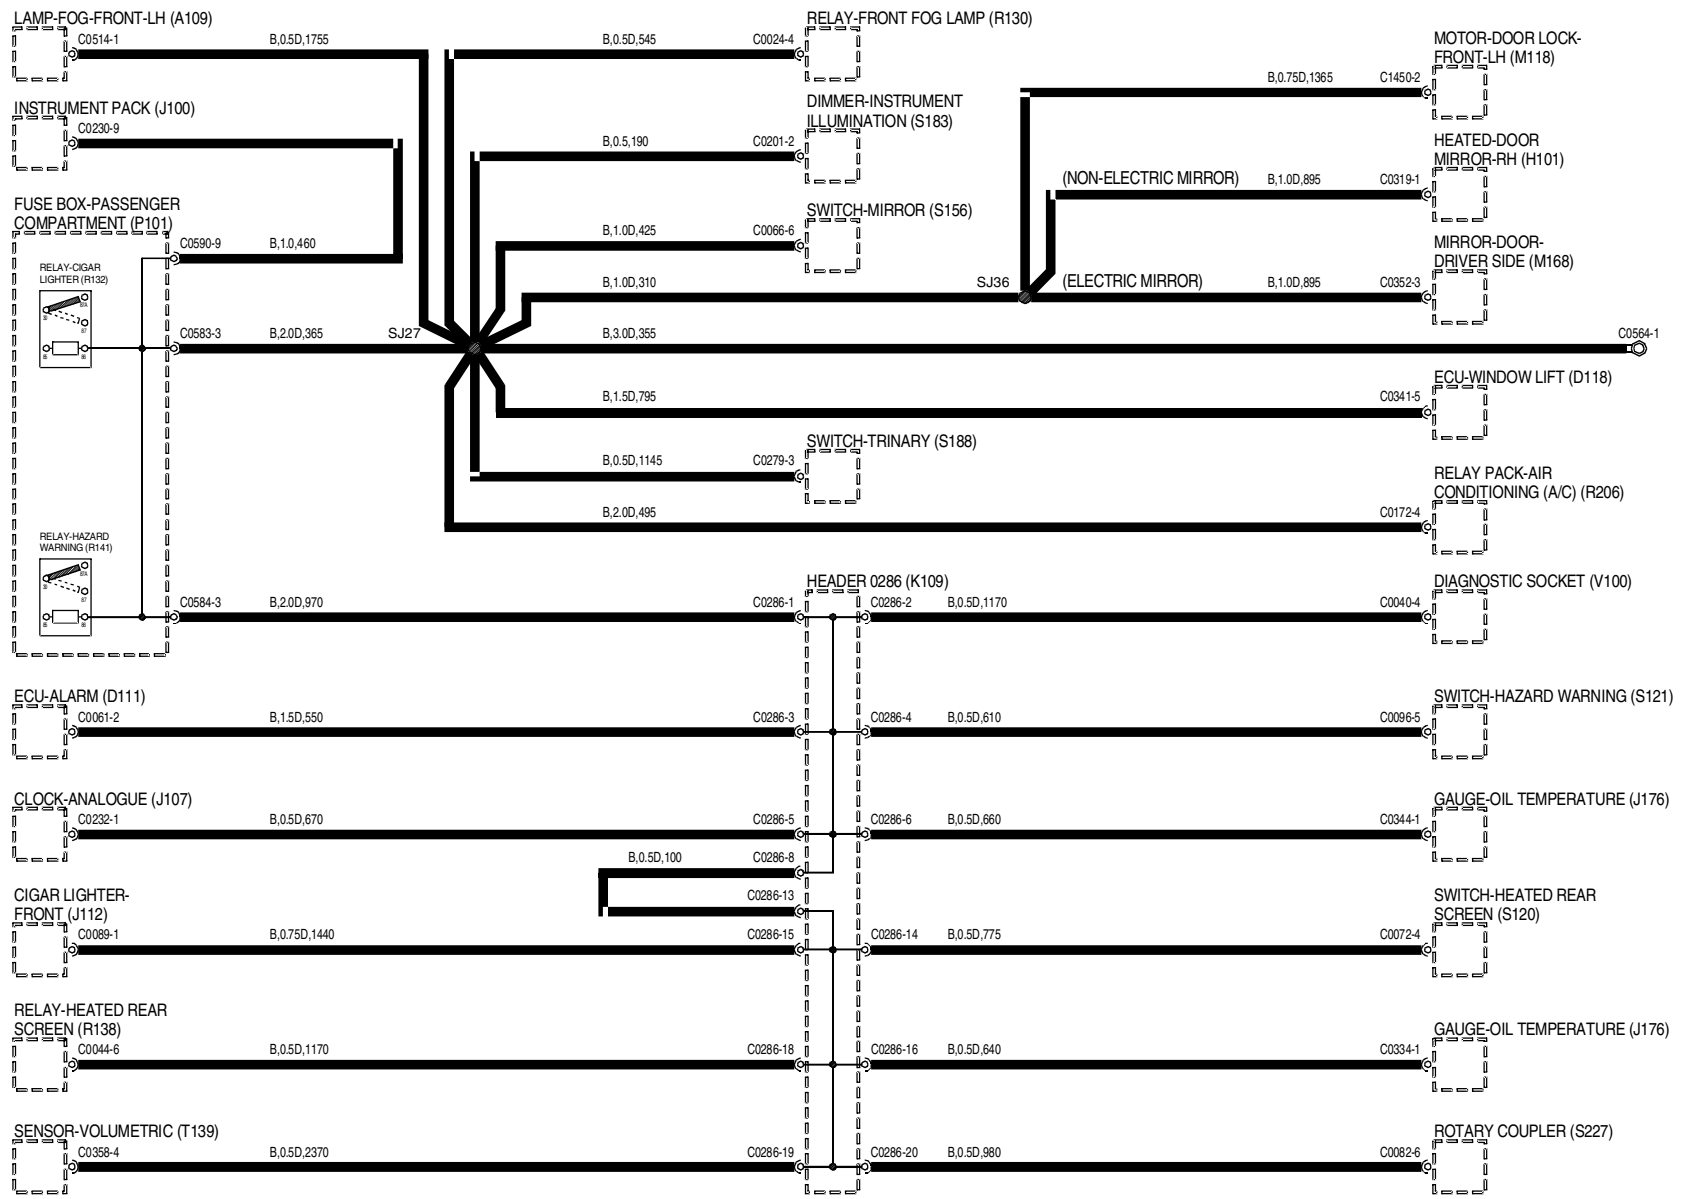


VWR119330-A-03

8 EARTH DISTRIBUTION

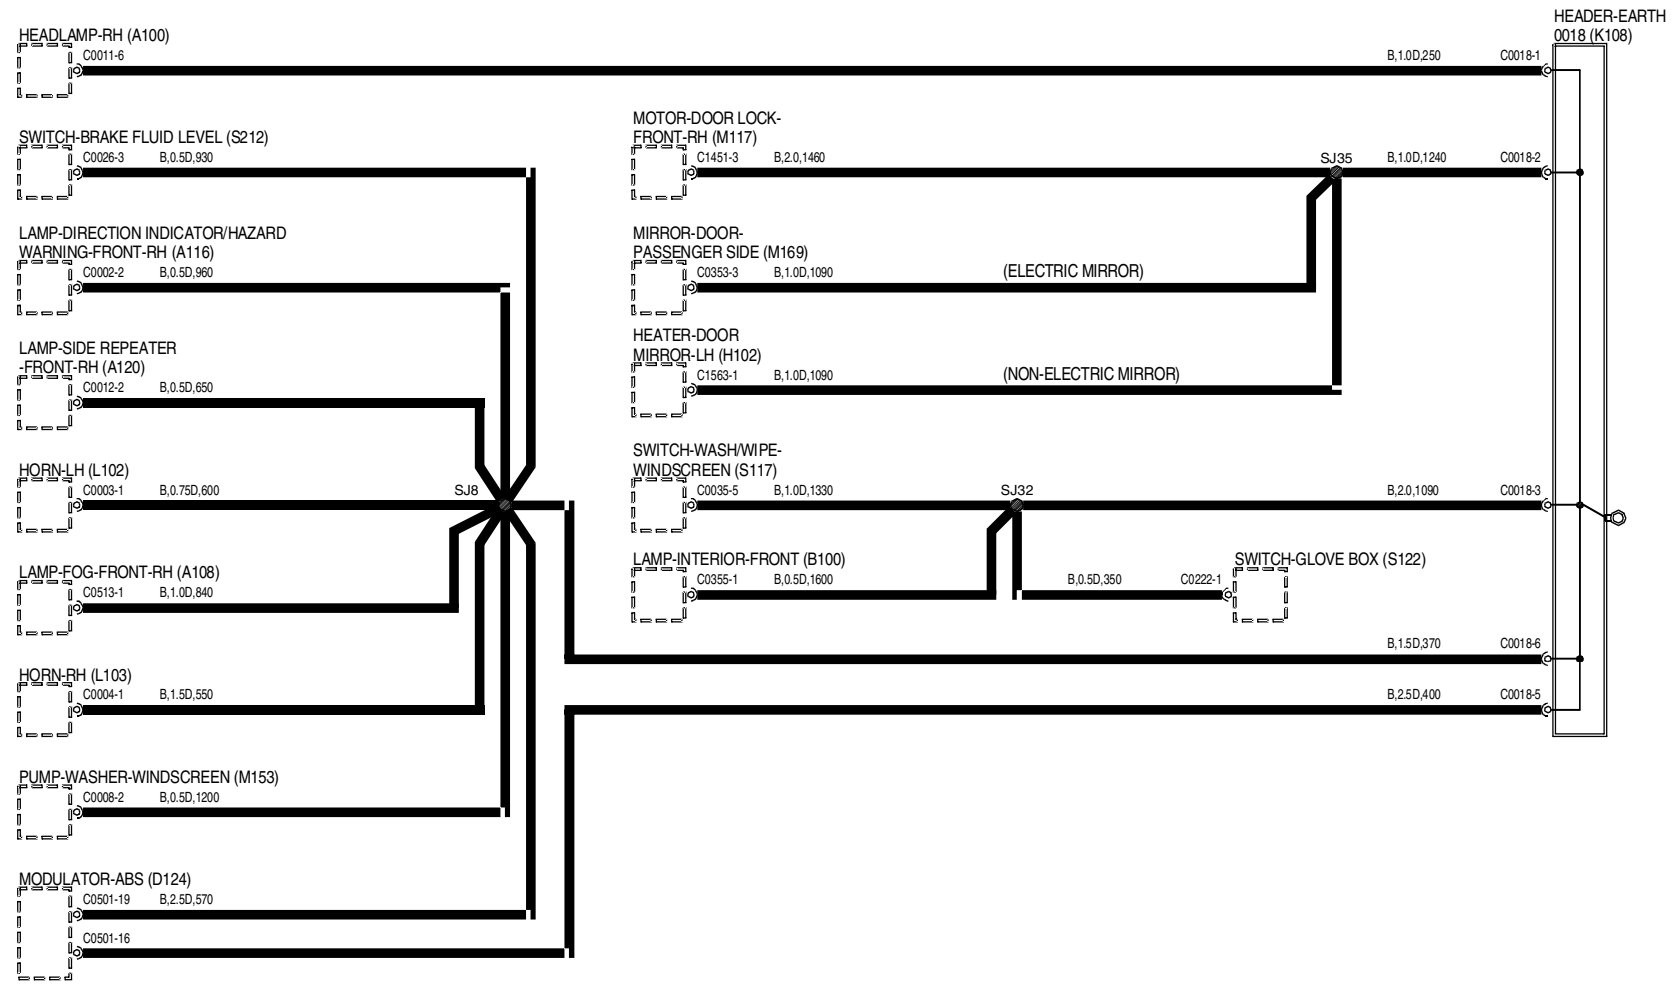


VWR119330-A-04

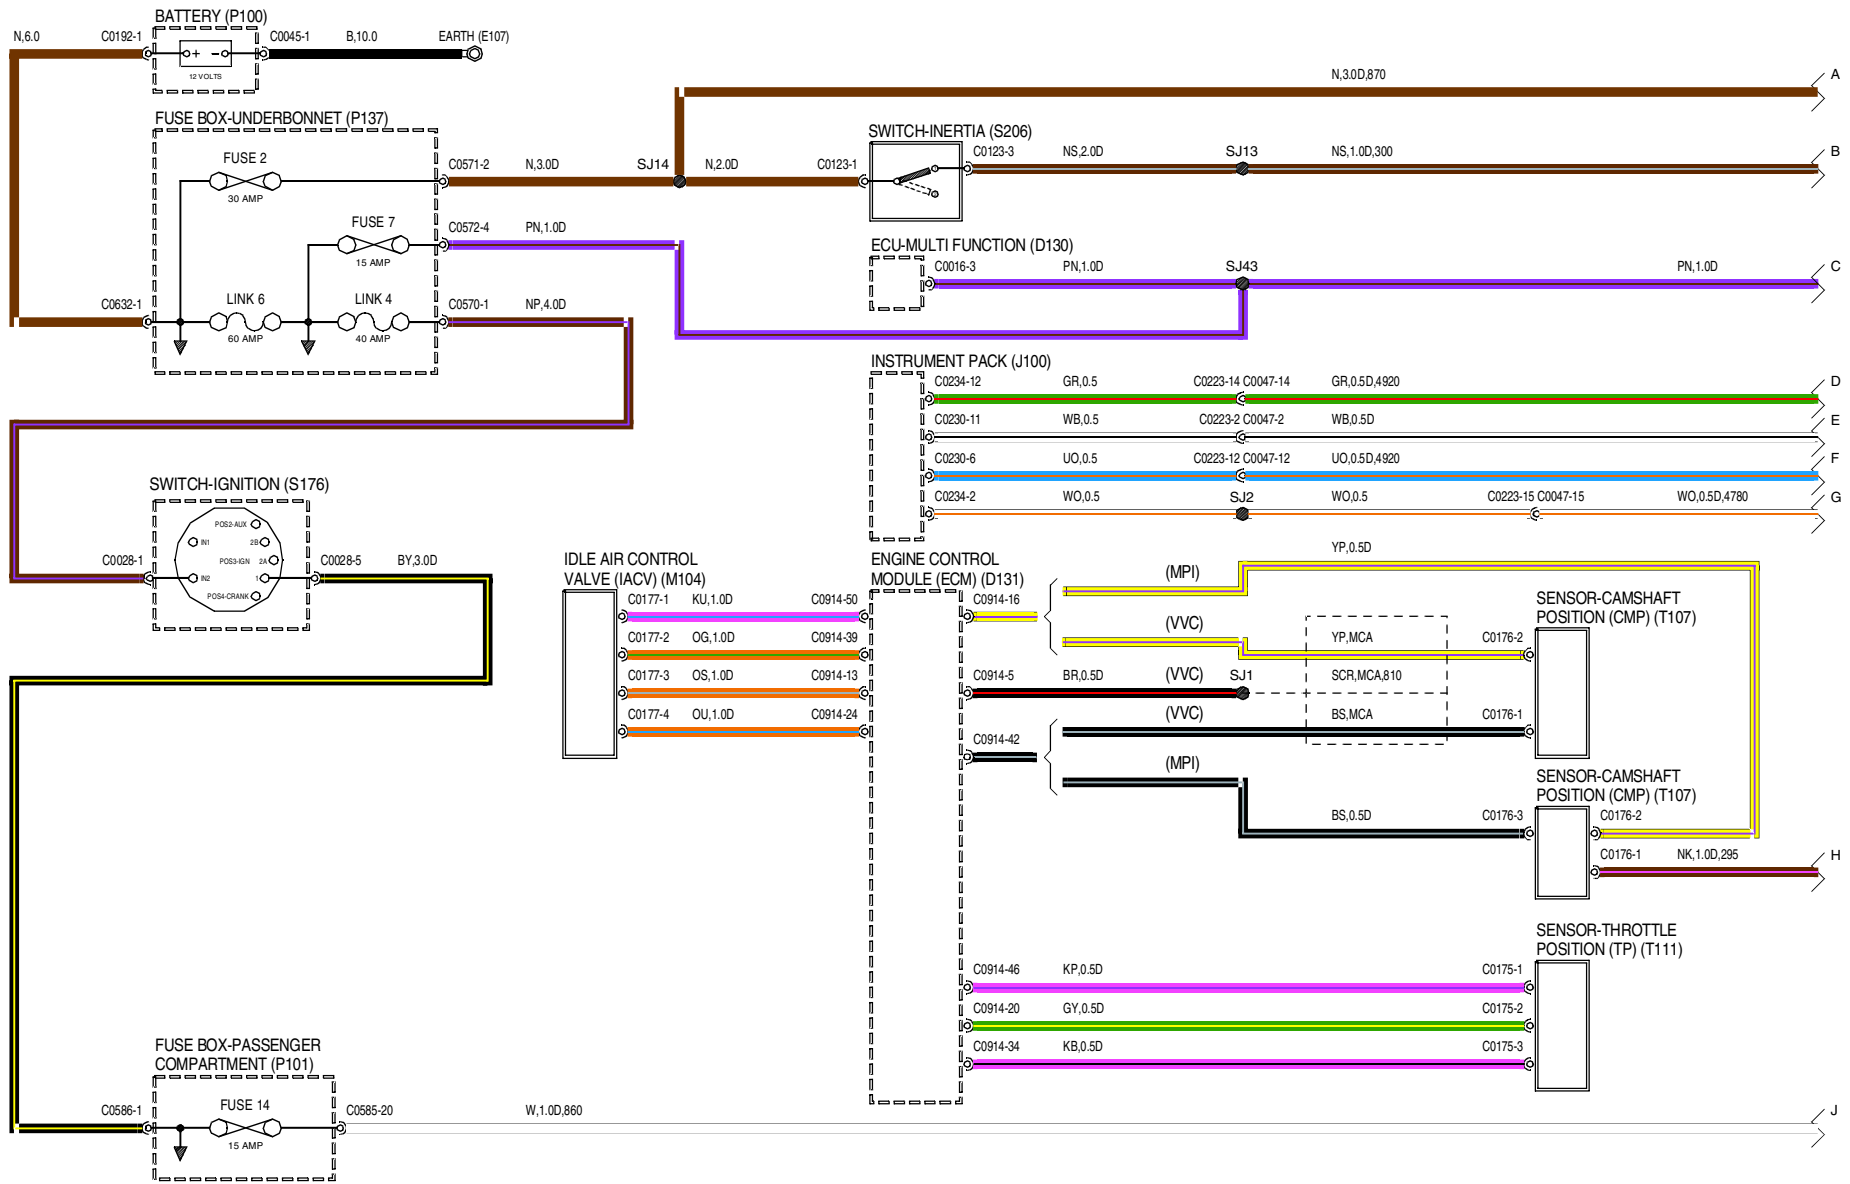


WVR119410-A-01

12 ENGINE MANAGEMENT

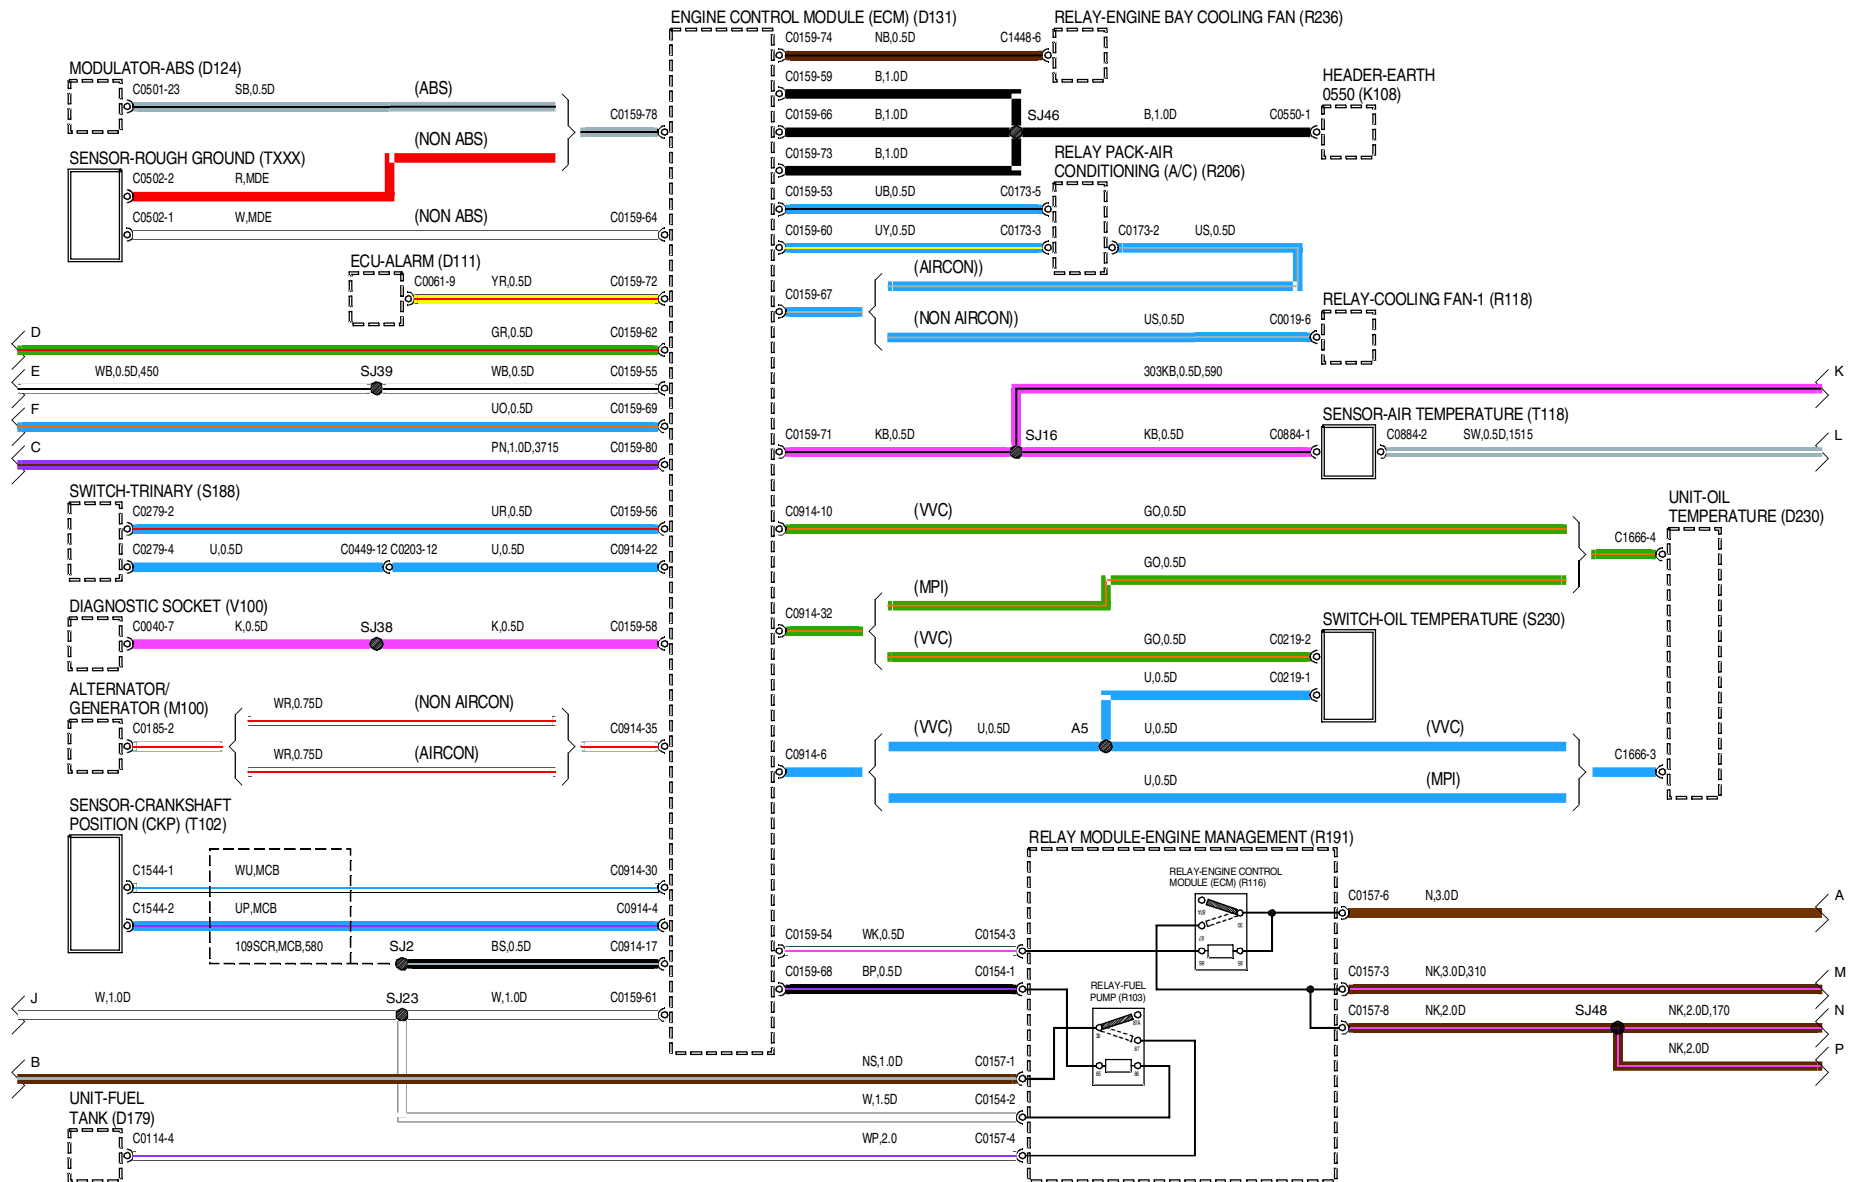


VWR119410-A-02


12 ENGINE MANAGEMENT

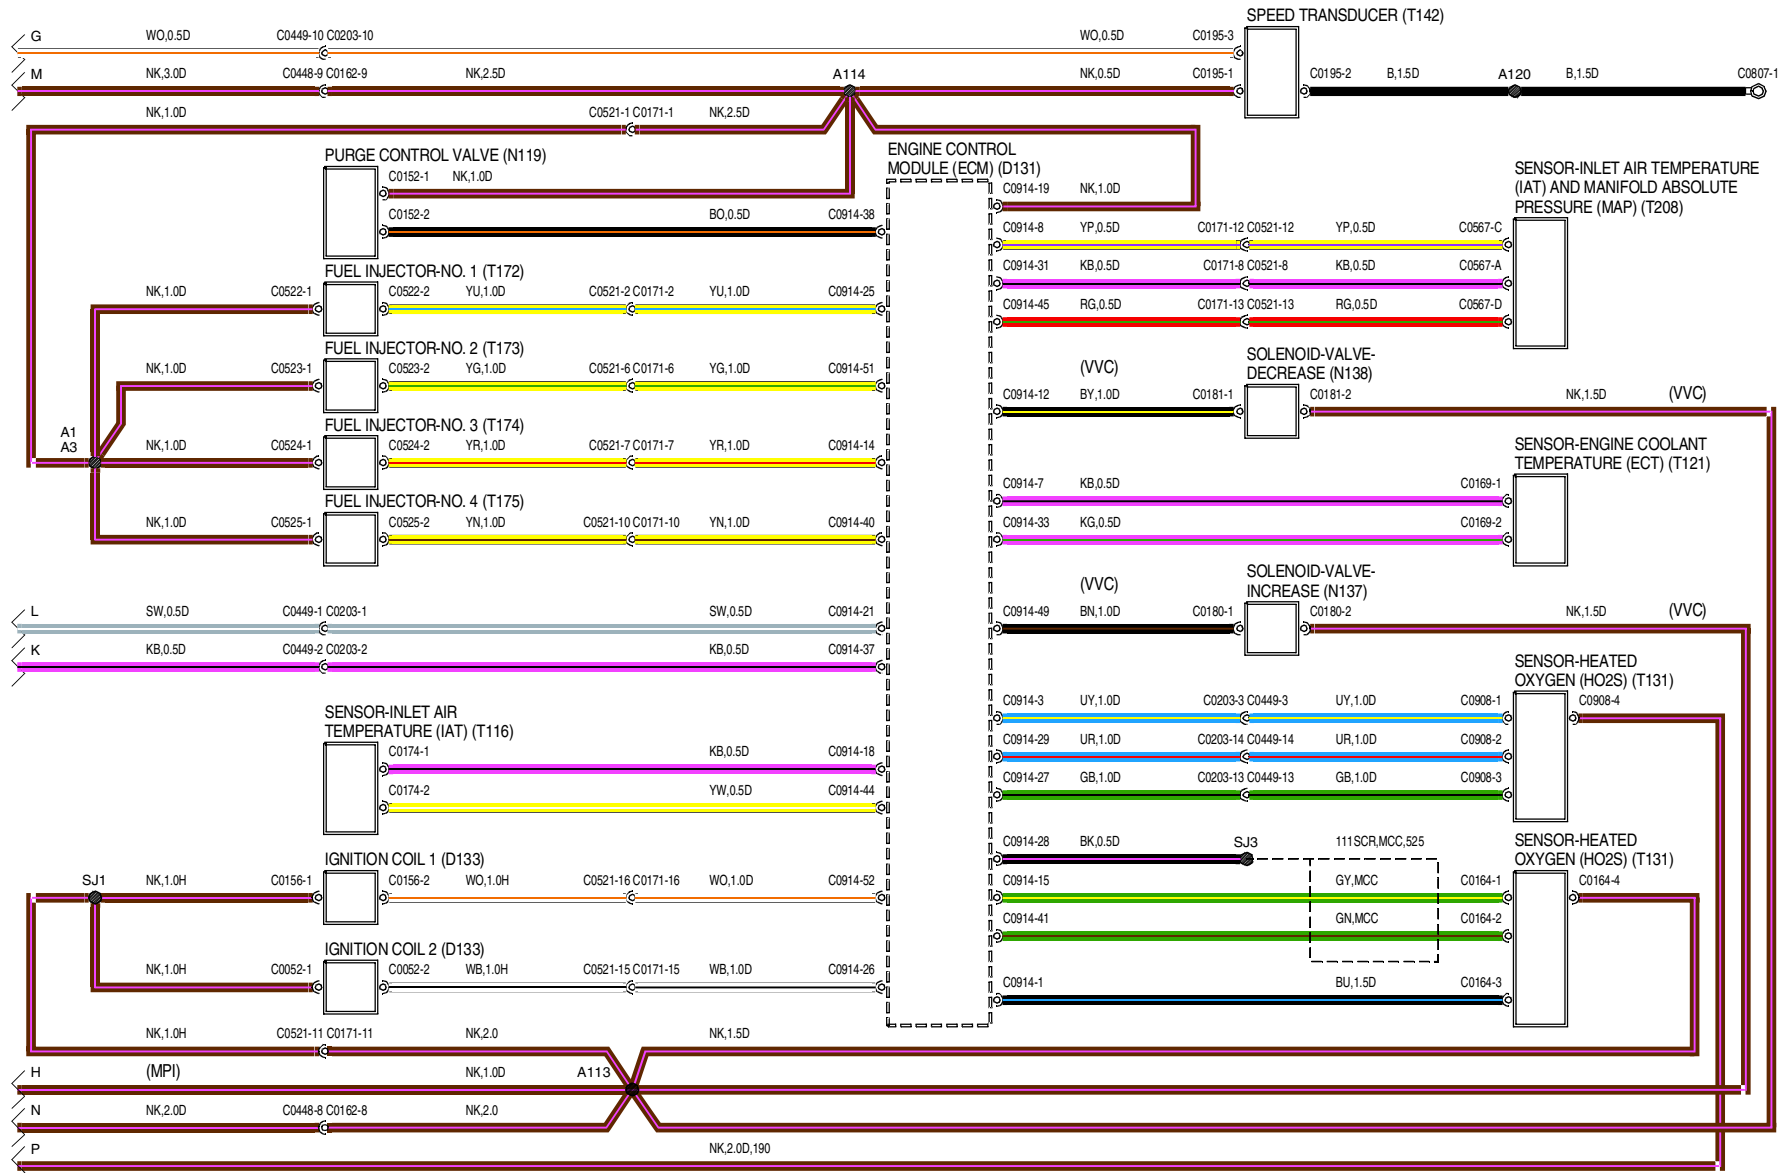

VWR119410-A-03

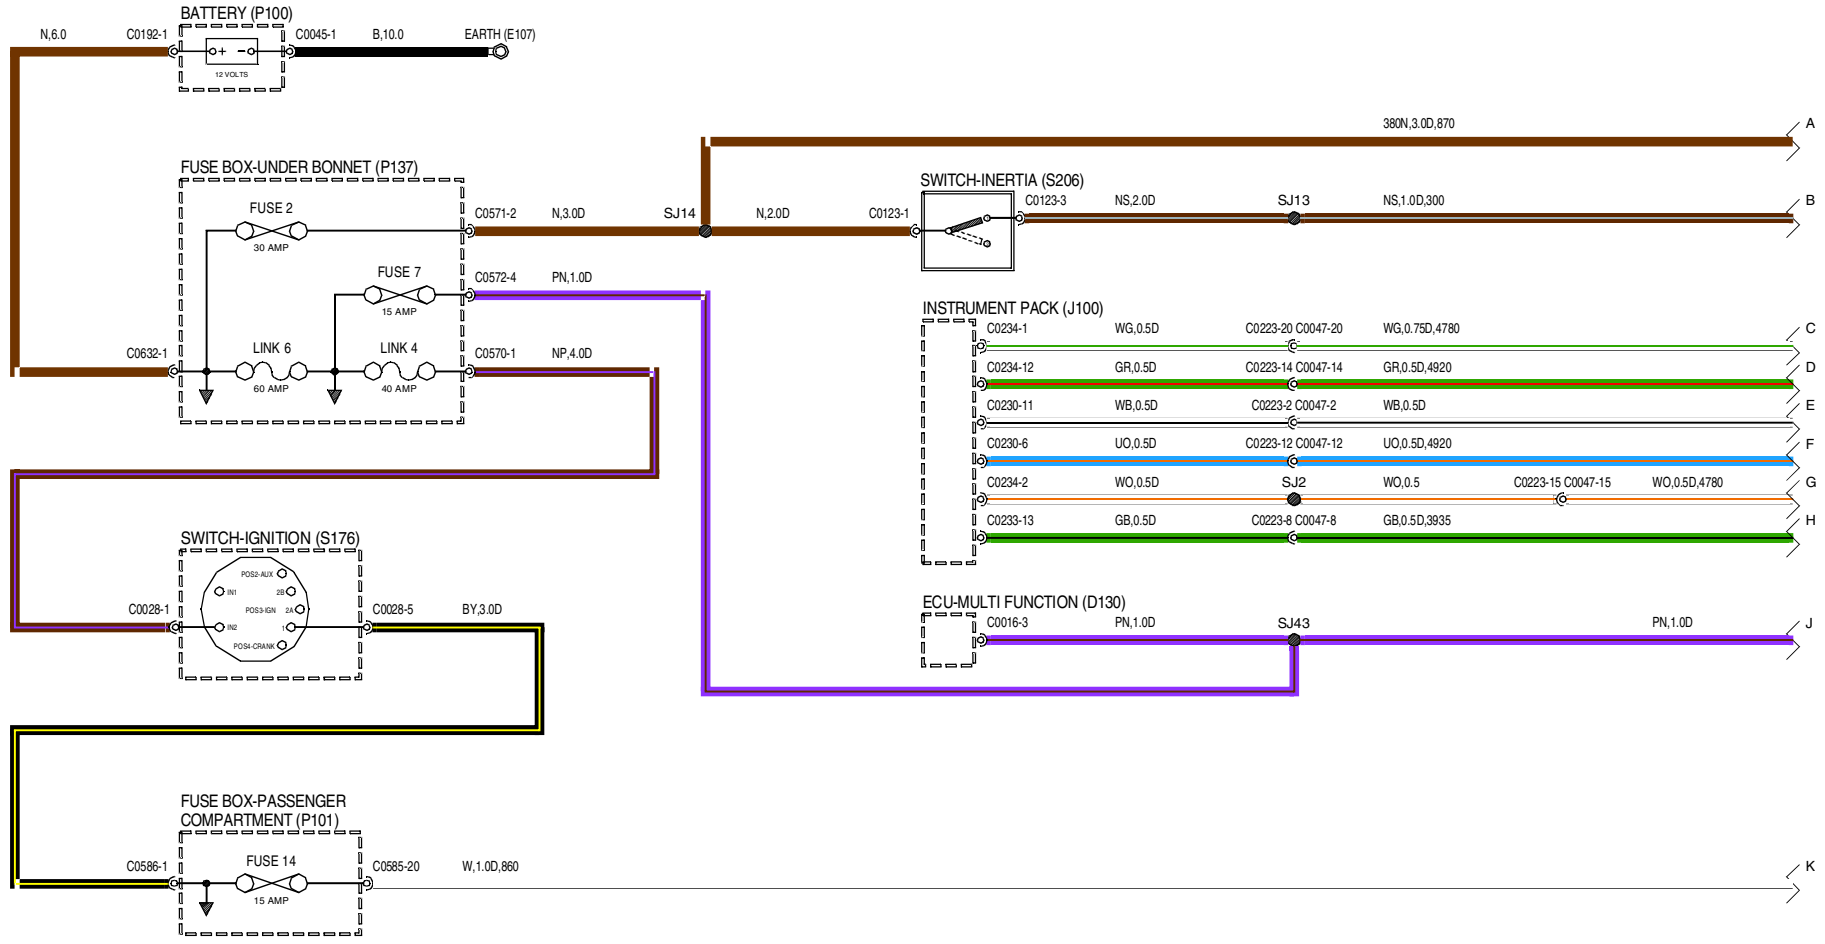


12 ENGINE MANAGEMENT

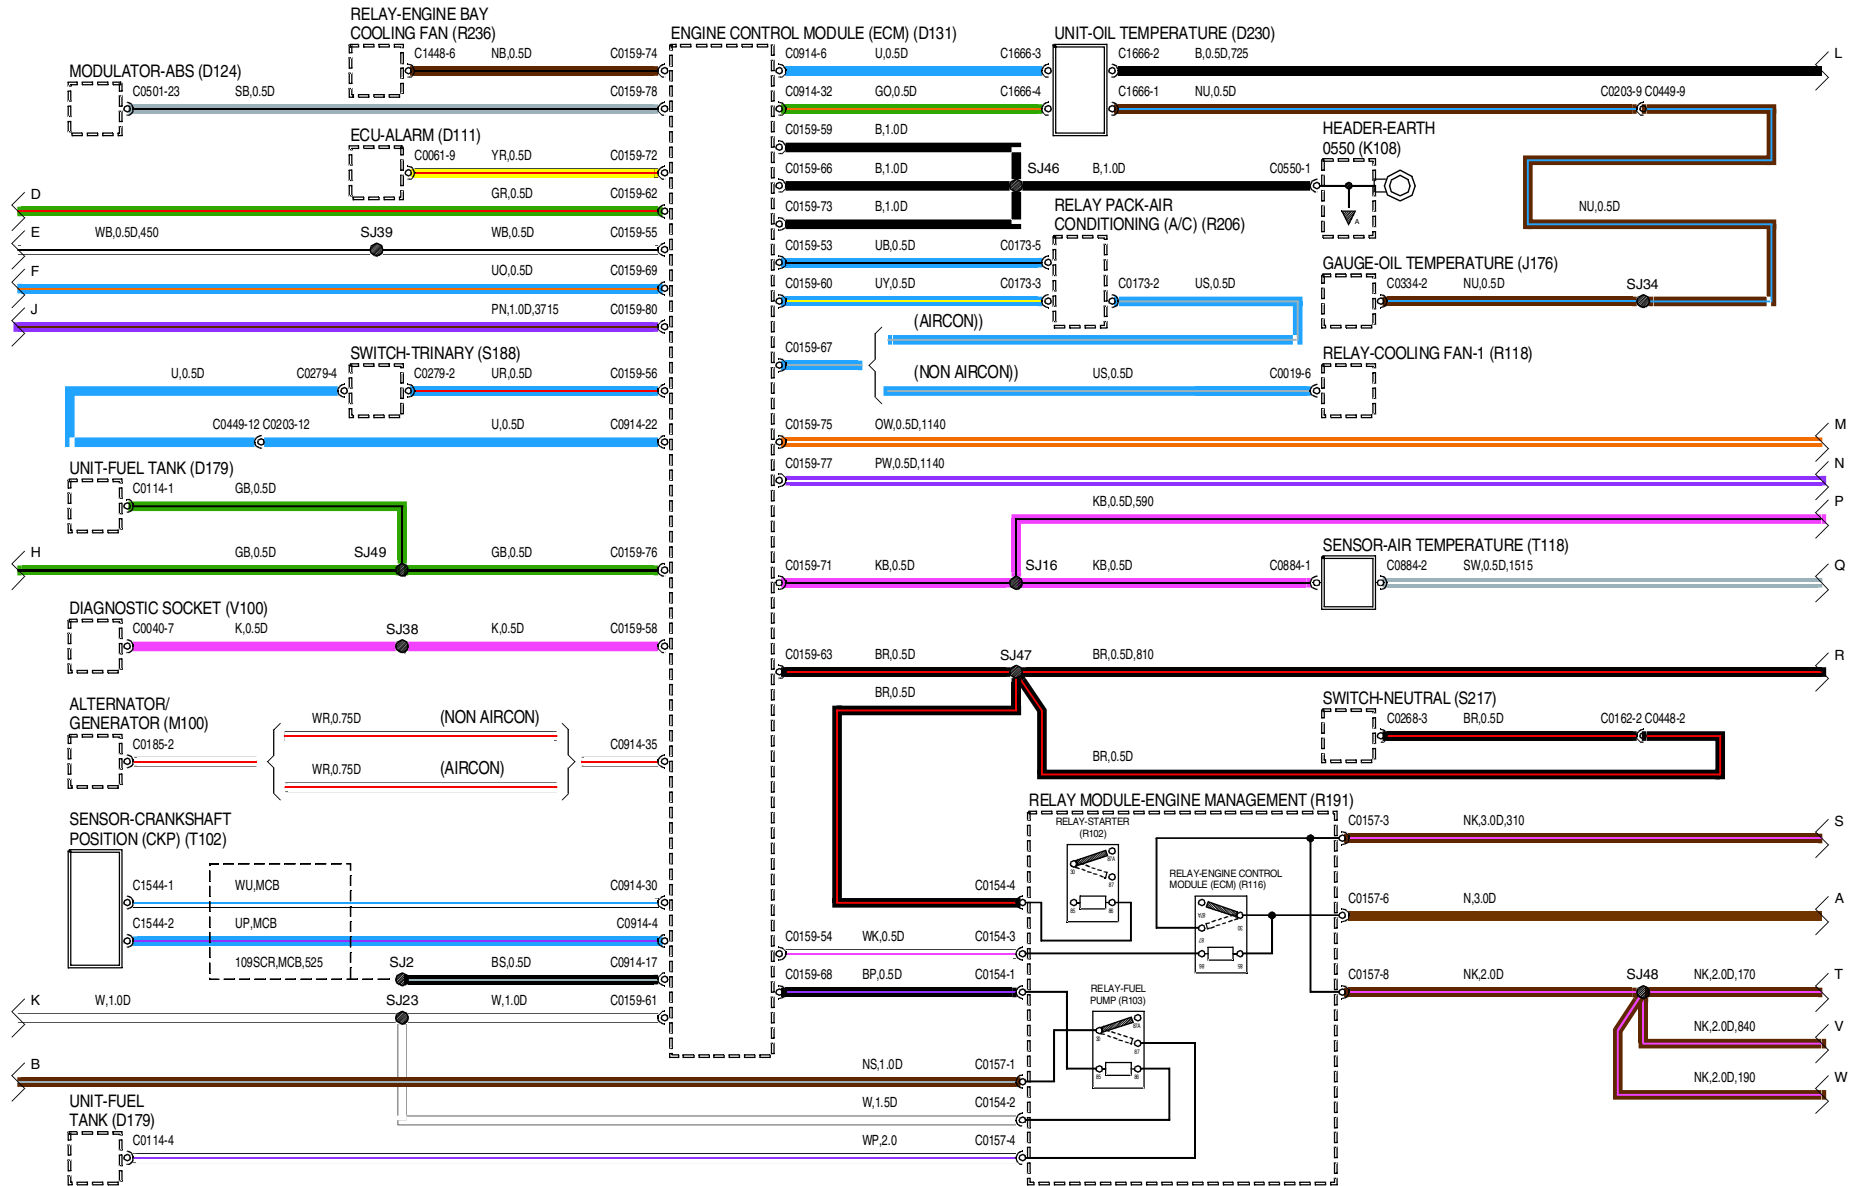


VWR119370-A-02

12 ENGINE MANAGEMENT

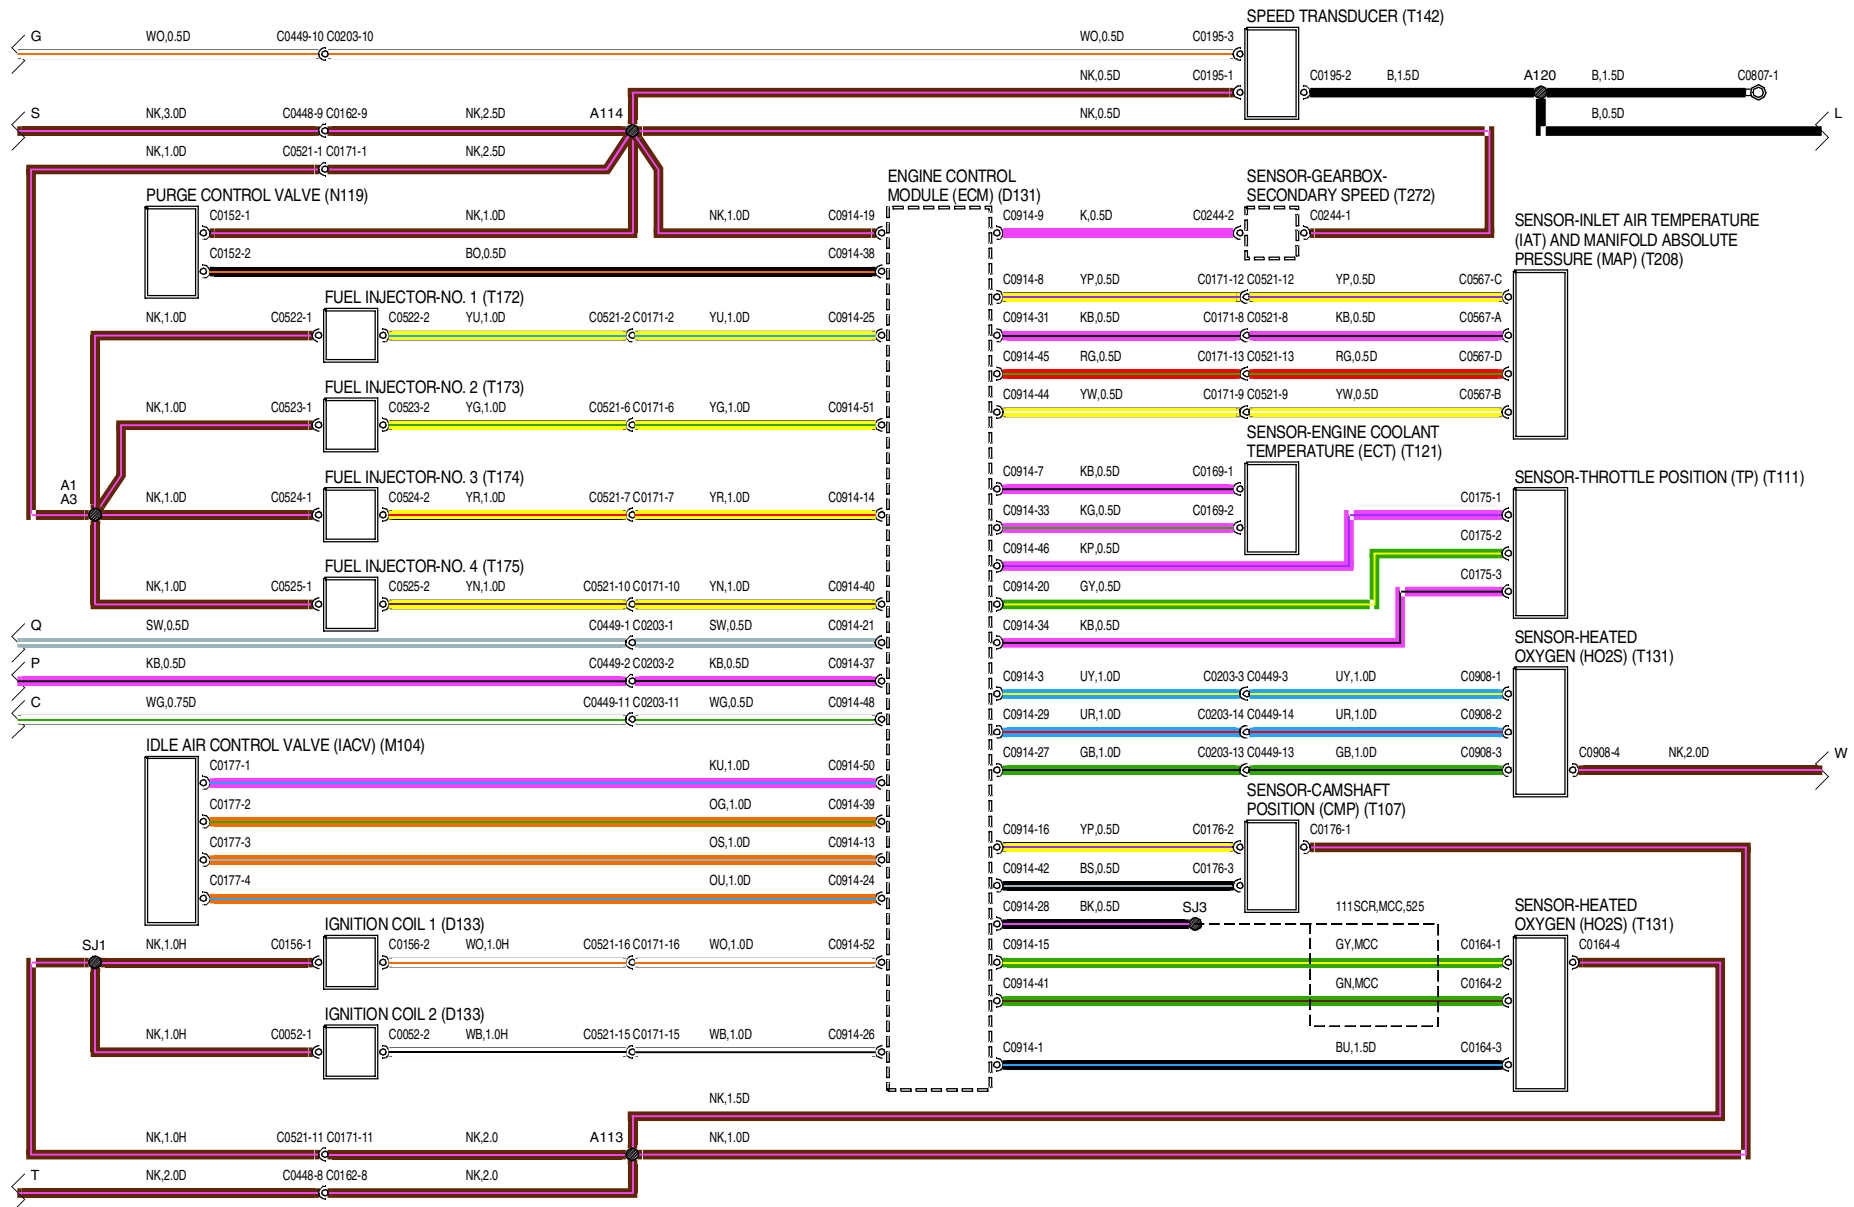


VWR19370-A-03

12 ENGINE MANAGEMENT

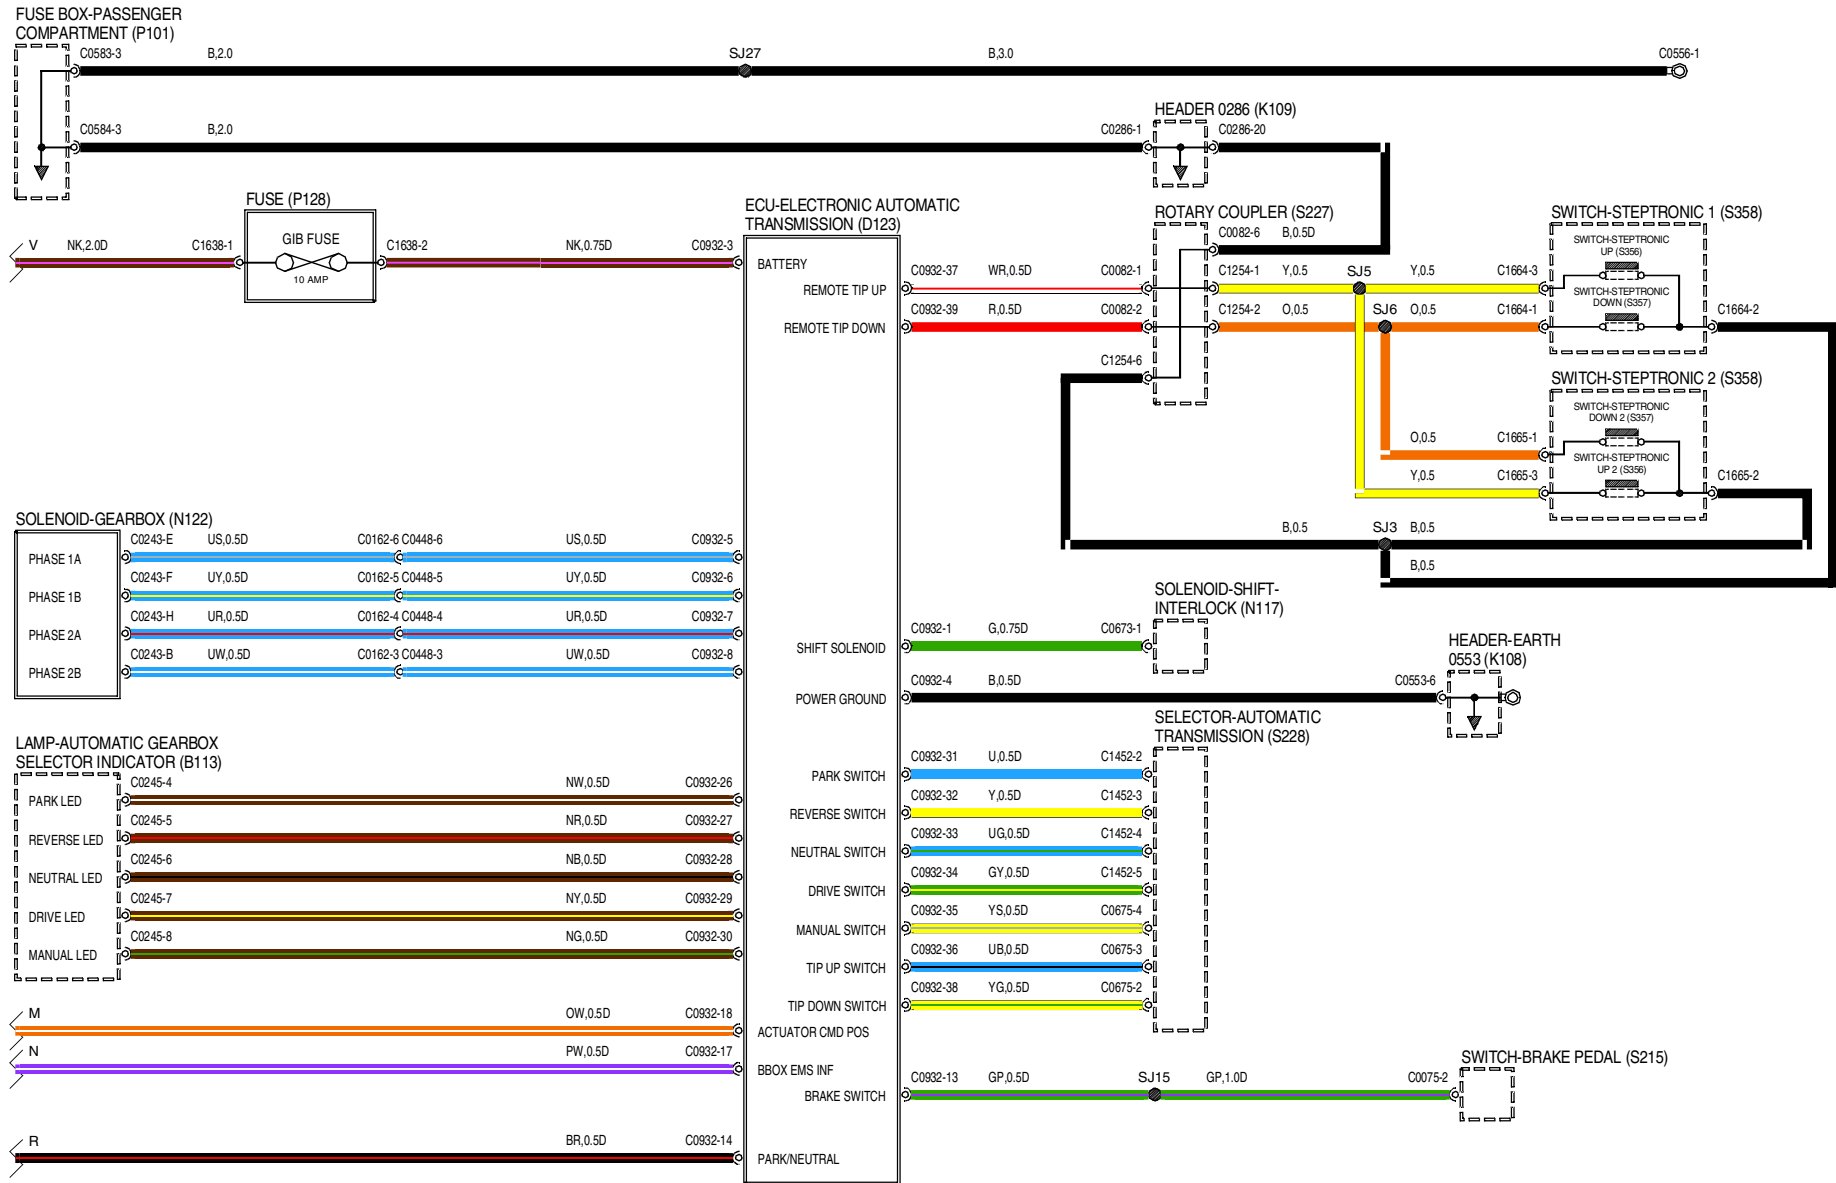


VWR119370-A-04

16 STARTING AND CHARGING

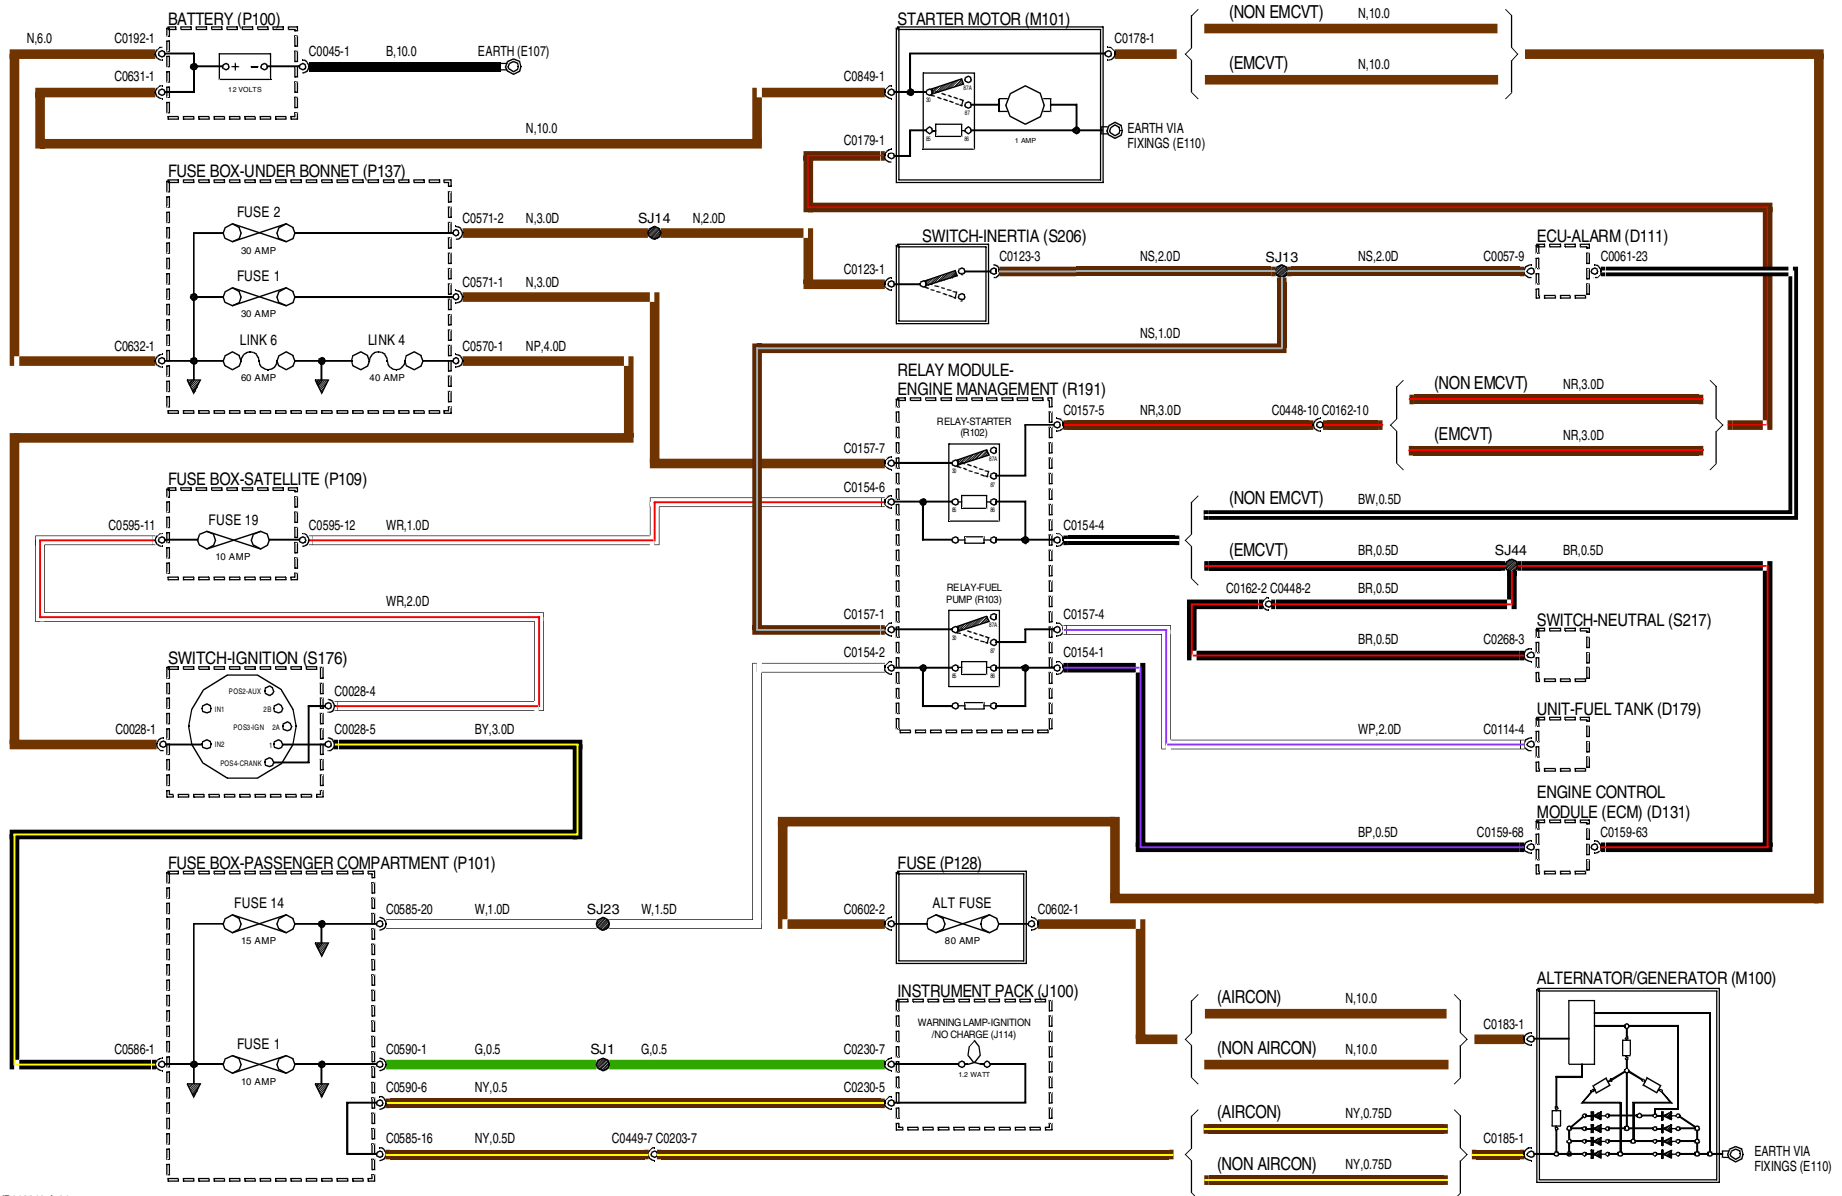


WVR119910-A-01

20 FUEL PUMP

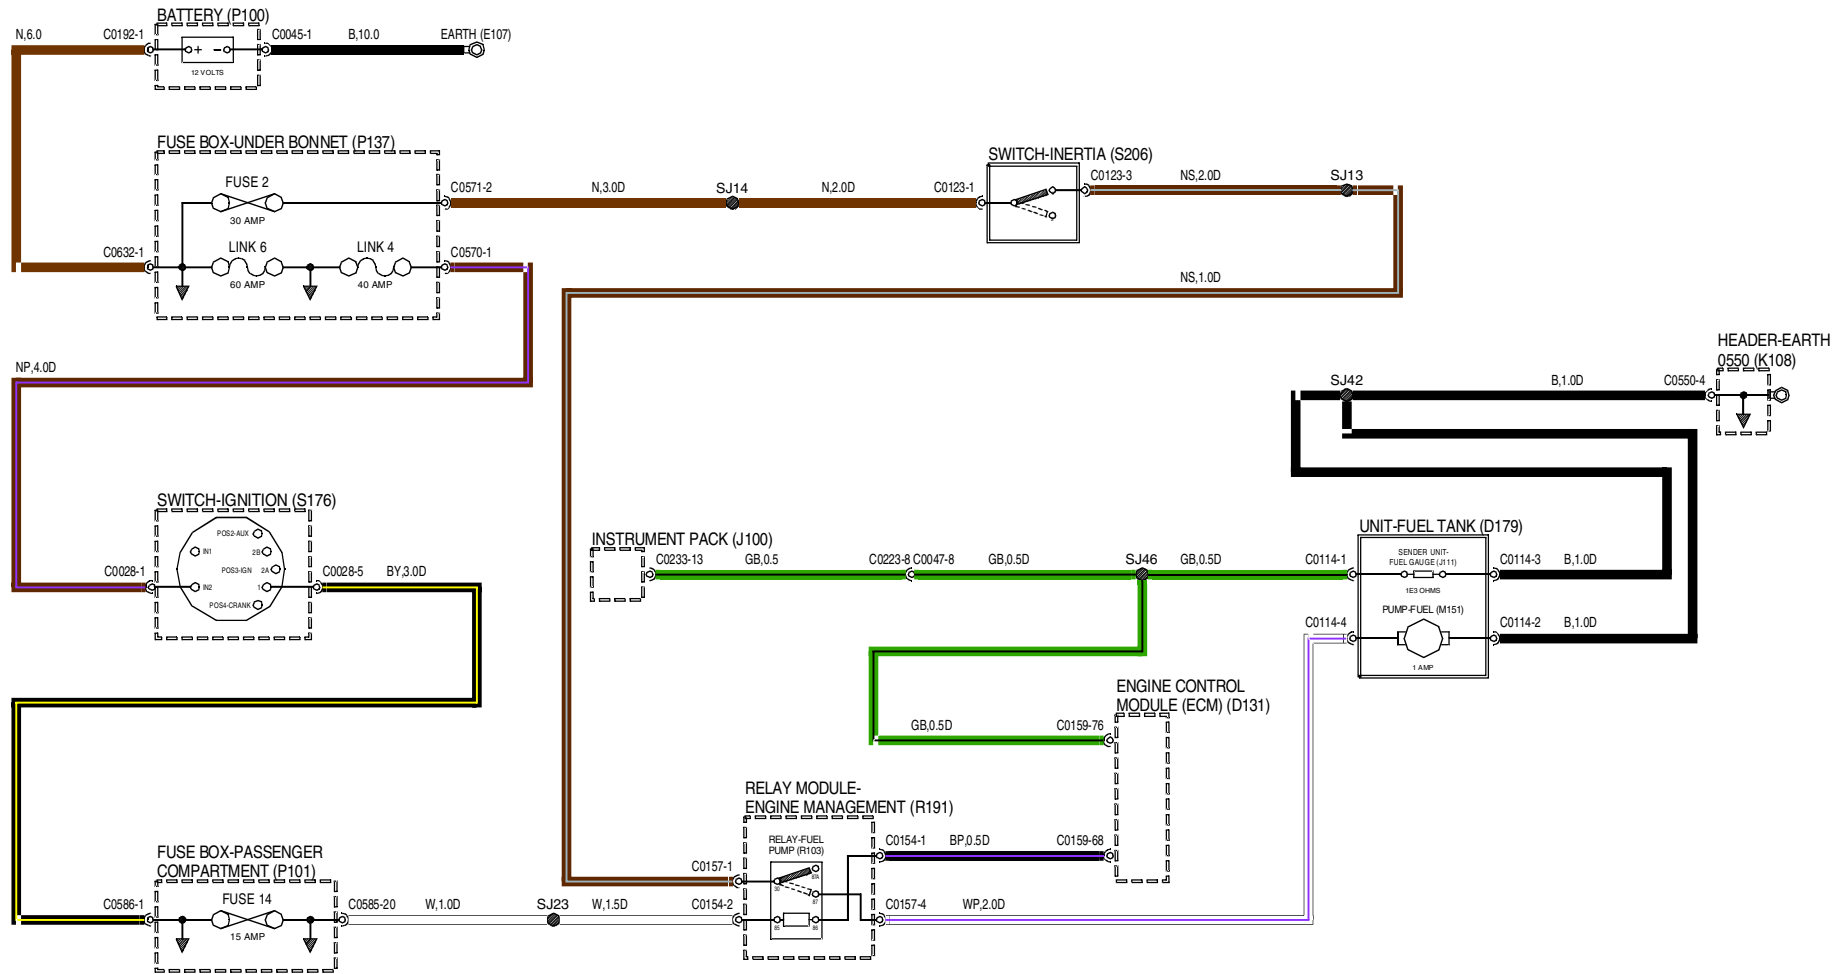


WWR119470-A-01

28 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

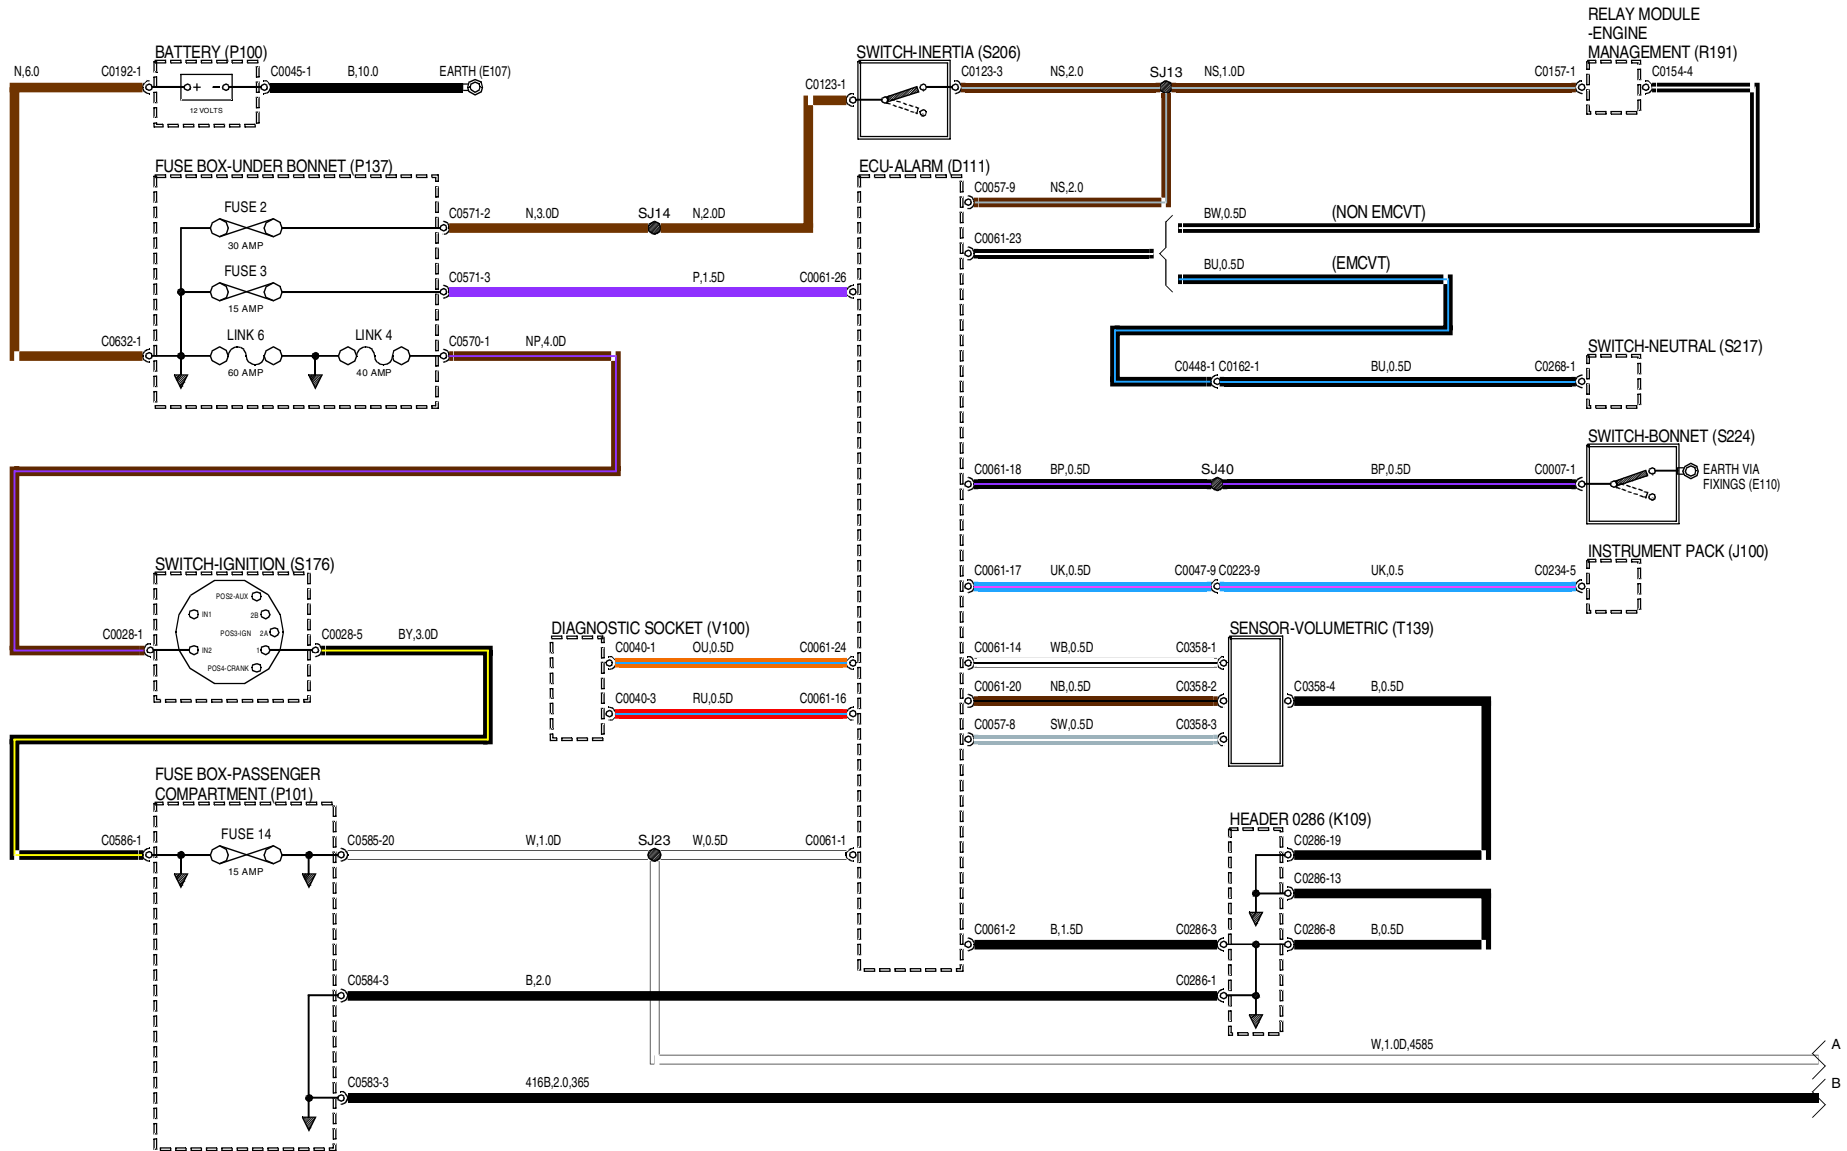


WVR119190-A-01

28 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

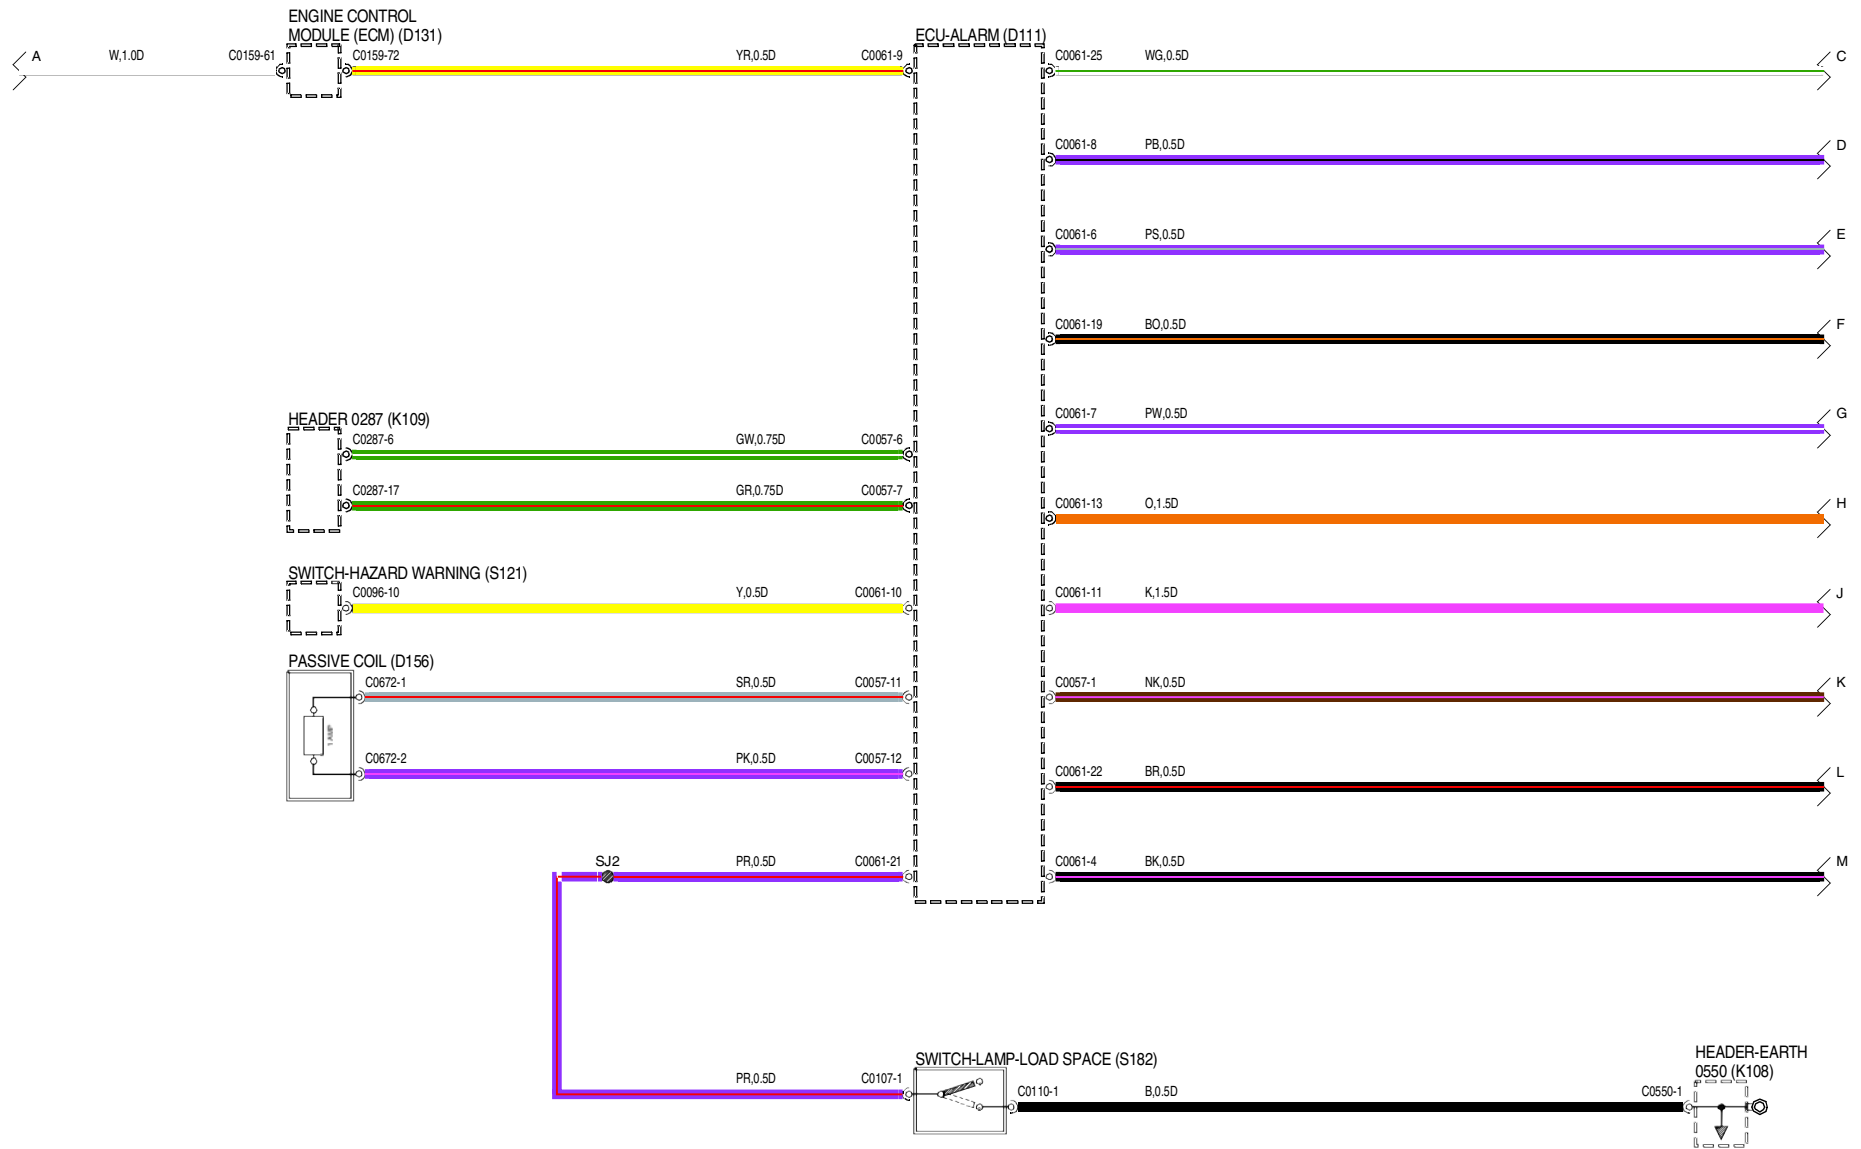


VWR119190-A-02

28 ANTI-THEFT ALARM AND CENTRAL DOOR LOCKING

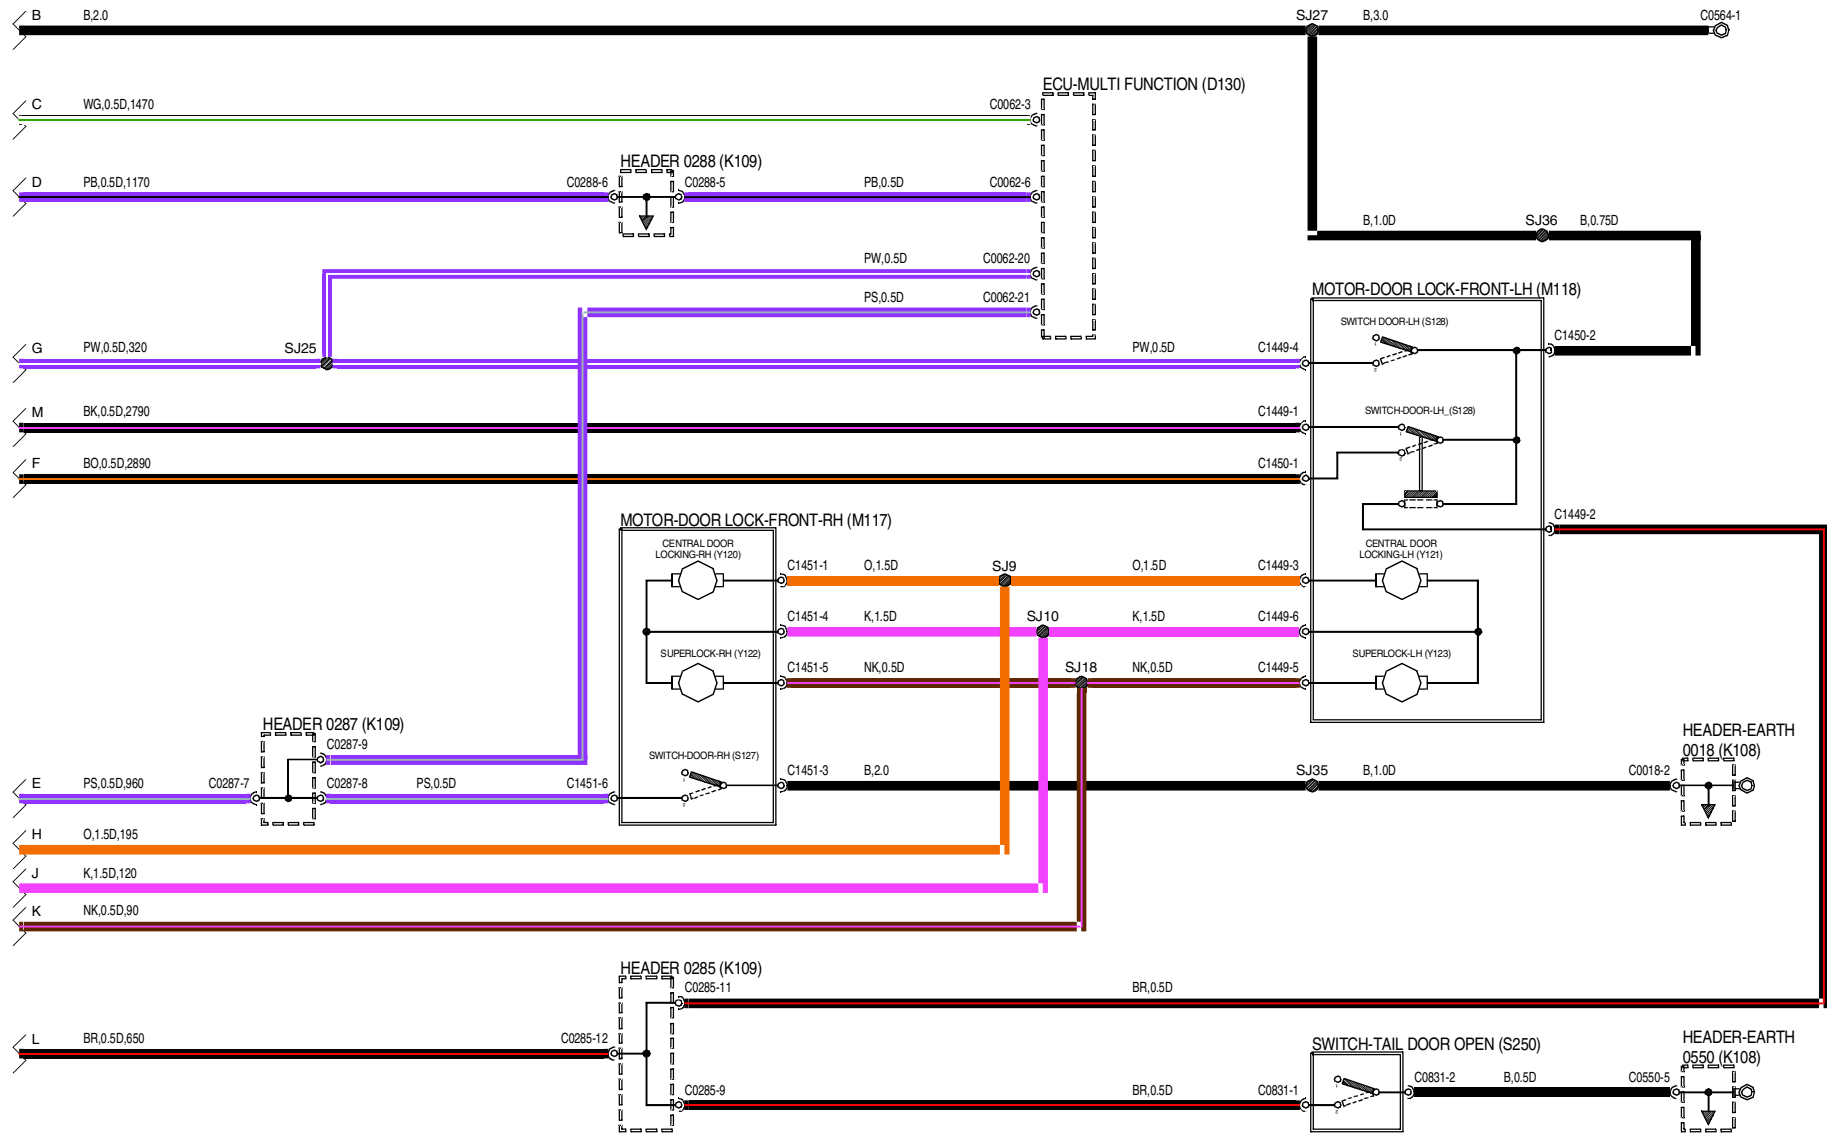


VWR119190-A-03

40 SHIFT INTERLOCK

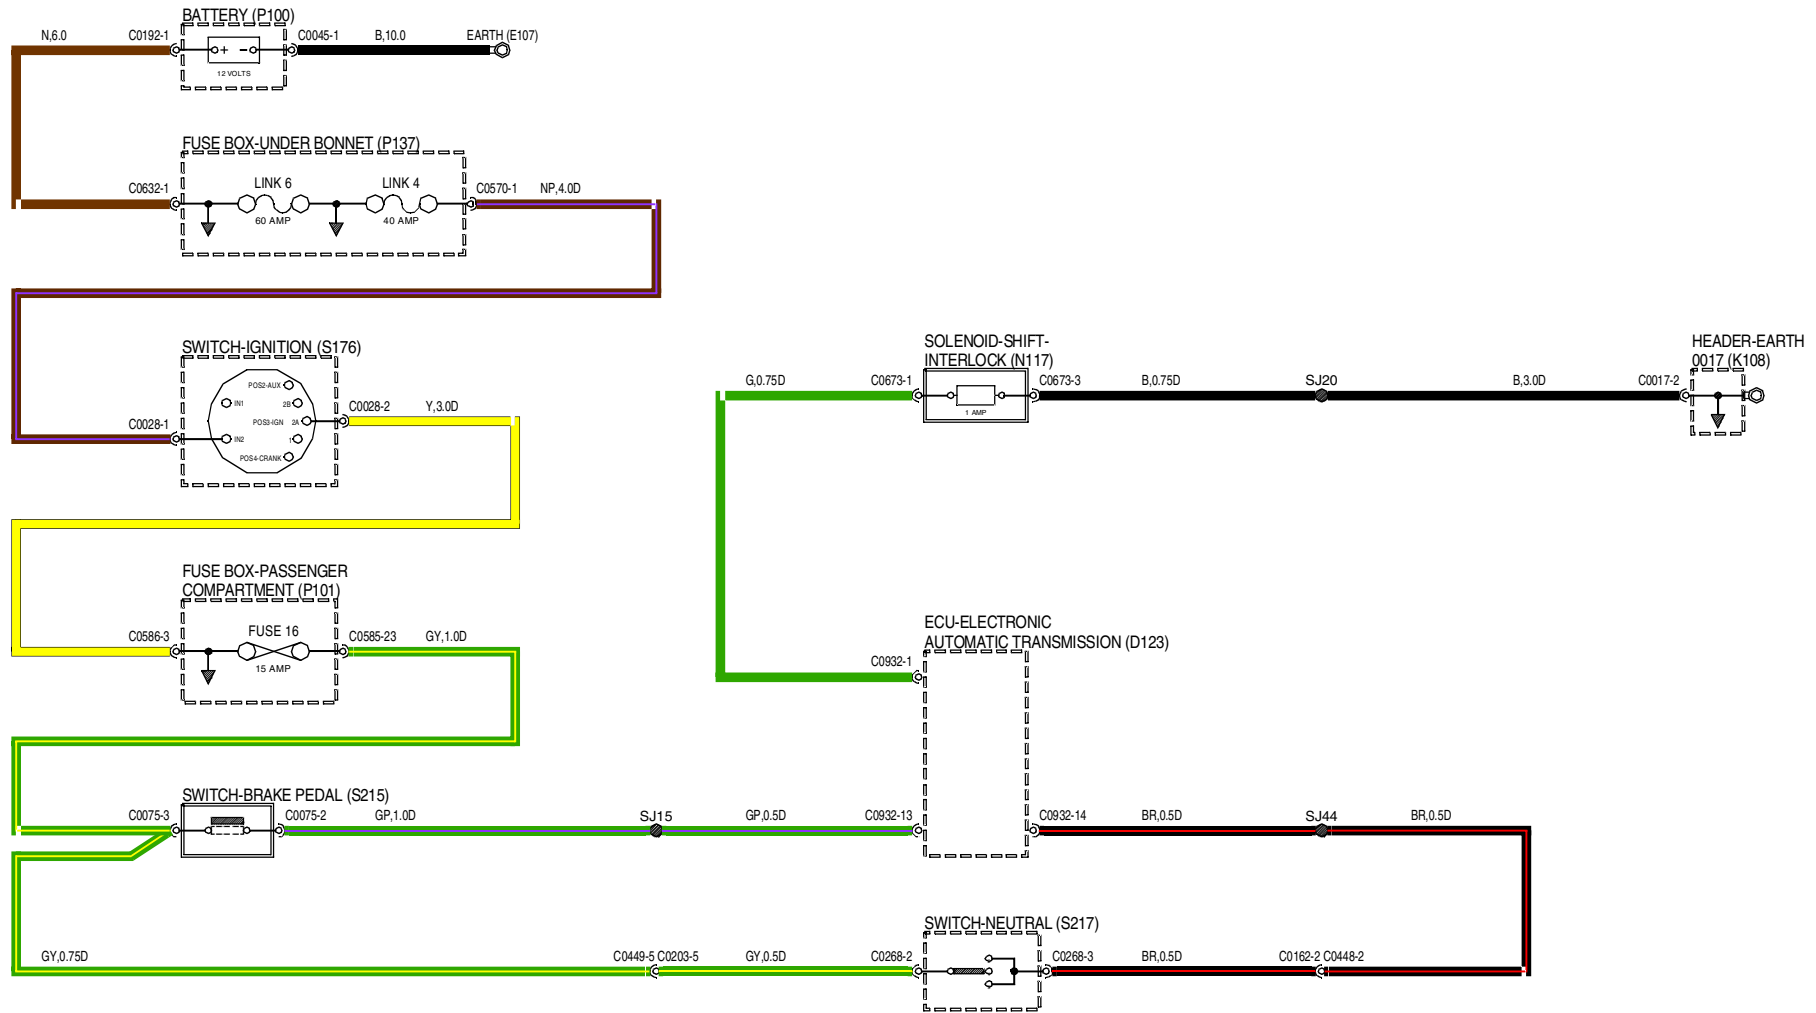


VWR119790-A-01

44 ANTI-LOCK BRAKING SYSTEM

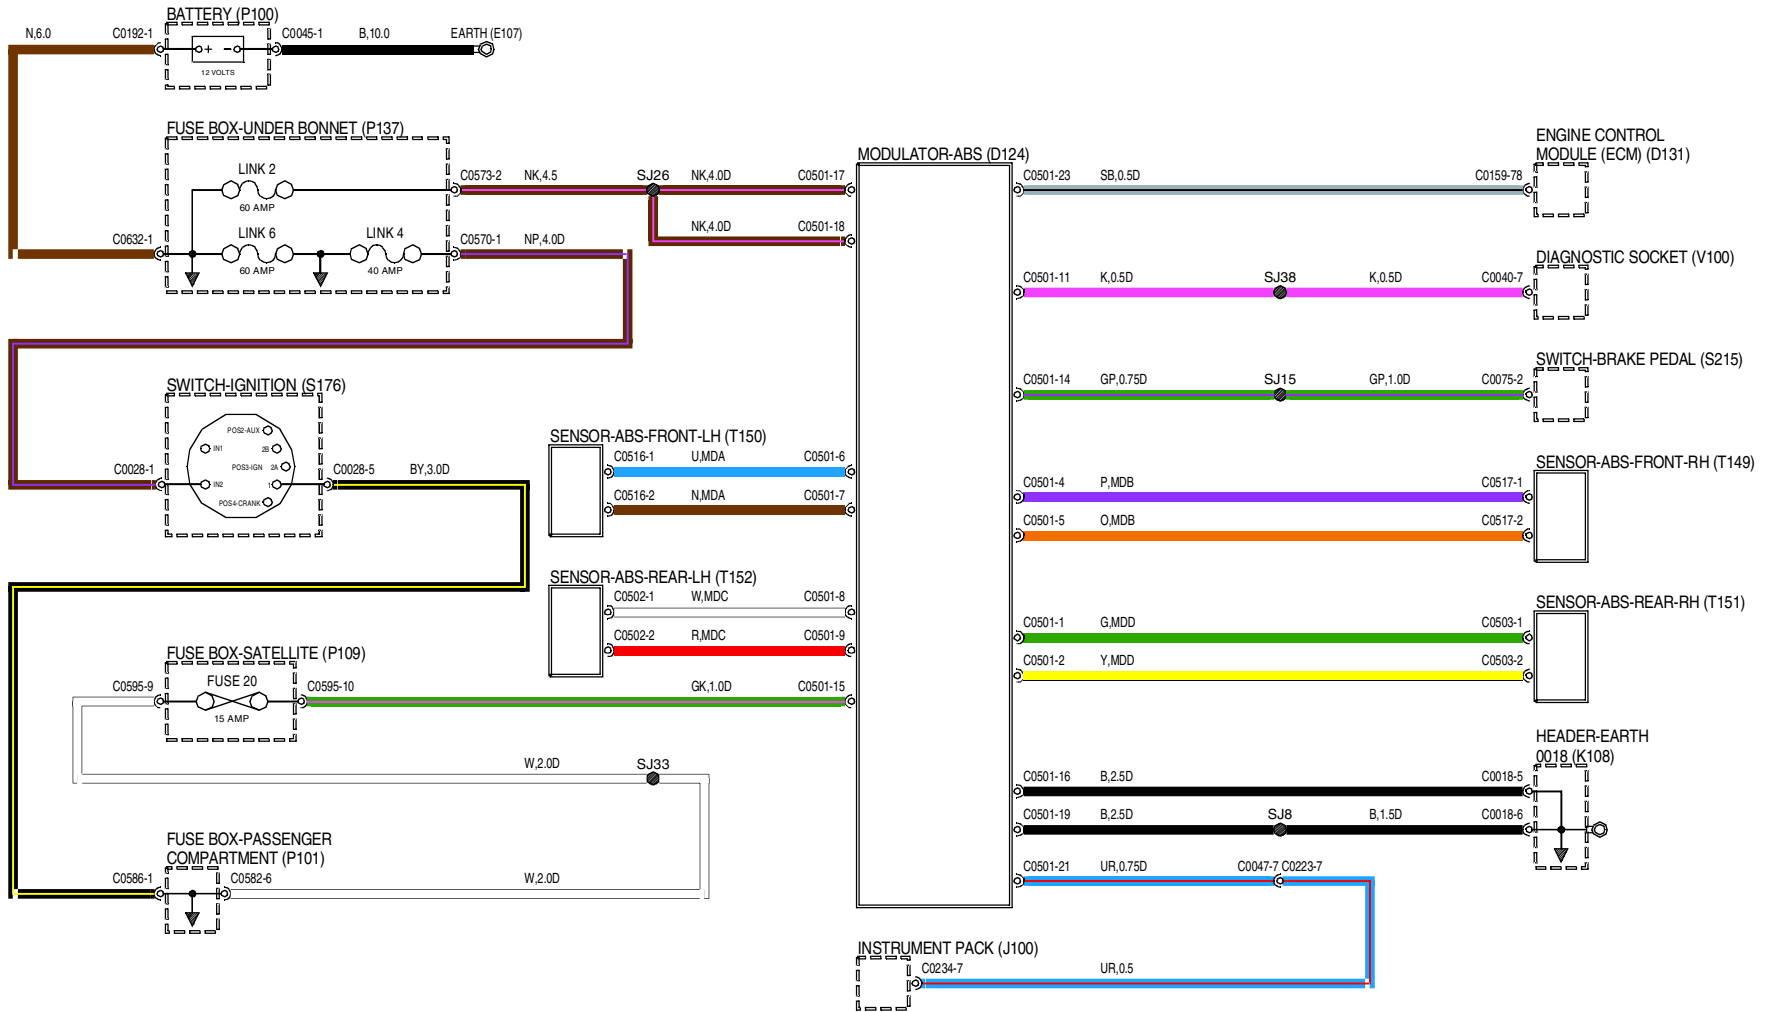



50 ELECTRONIC POWER ASSISTED STEERING

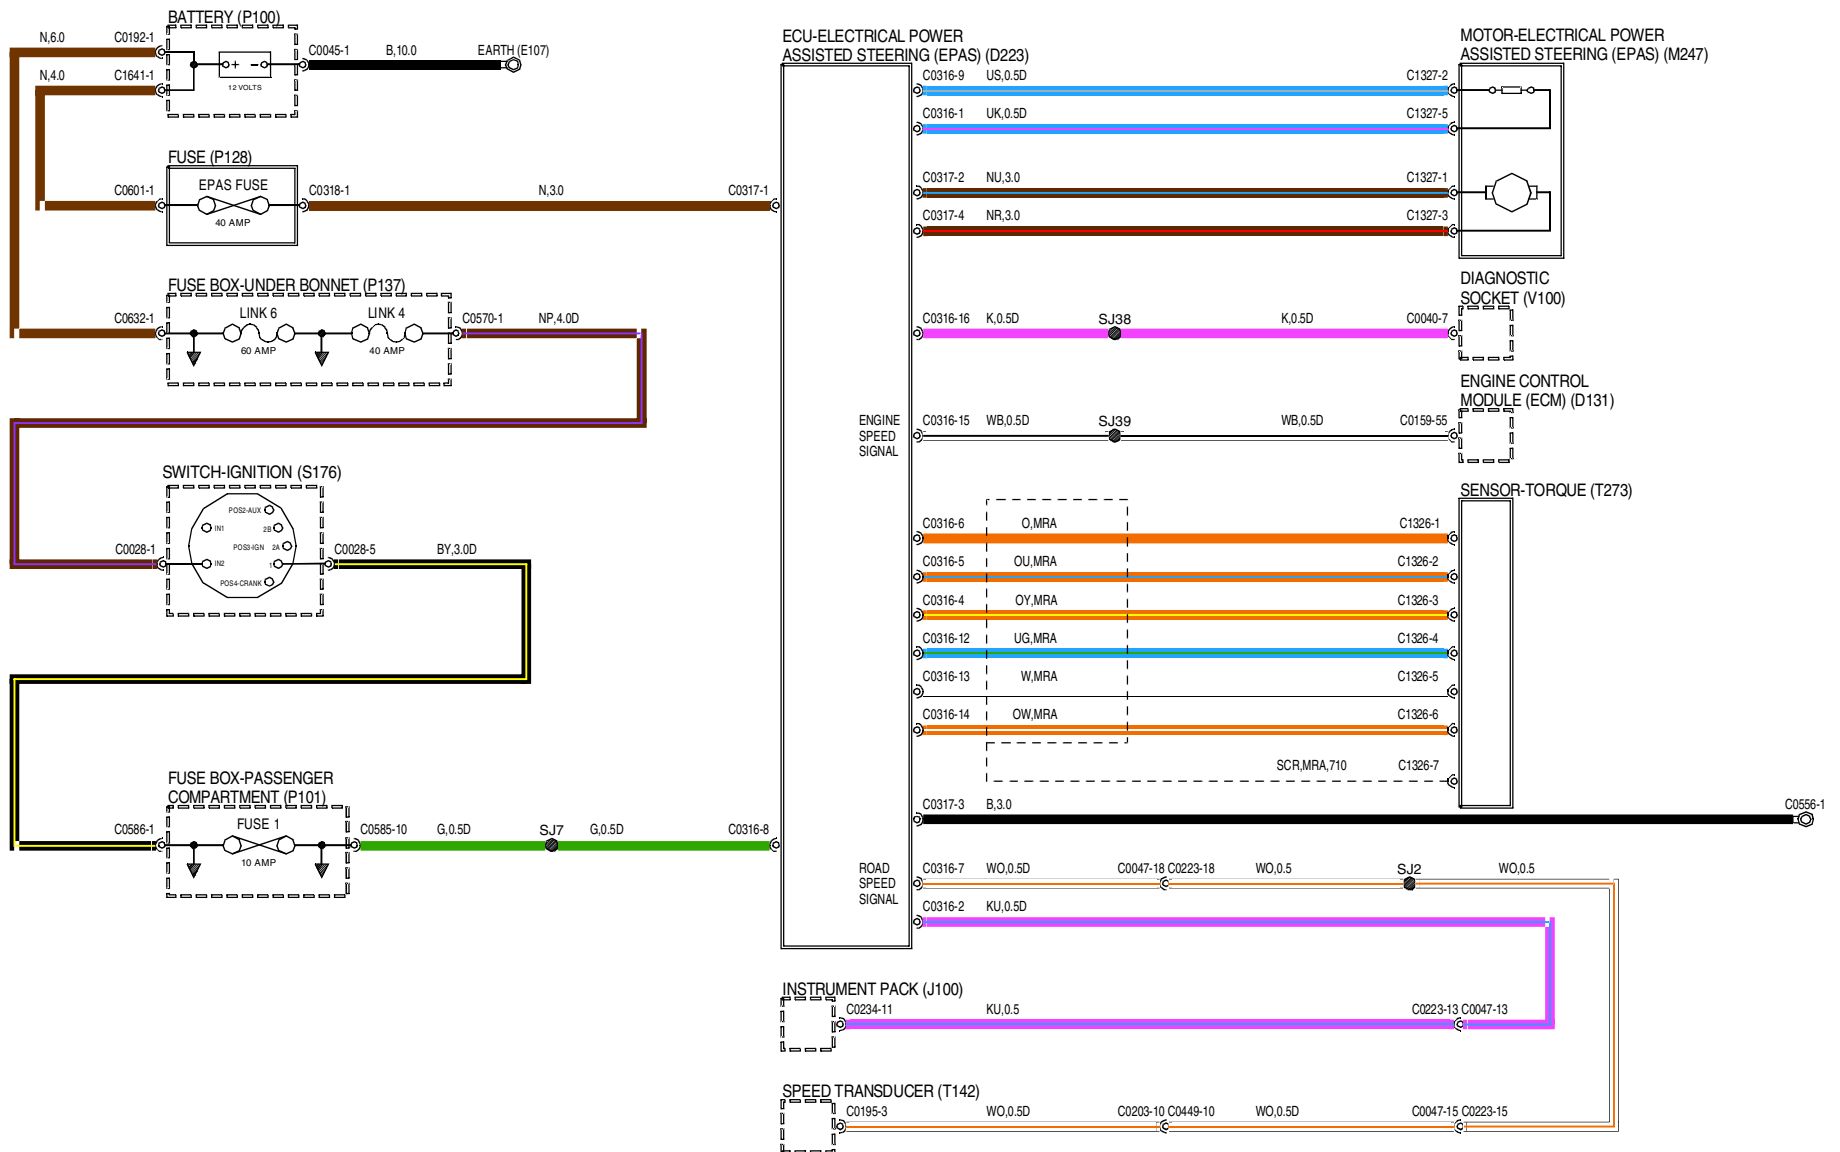

WWR119430-A-01


64 SUPPLEMENTARY RESTRAINT SYSTEM

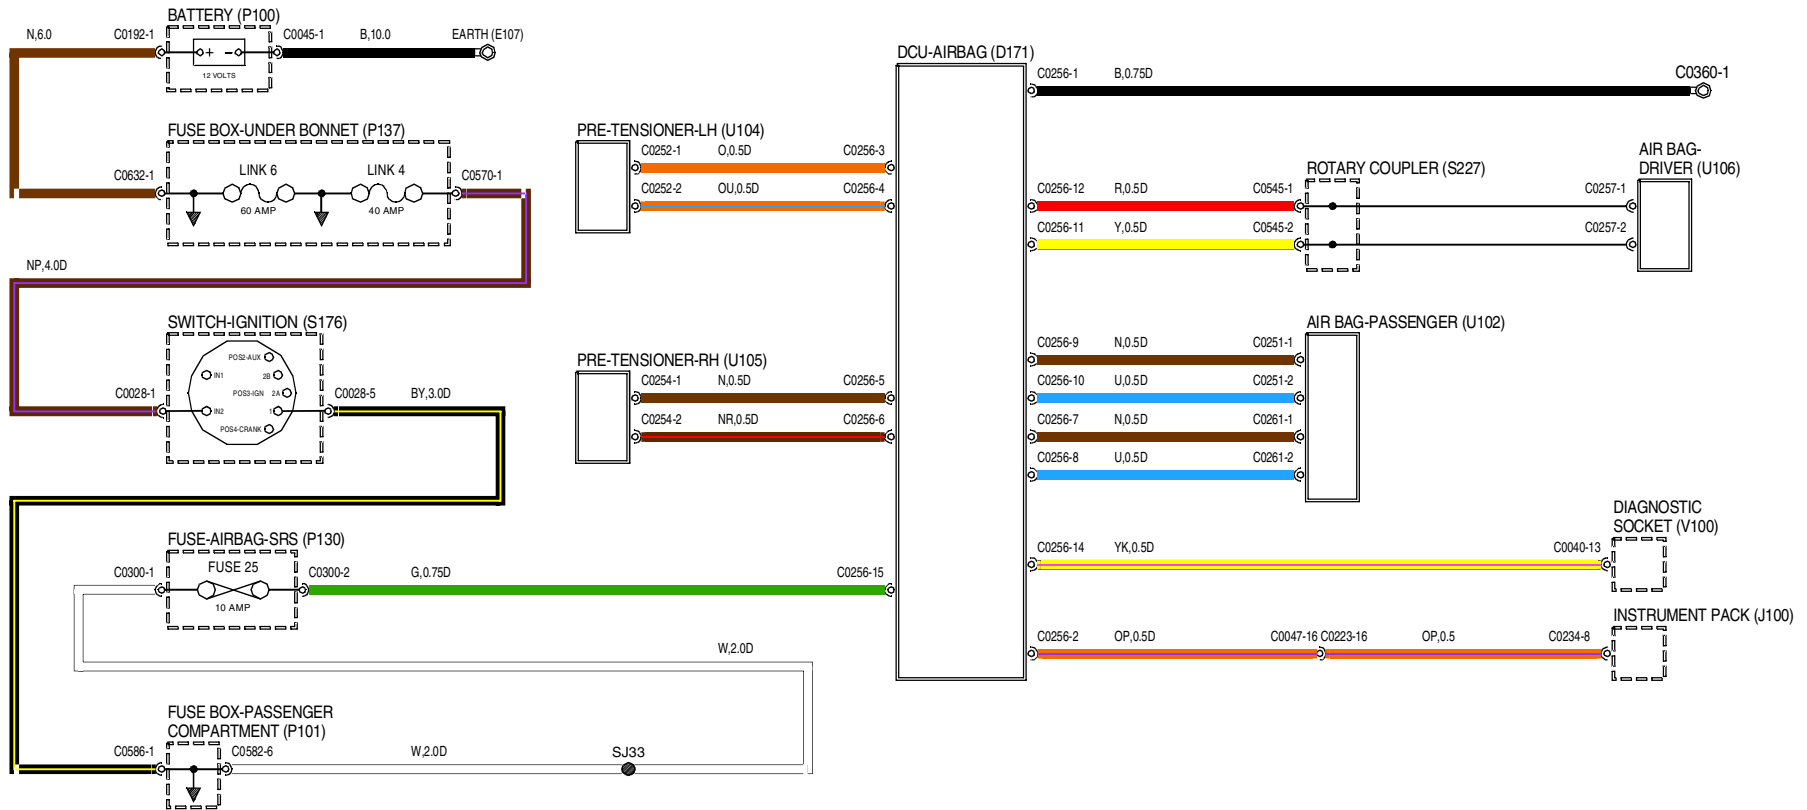

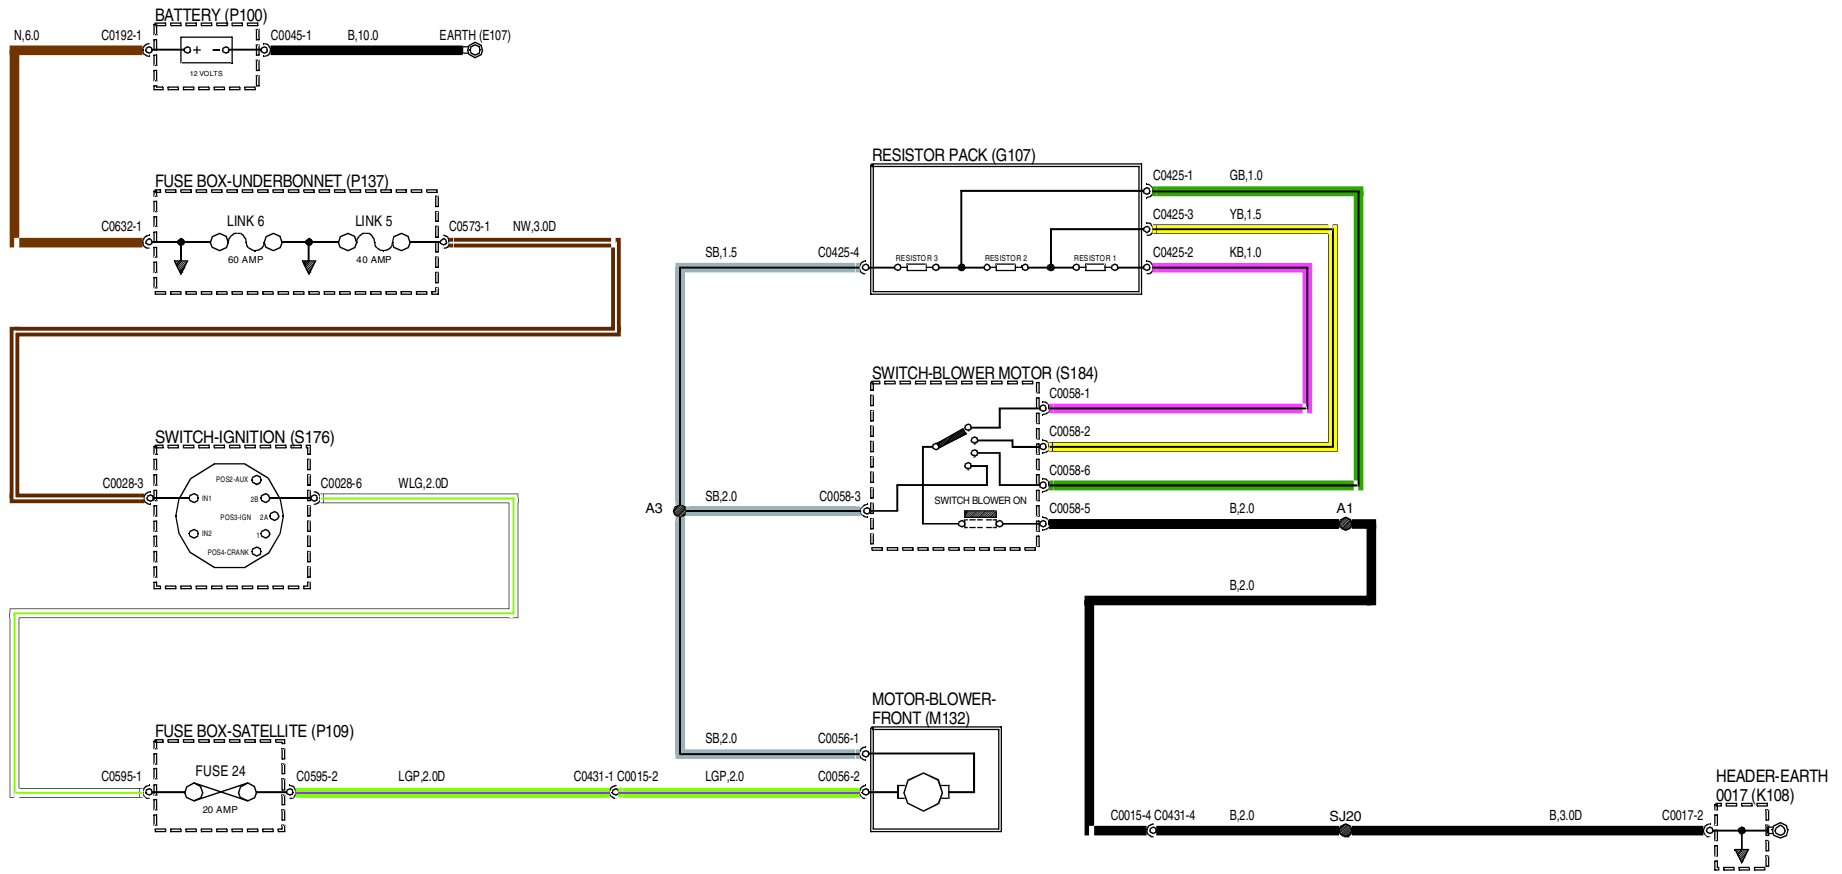


WVR119550-A-01

84 AIR CONDITIONING

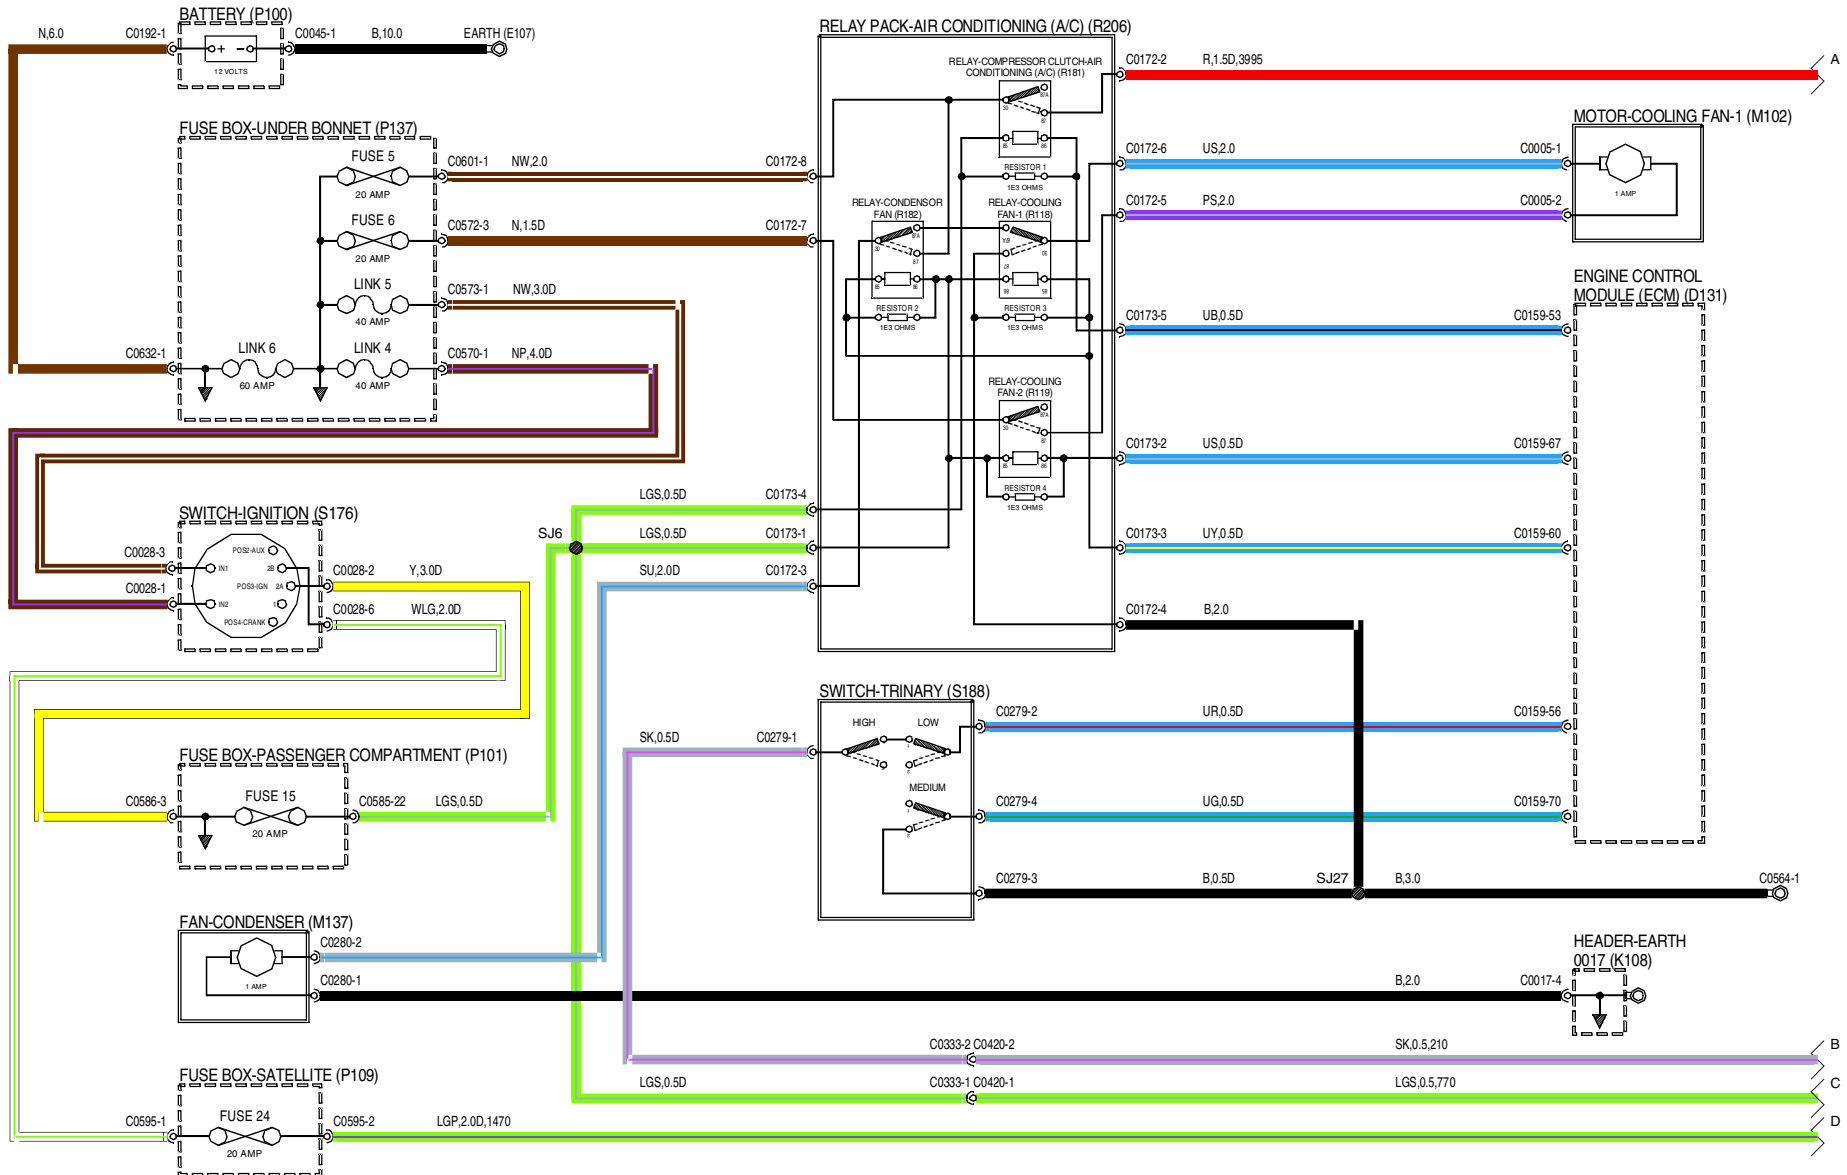


WVR119170-A-01

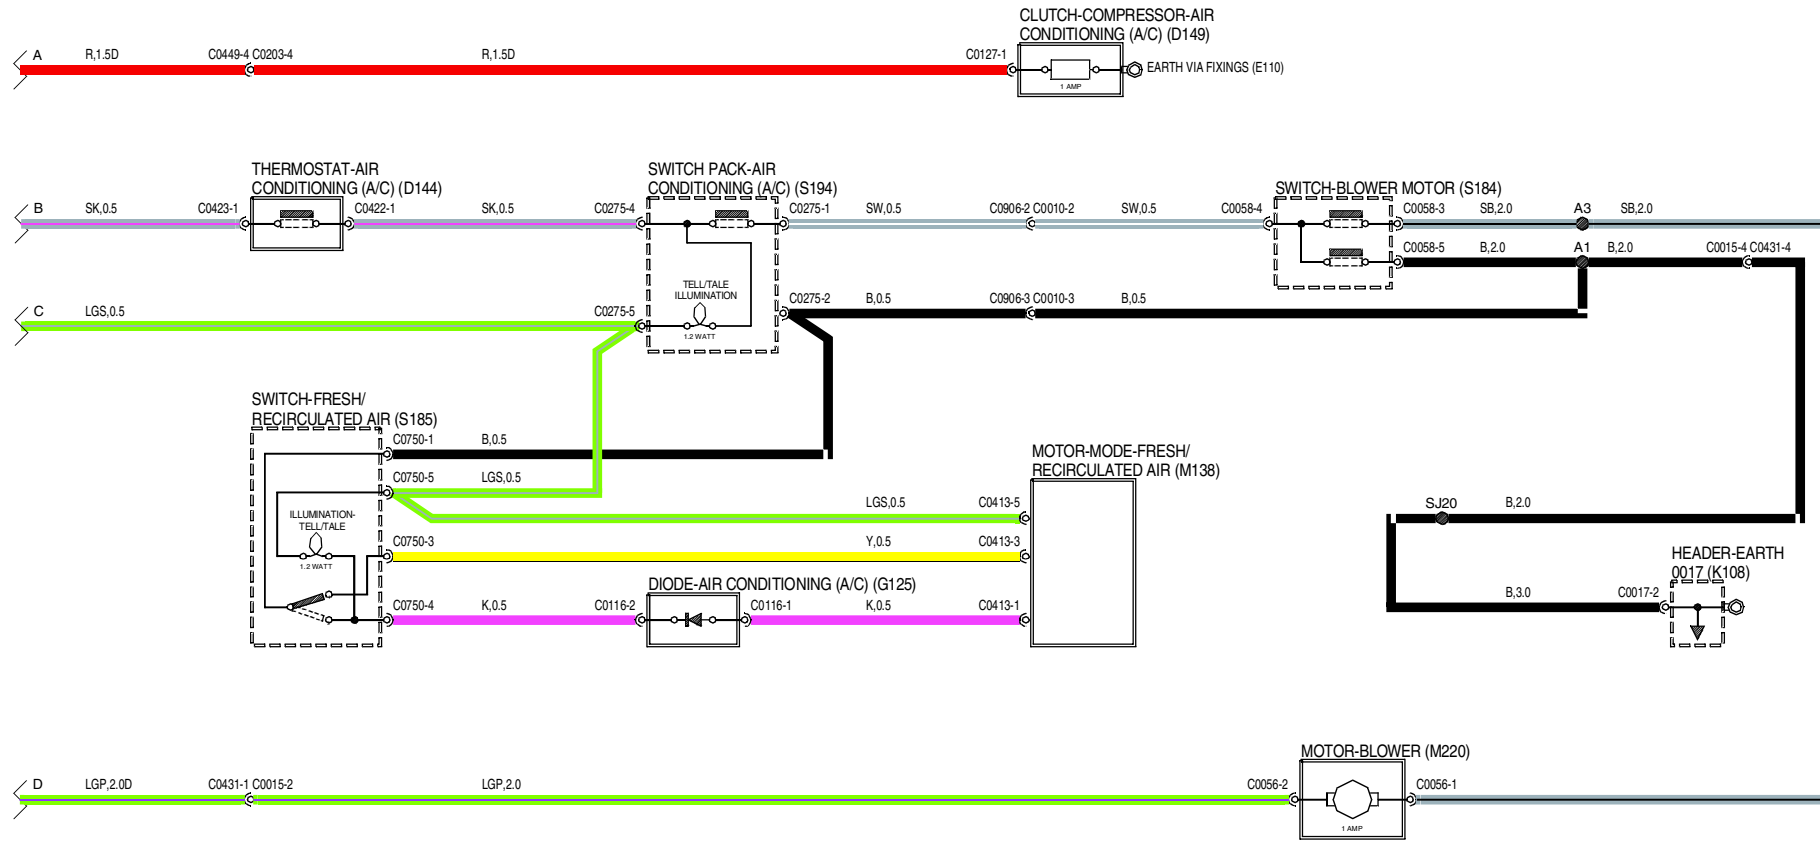


VWR119170-A-02

88 COOLING FANS

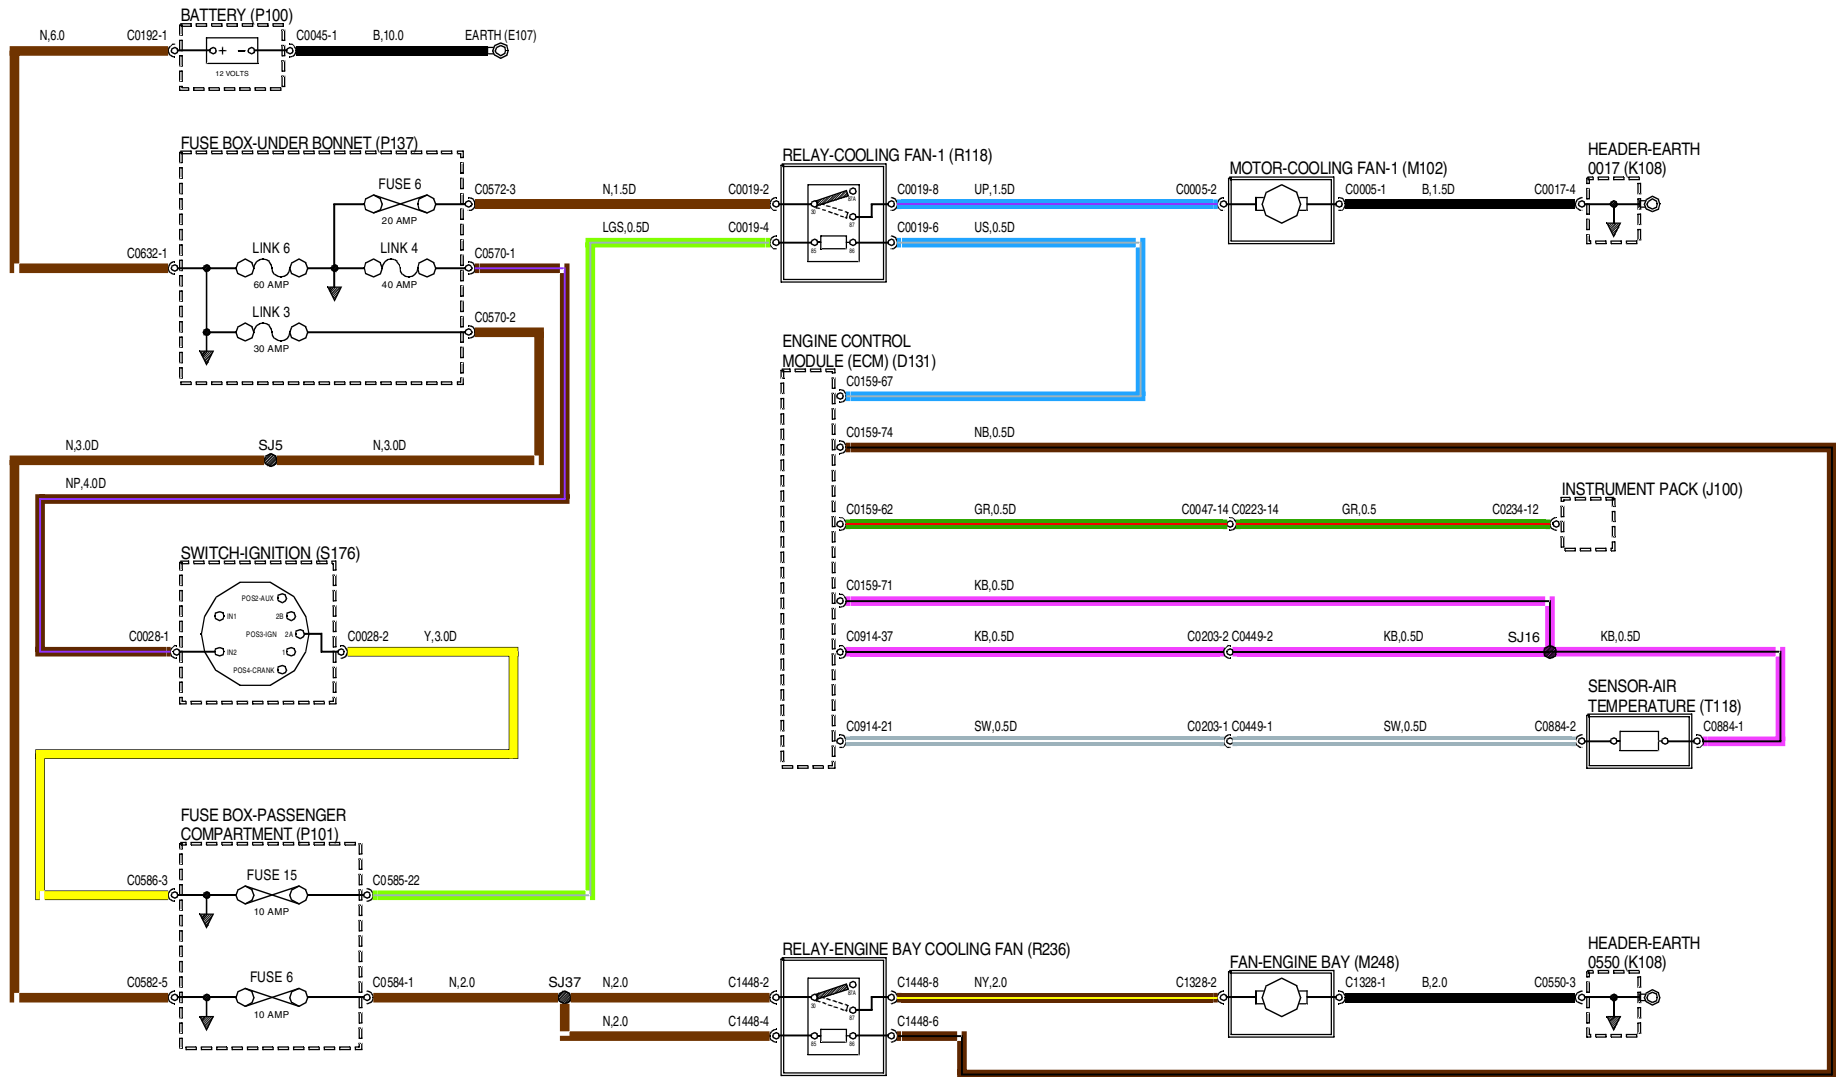


WVR119230-A-01

92 HEATED WINDOW

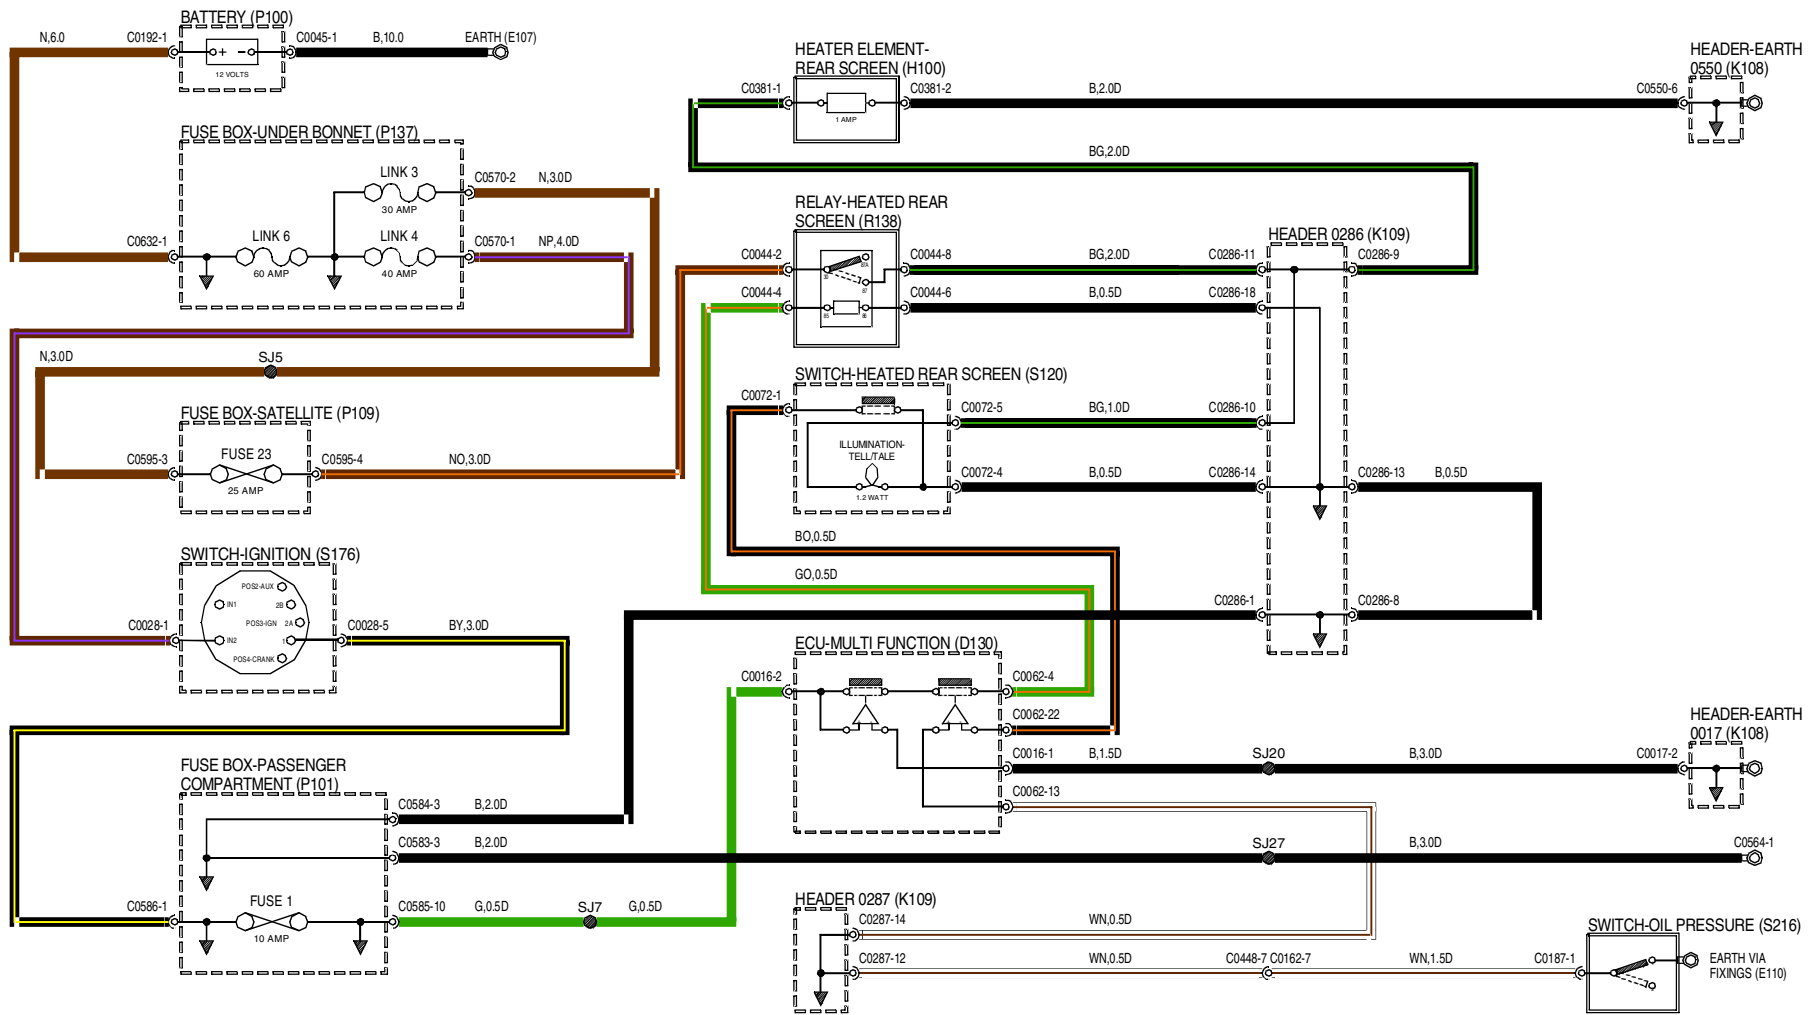


WVR119530-A-01


104 WIPERS AND WASHERS

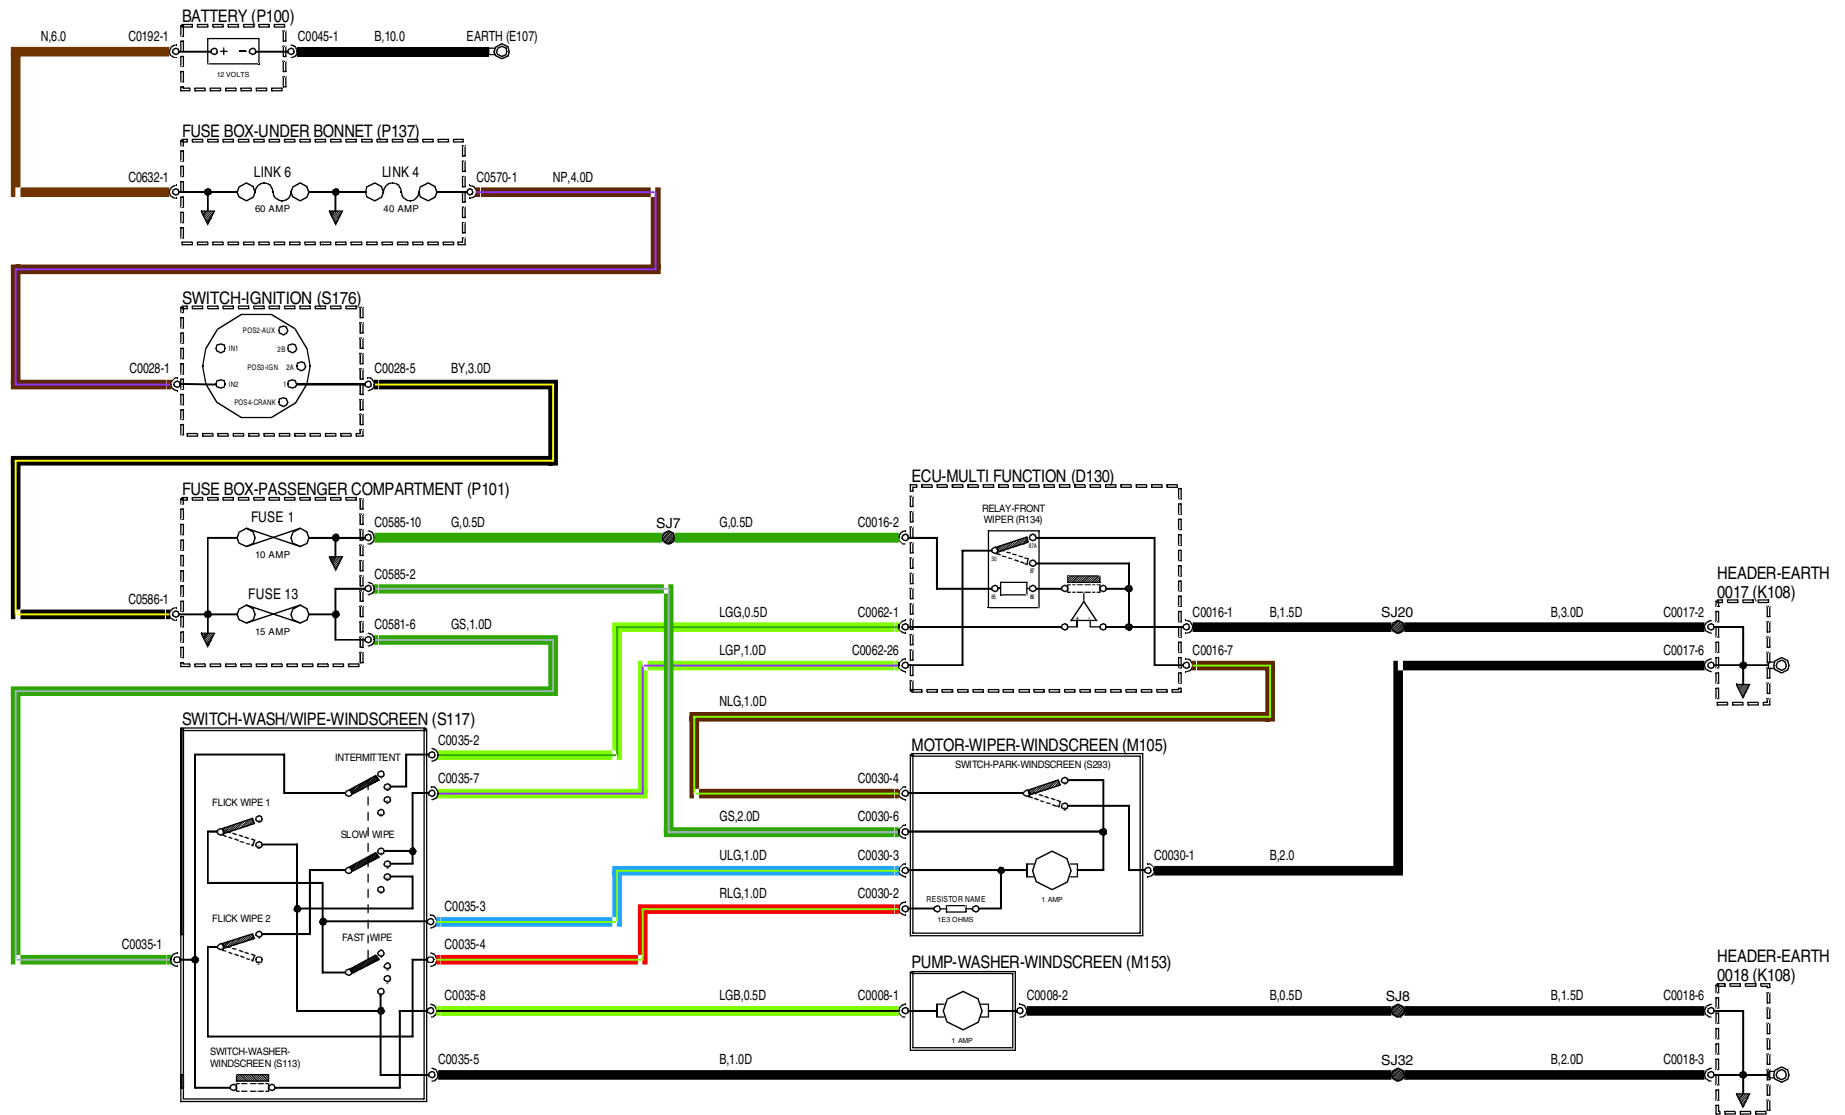

WVR119870-A-01

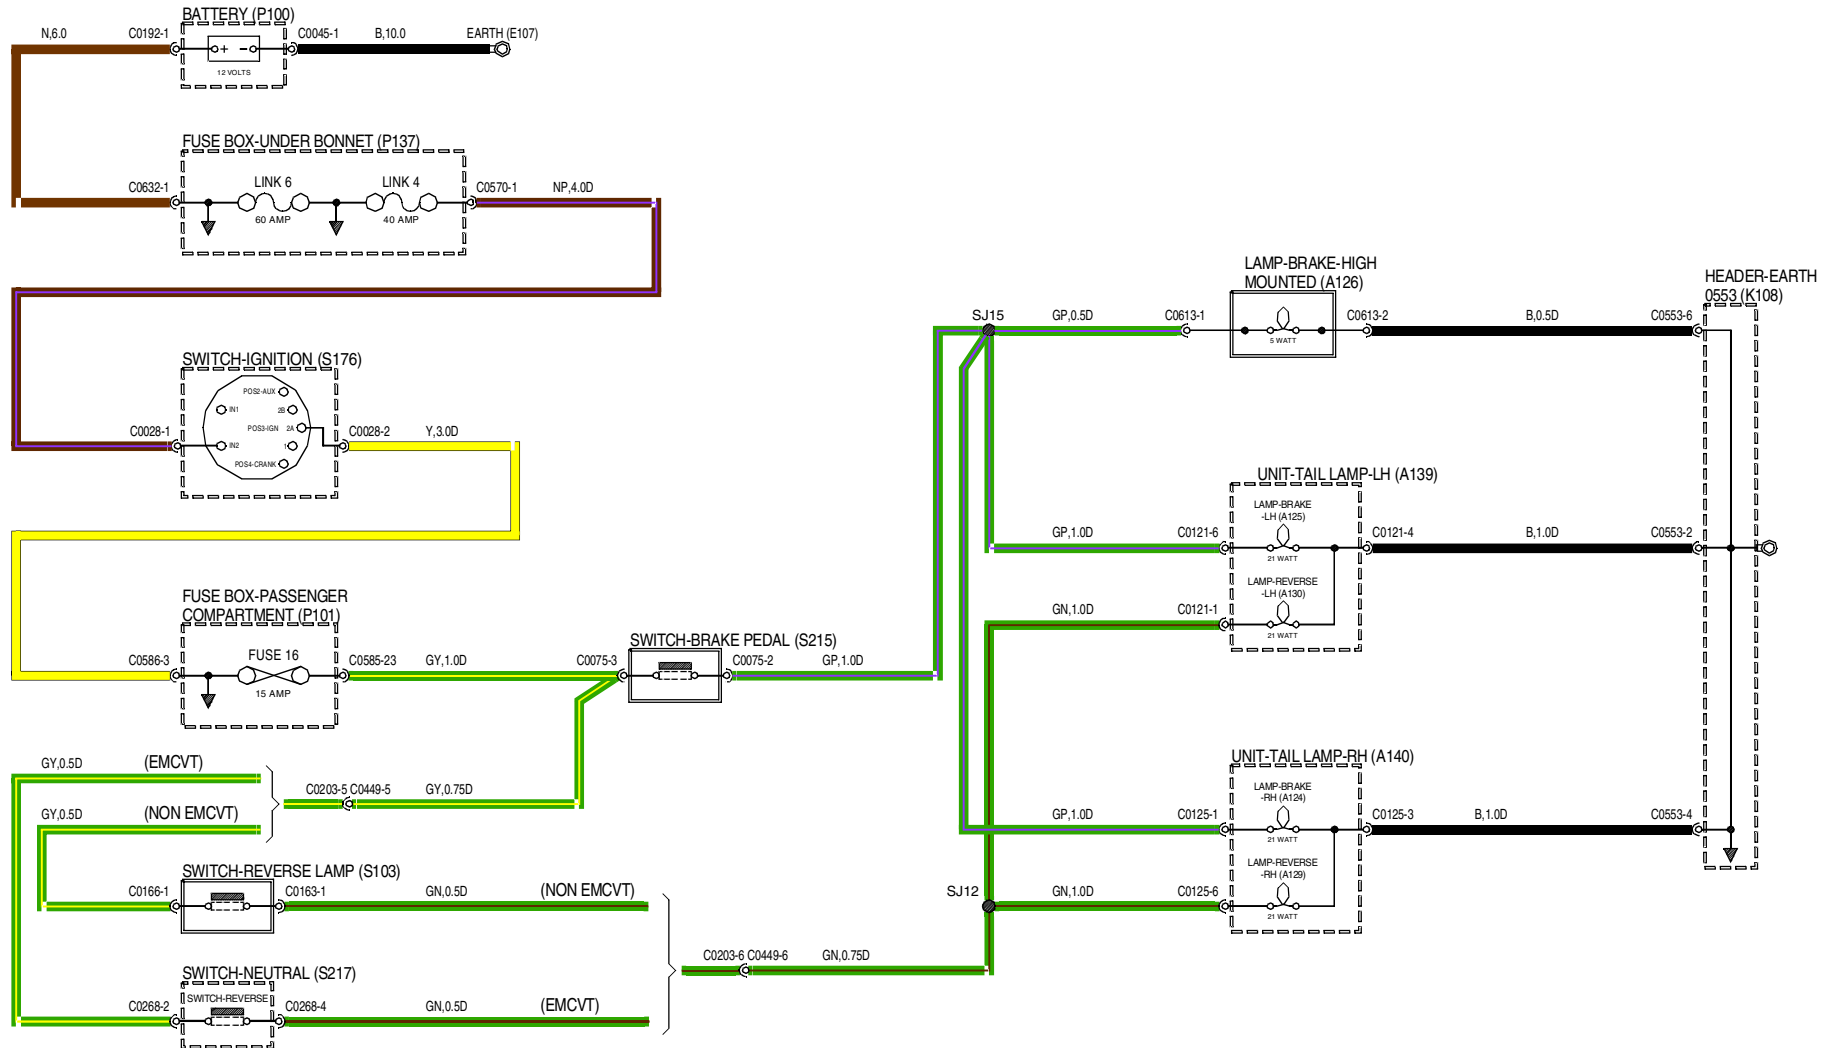


WVR119210-A-01

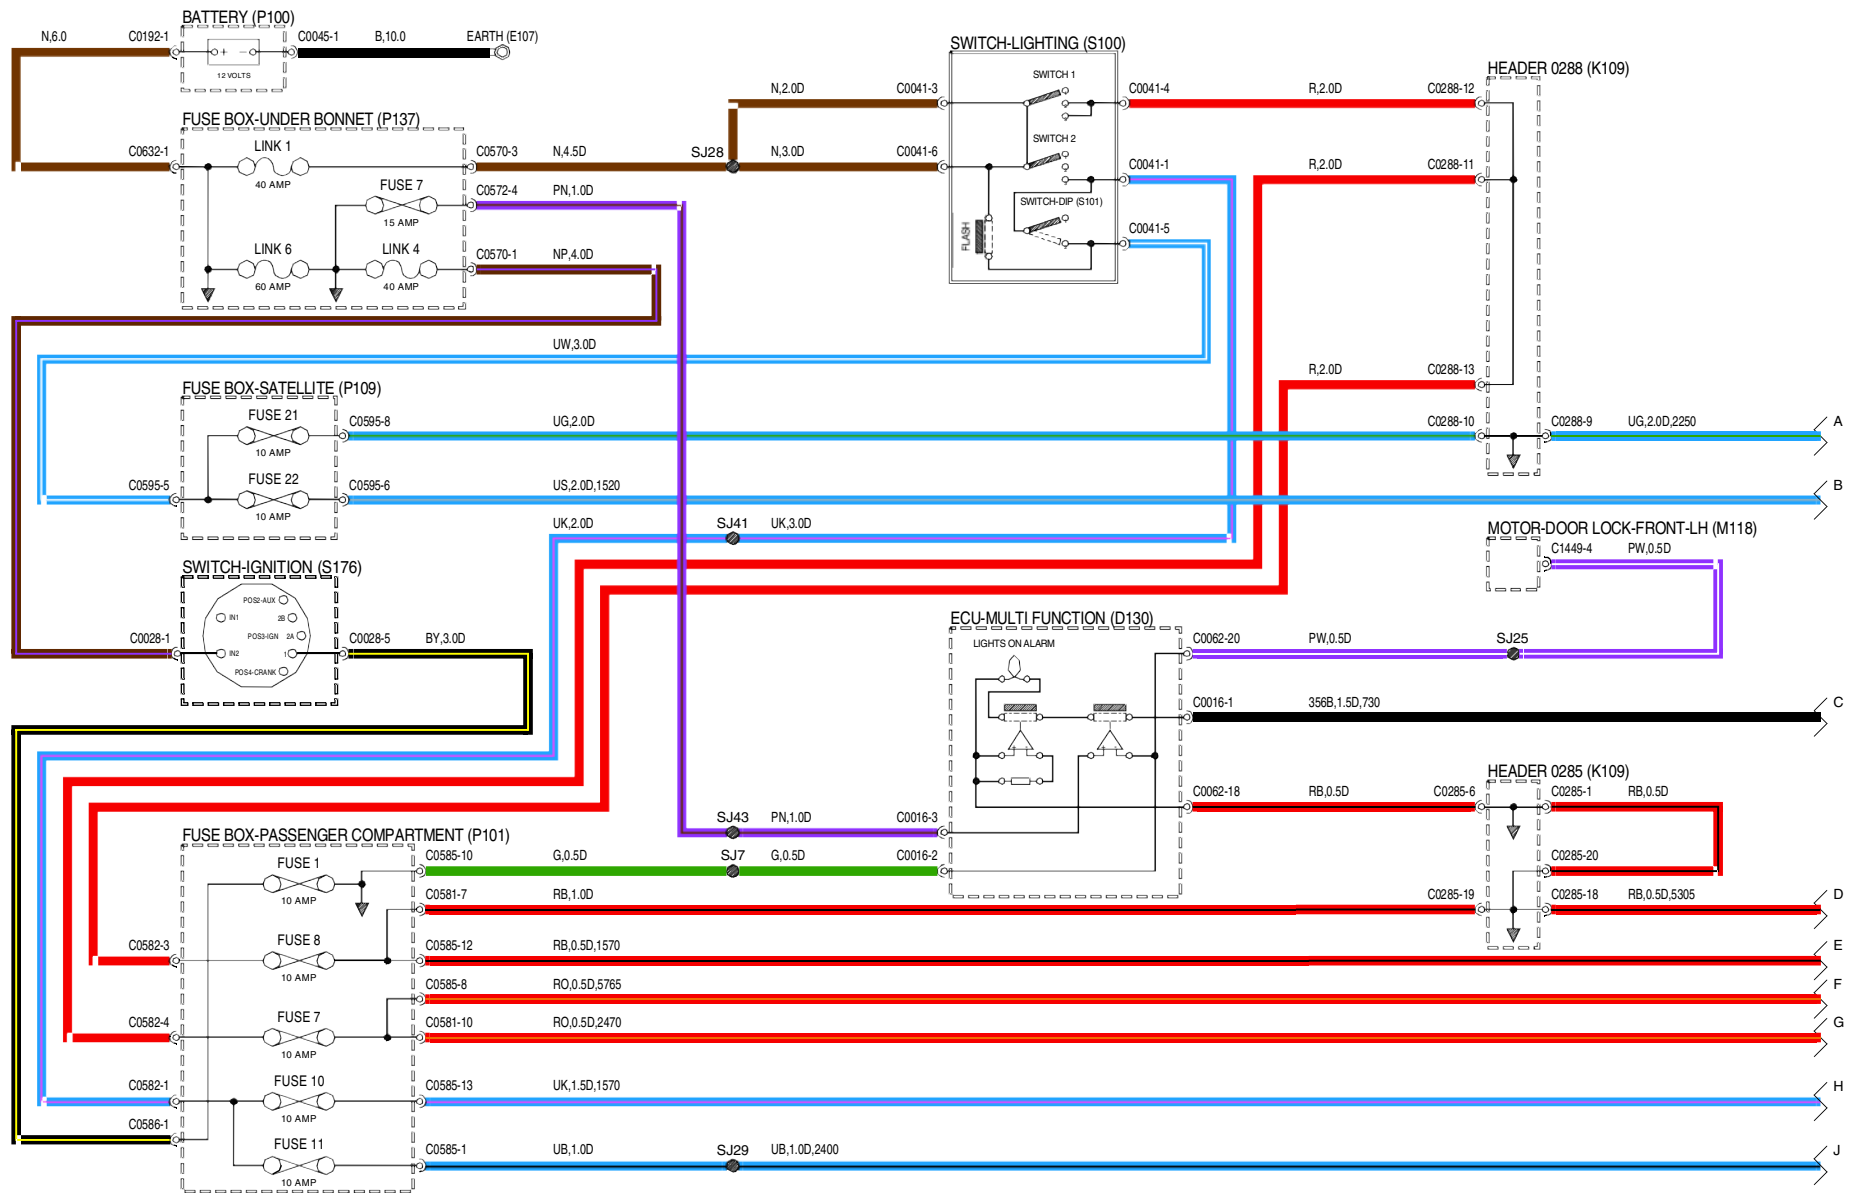


VWR119490-A-01


108 EXTERIOR LAMPS

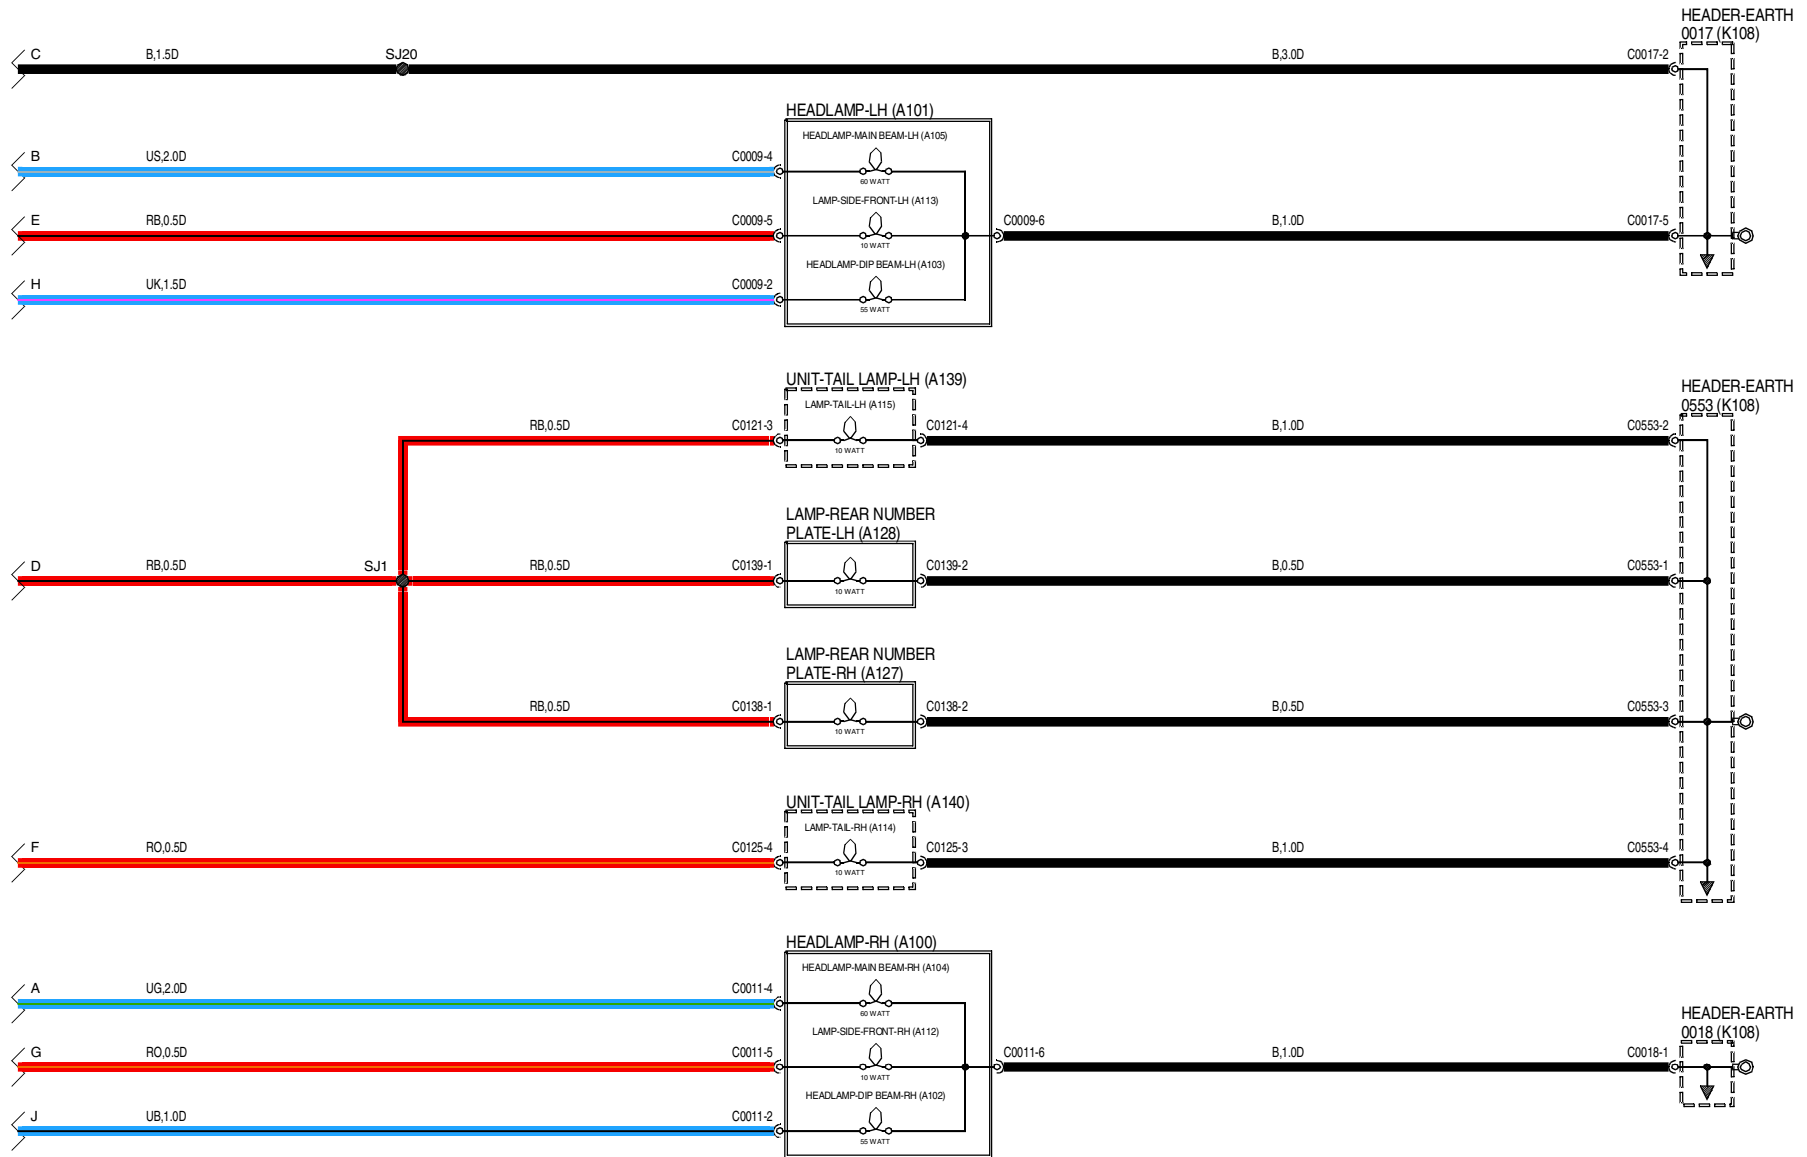

VWR119490-A-02

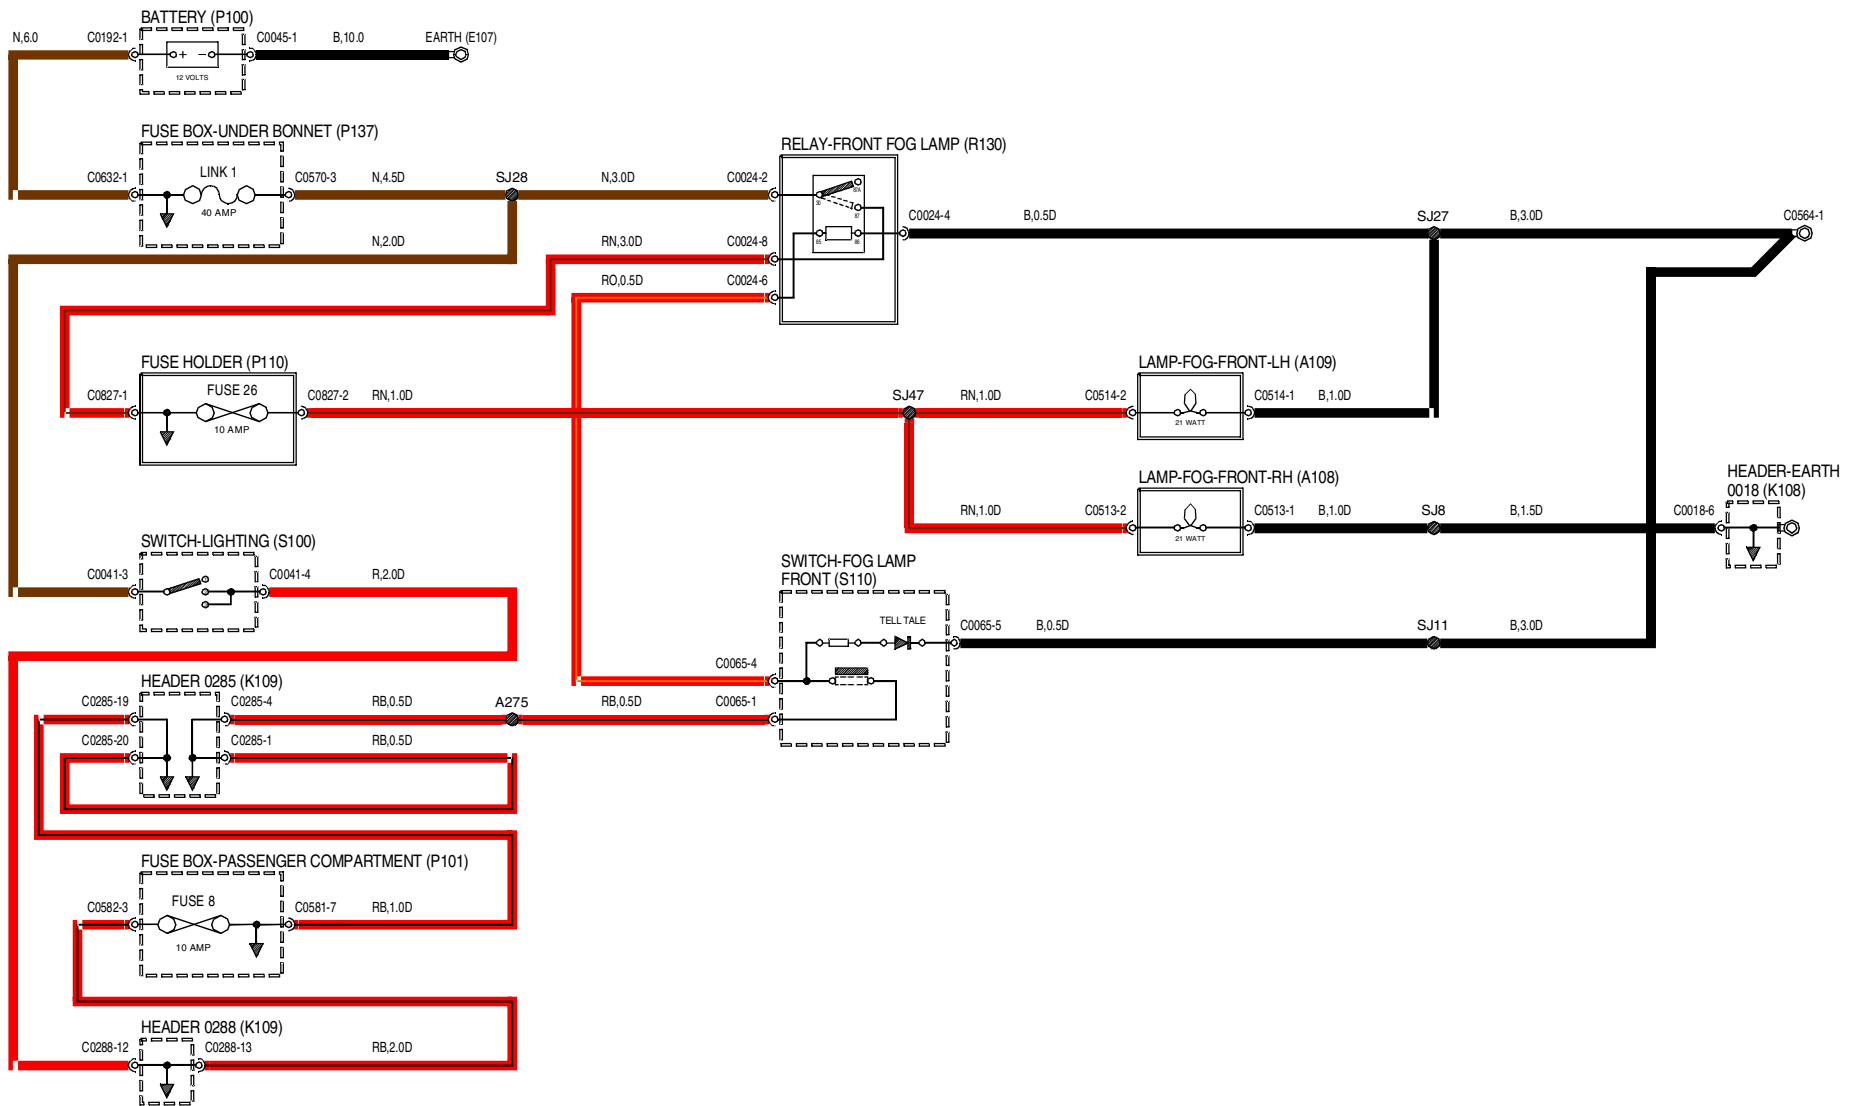


VWR009630-A-01

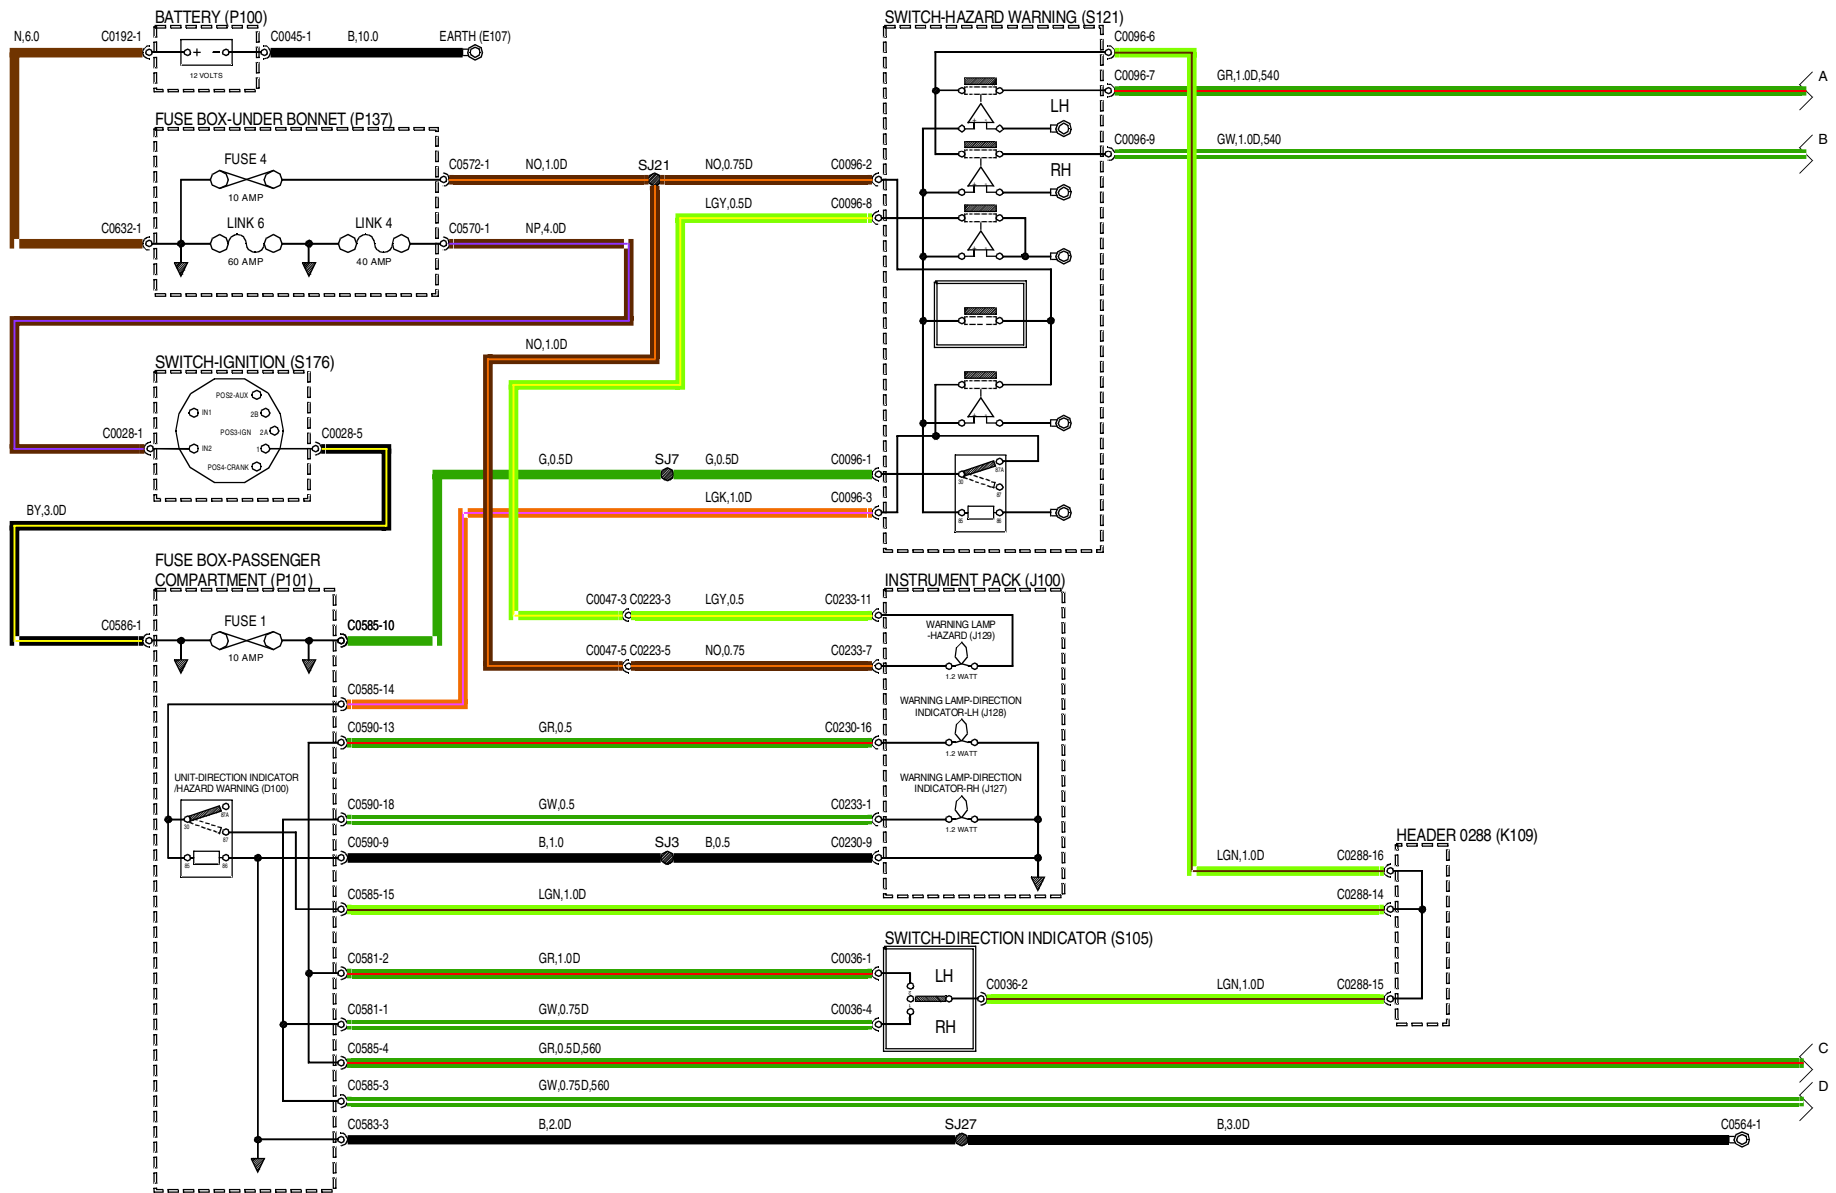


VWR119610-A-01

108 EXTERIOR LAMPS

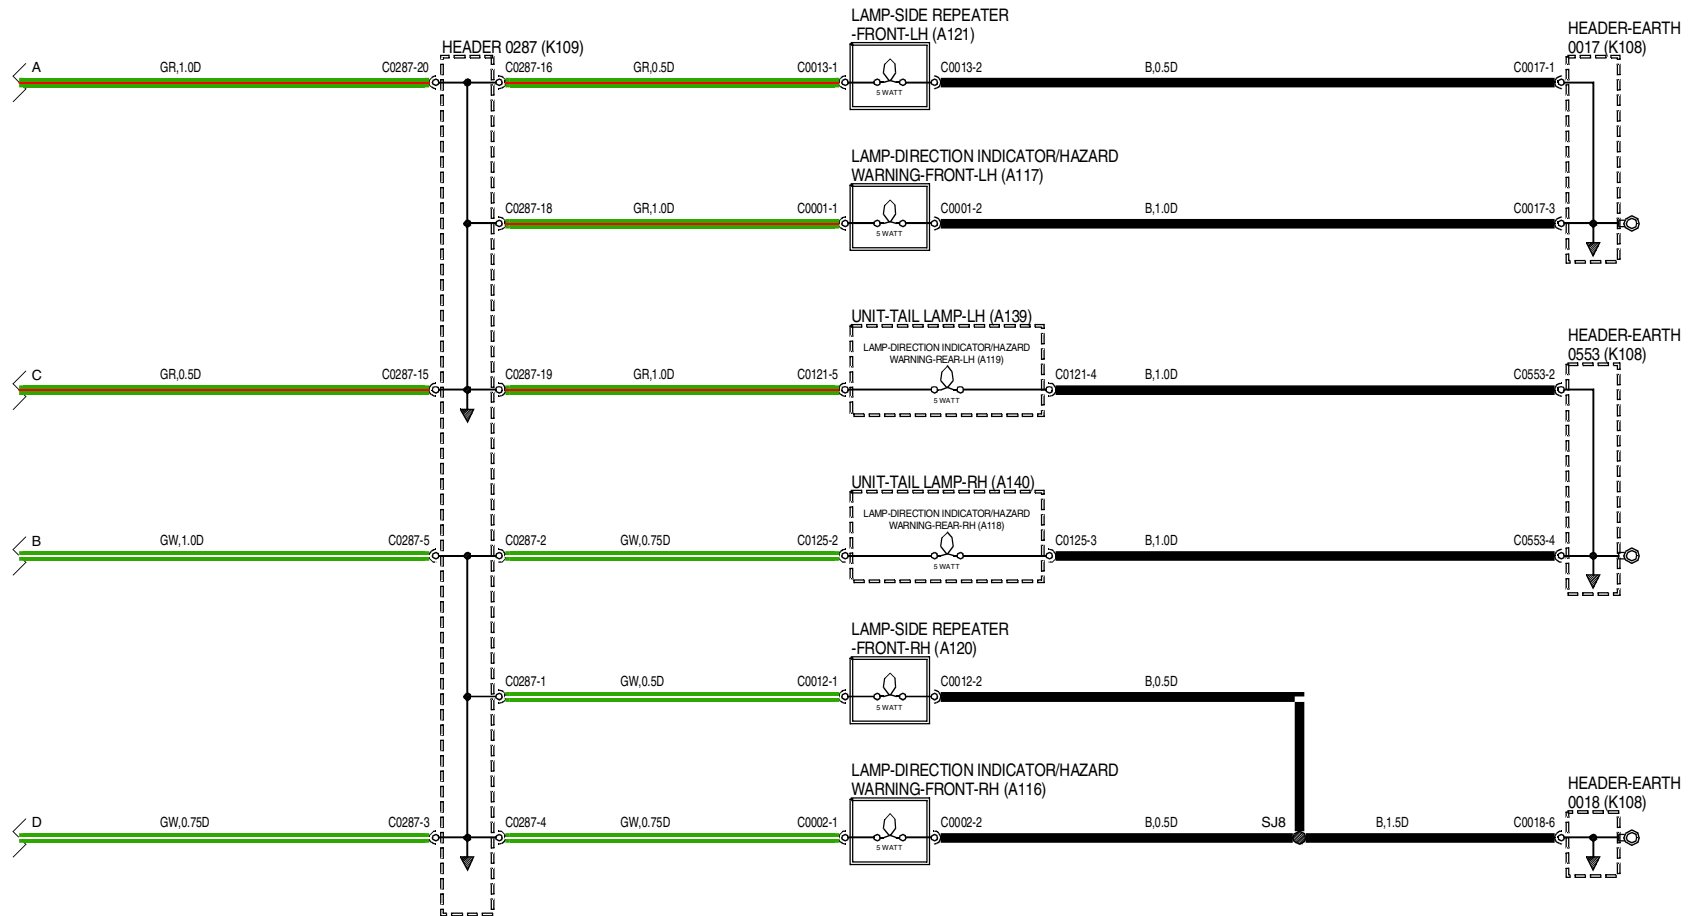


VWR119610-A-02

112 INTERIOR LAMPS

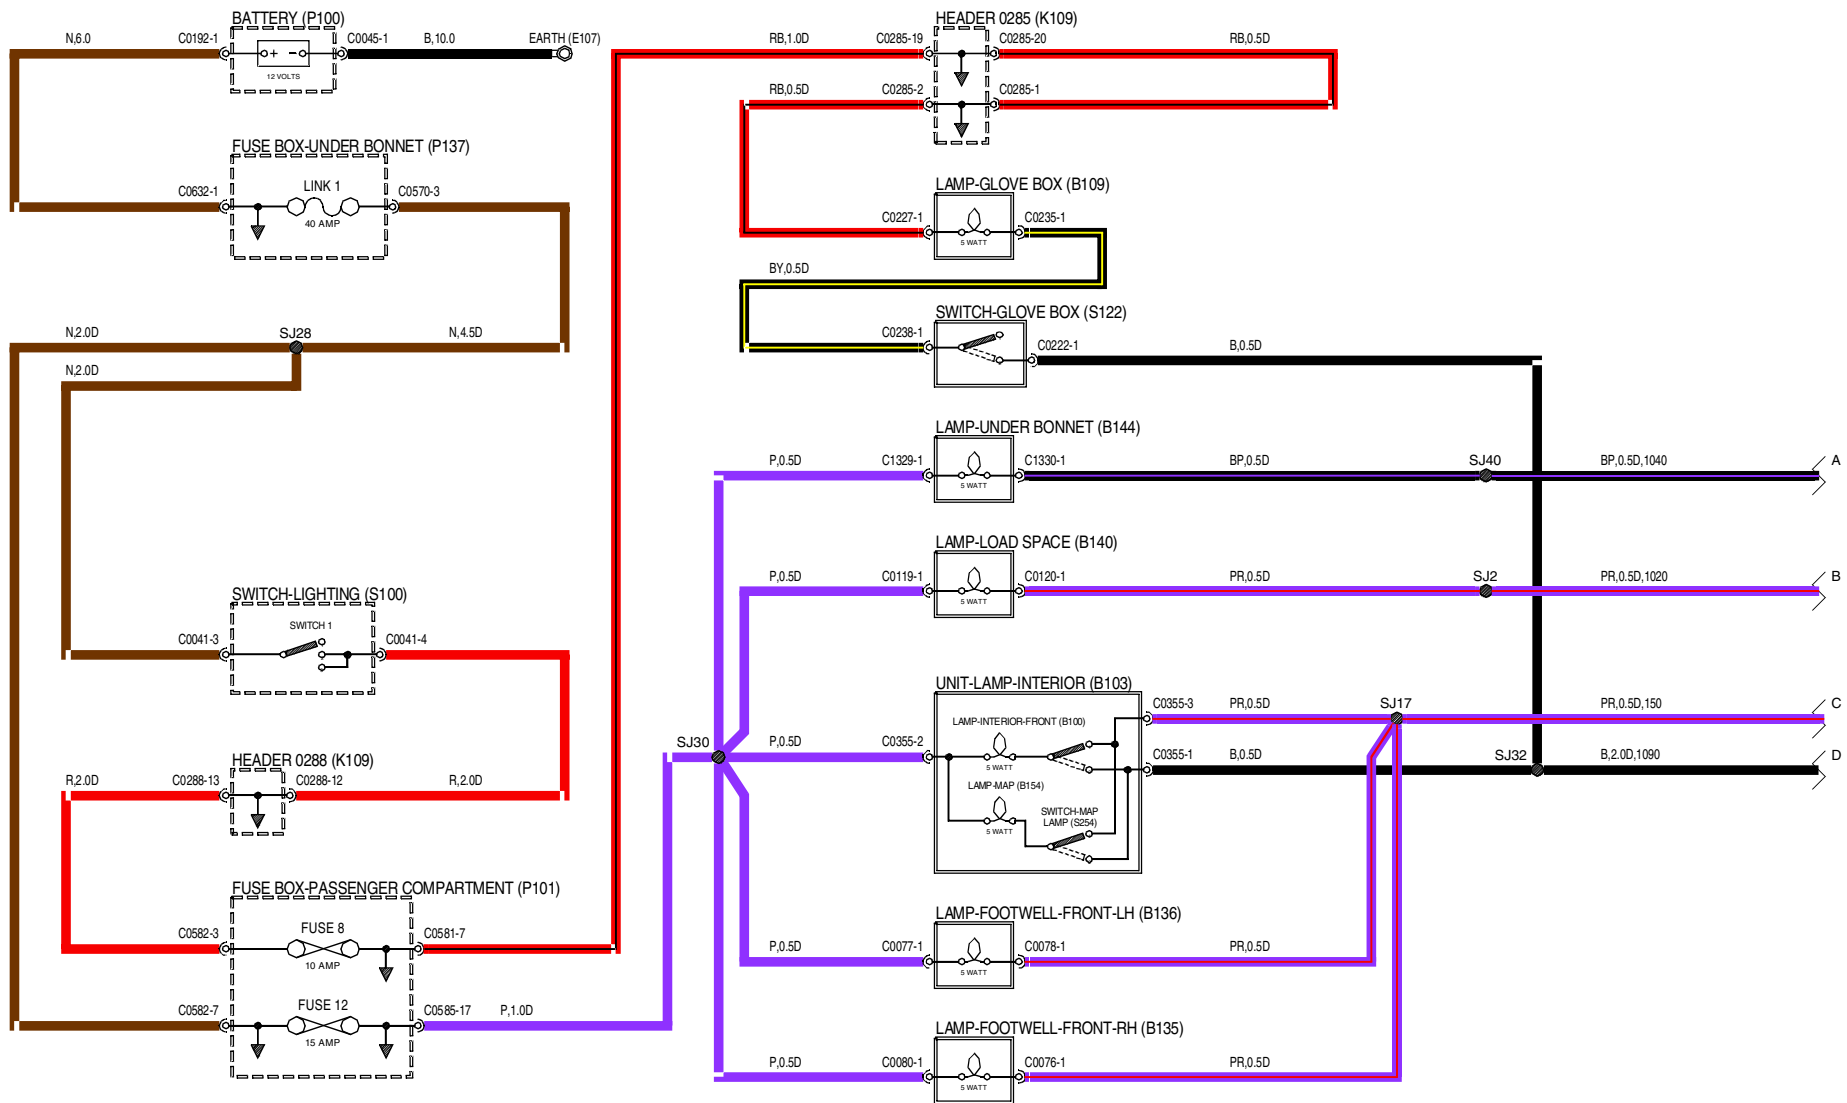


WVR119710-A-01

112 INTERIOR LAMPS

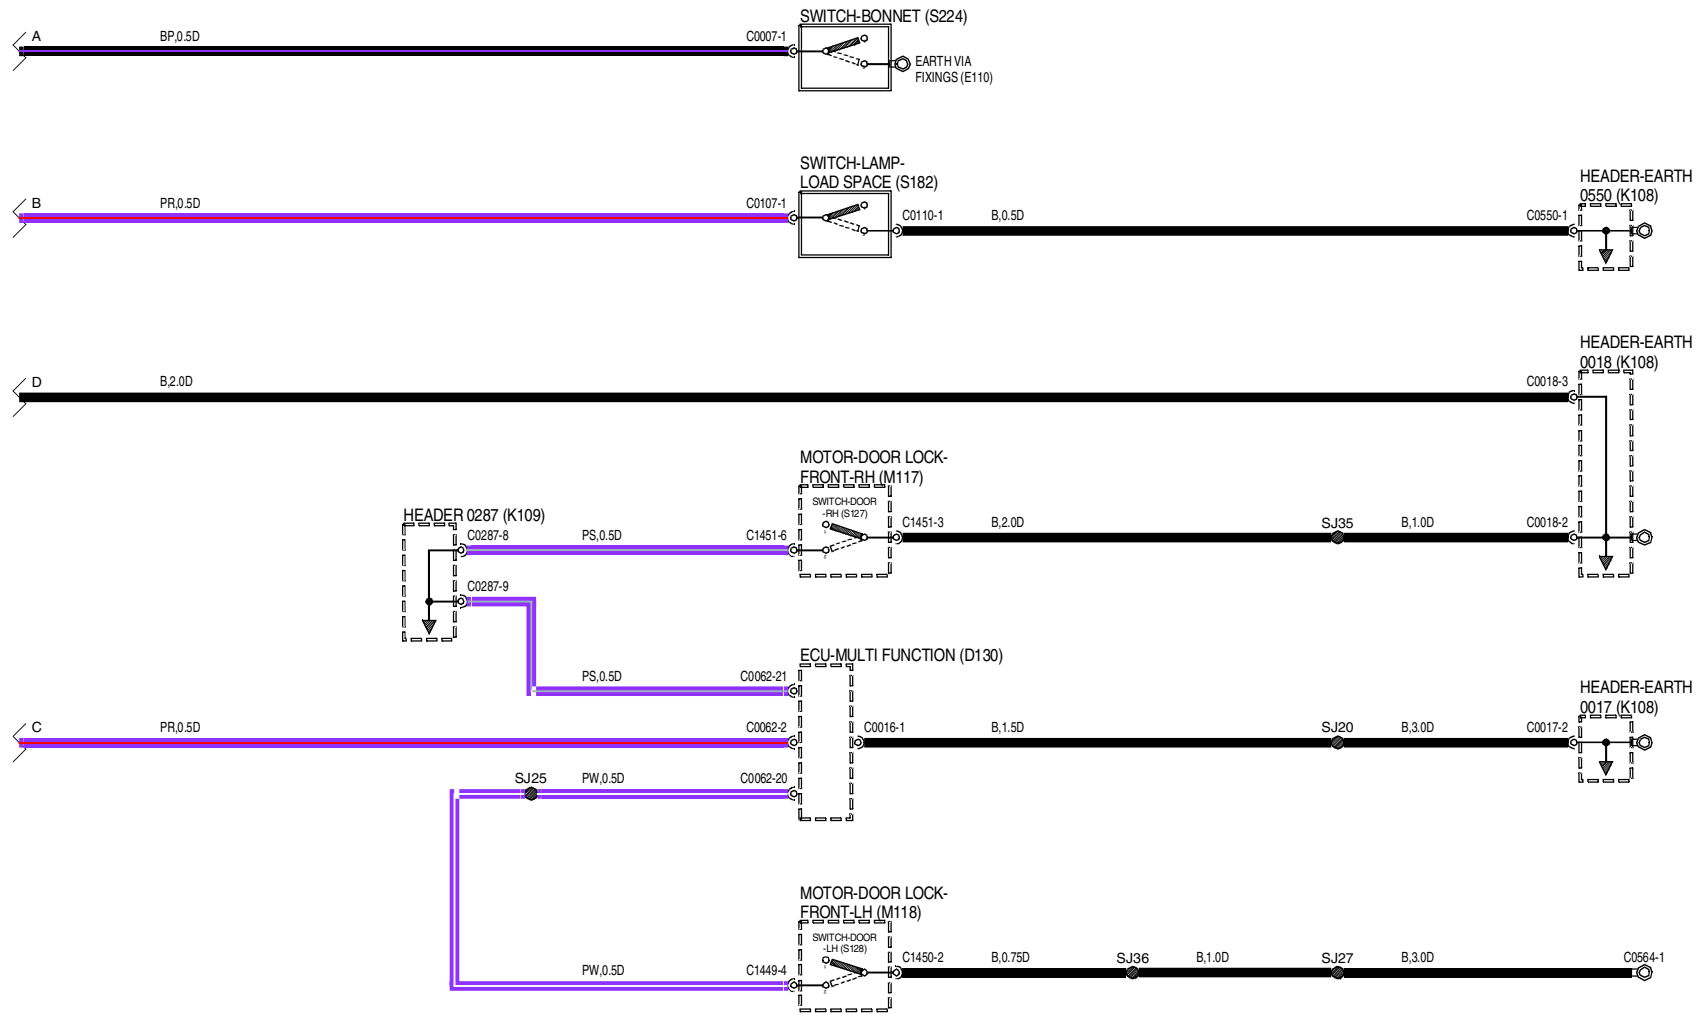


VWR119710-A-02

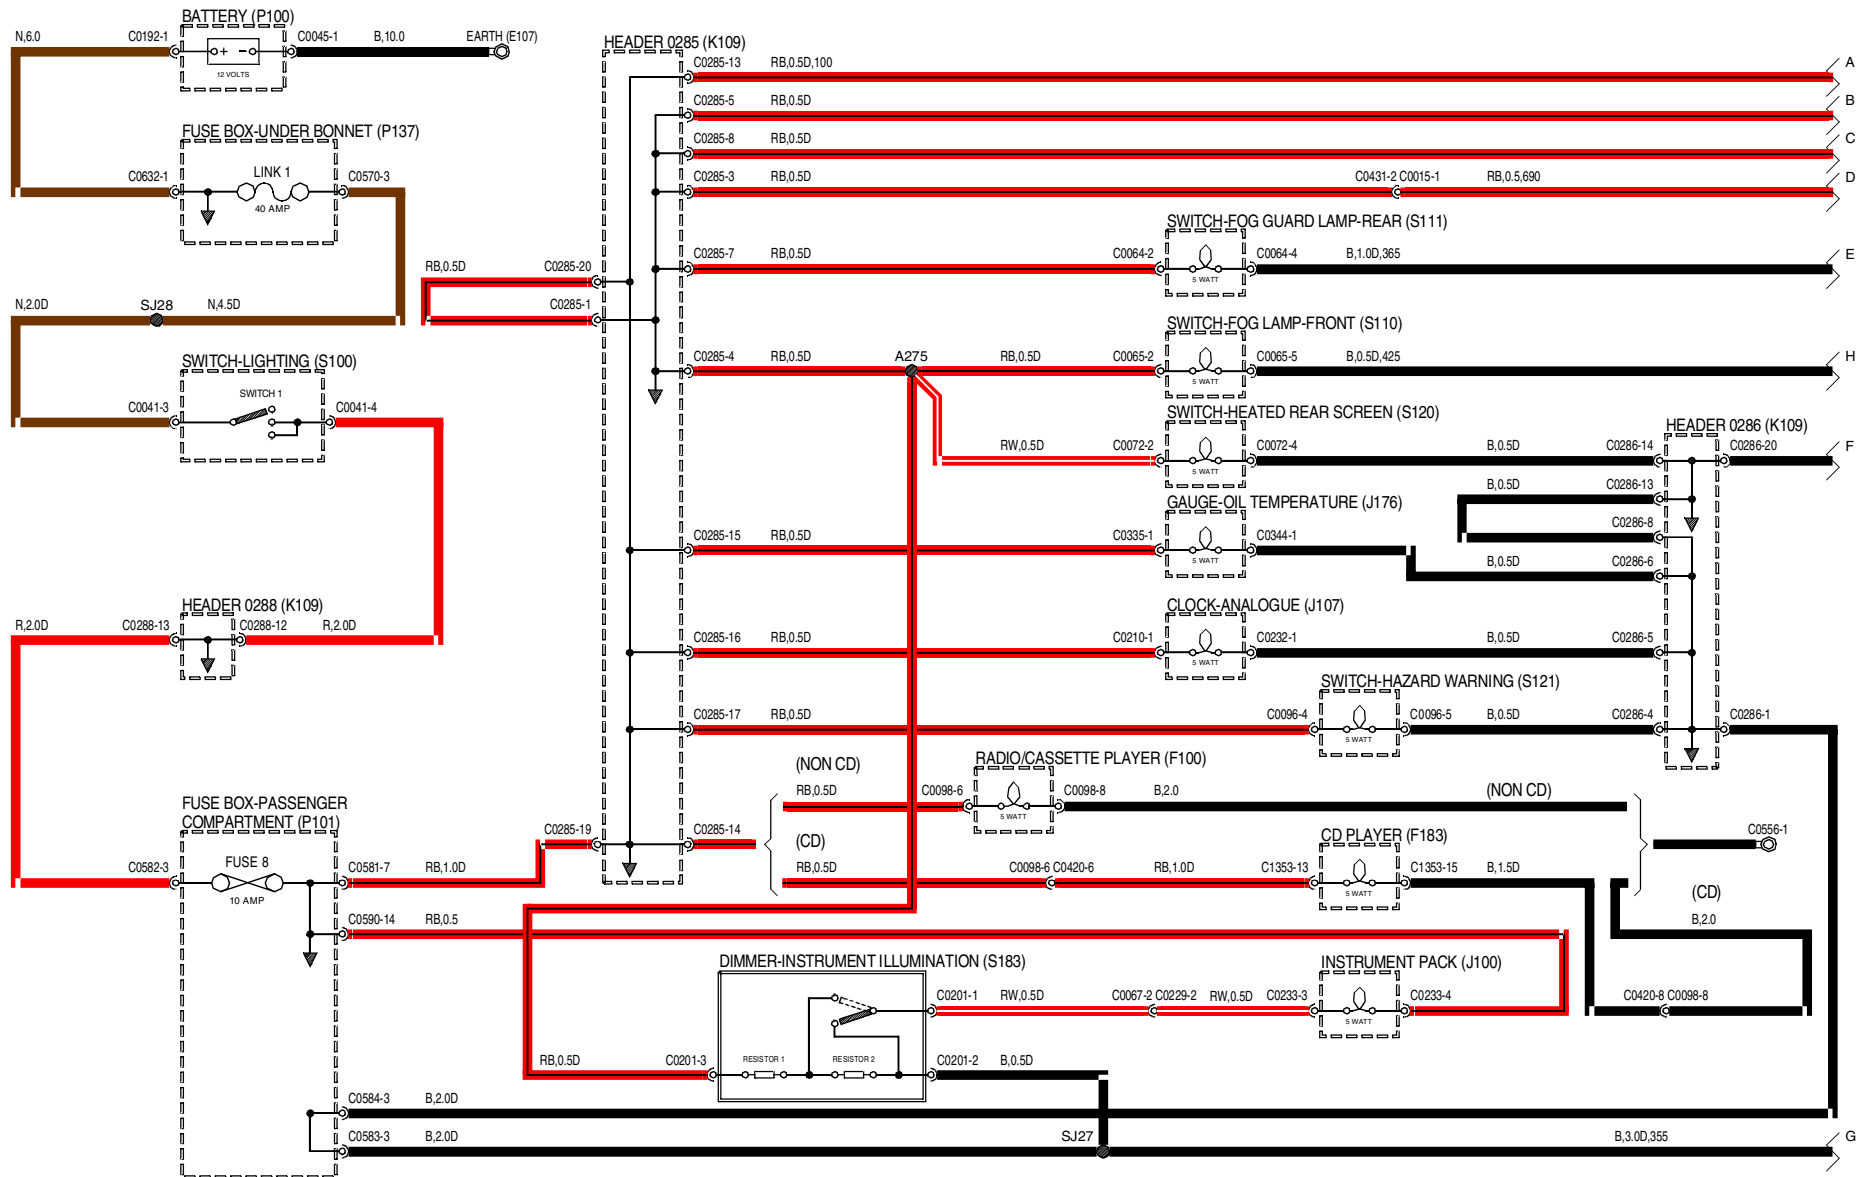


WVR119650-A-01


116 INTERIOR ILLUMINATION

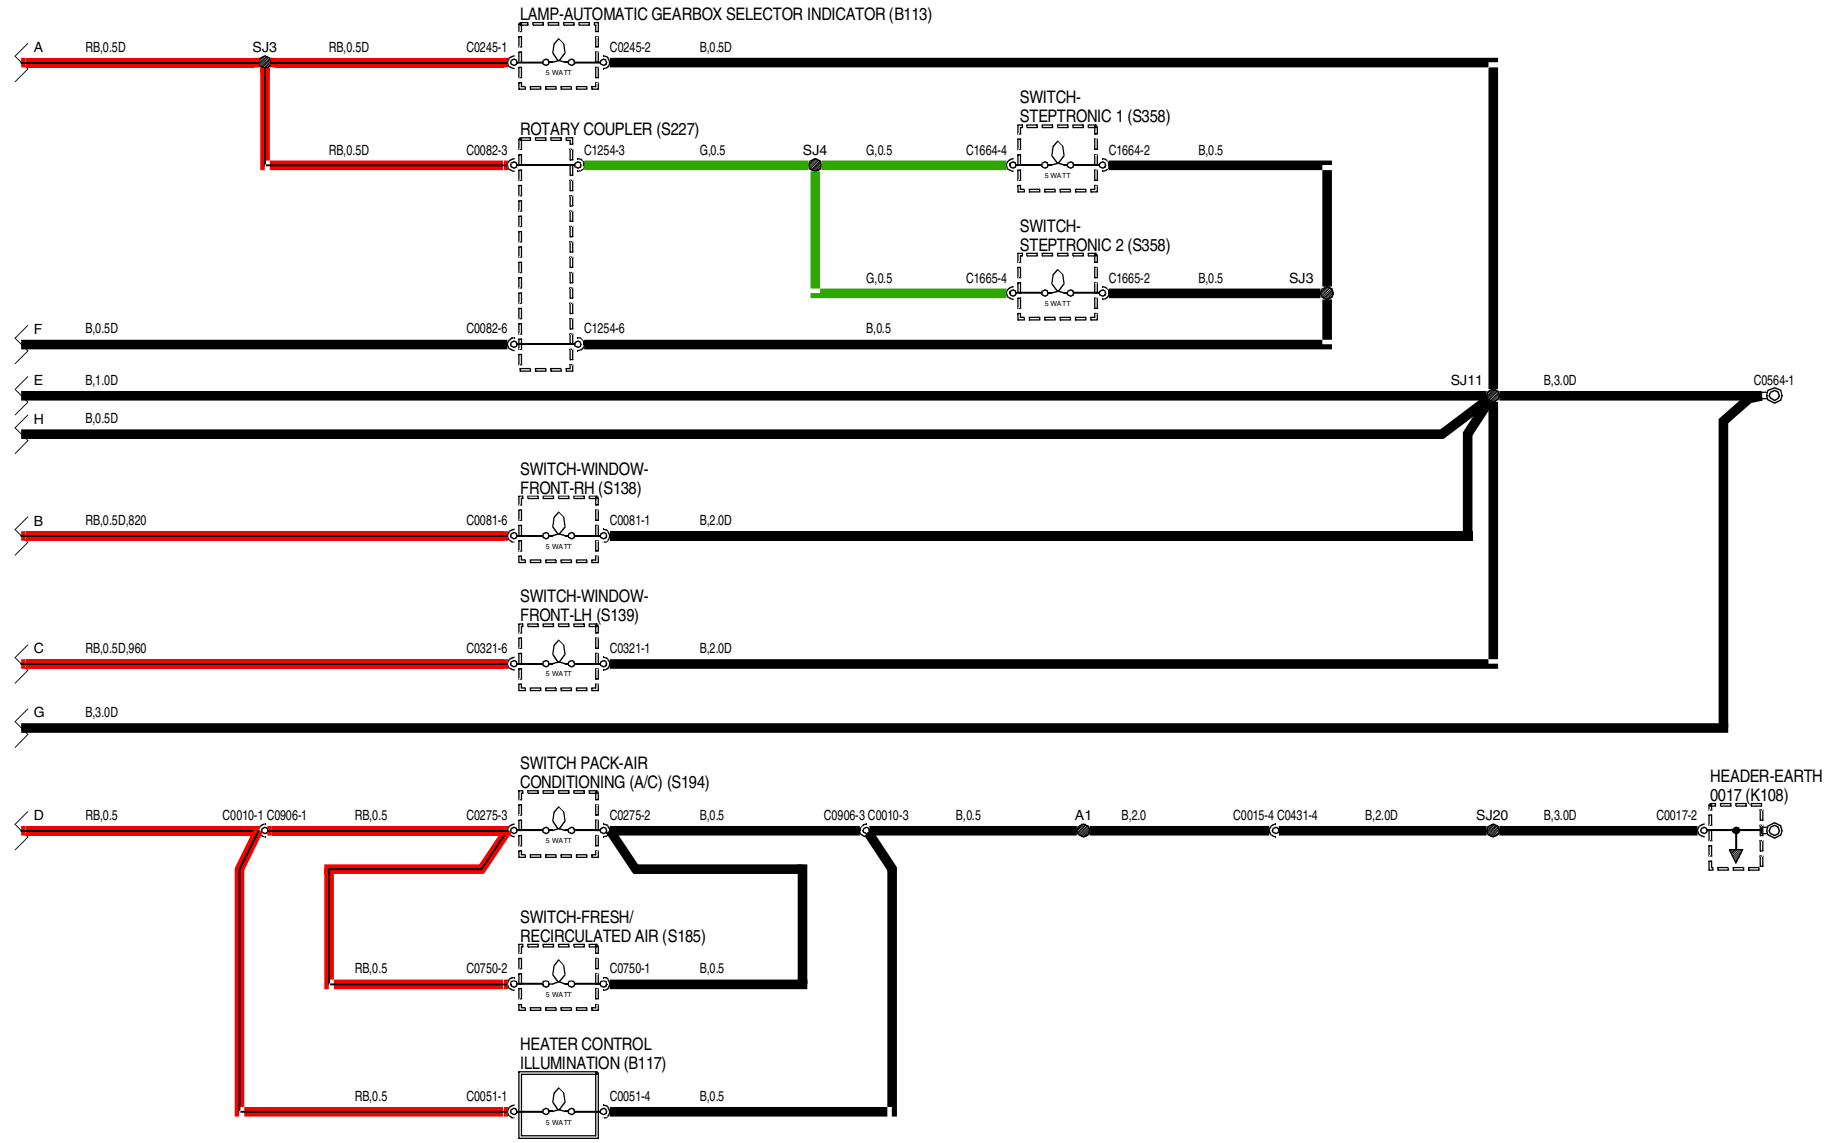


VWR119650-A-02

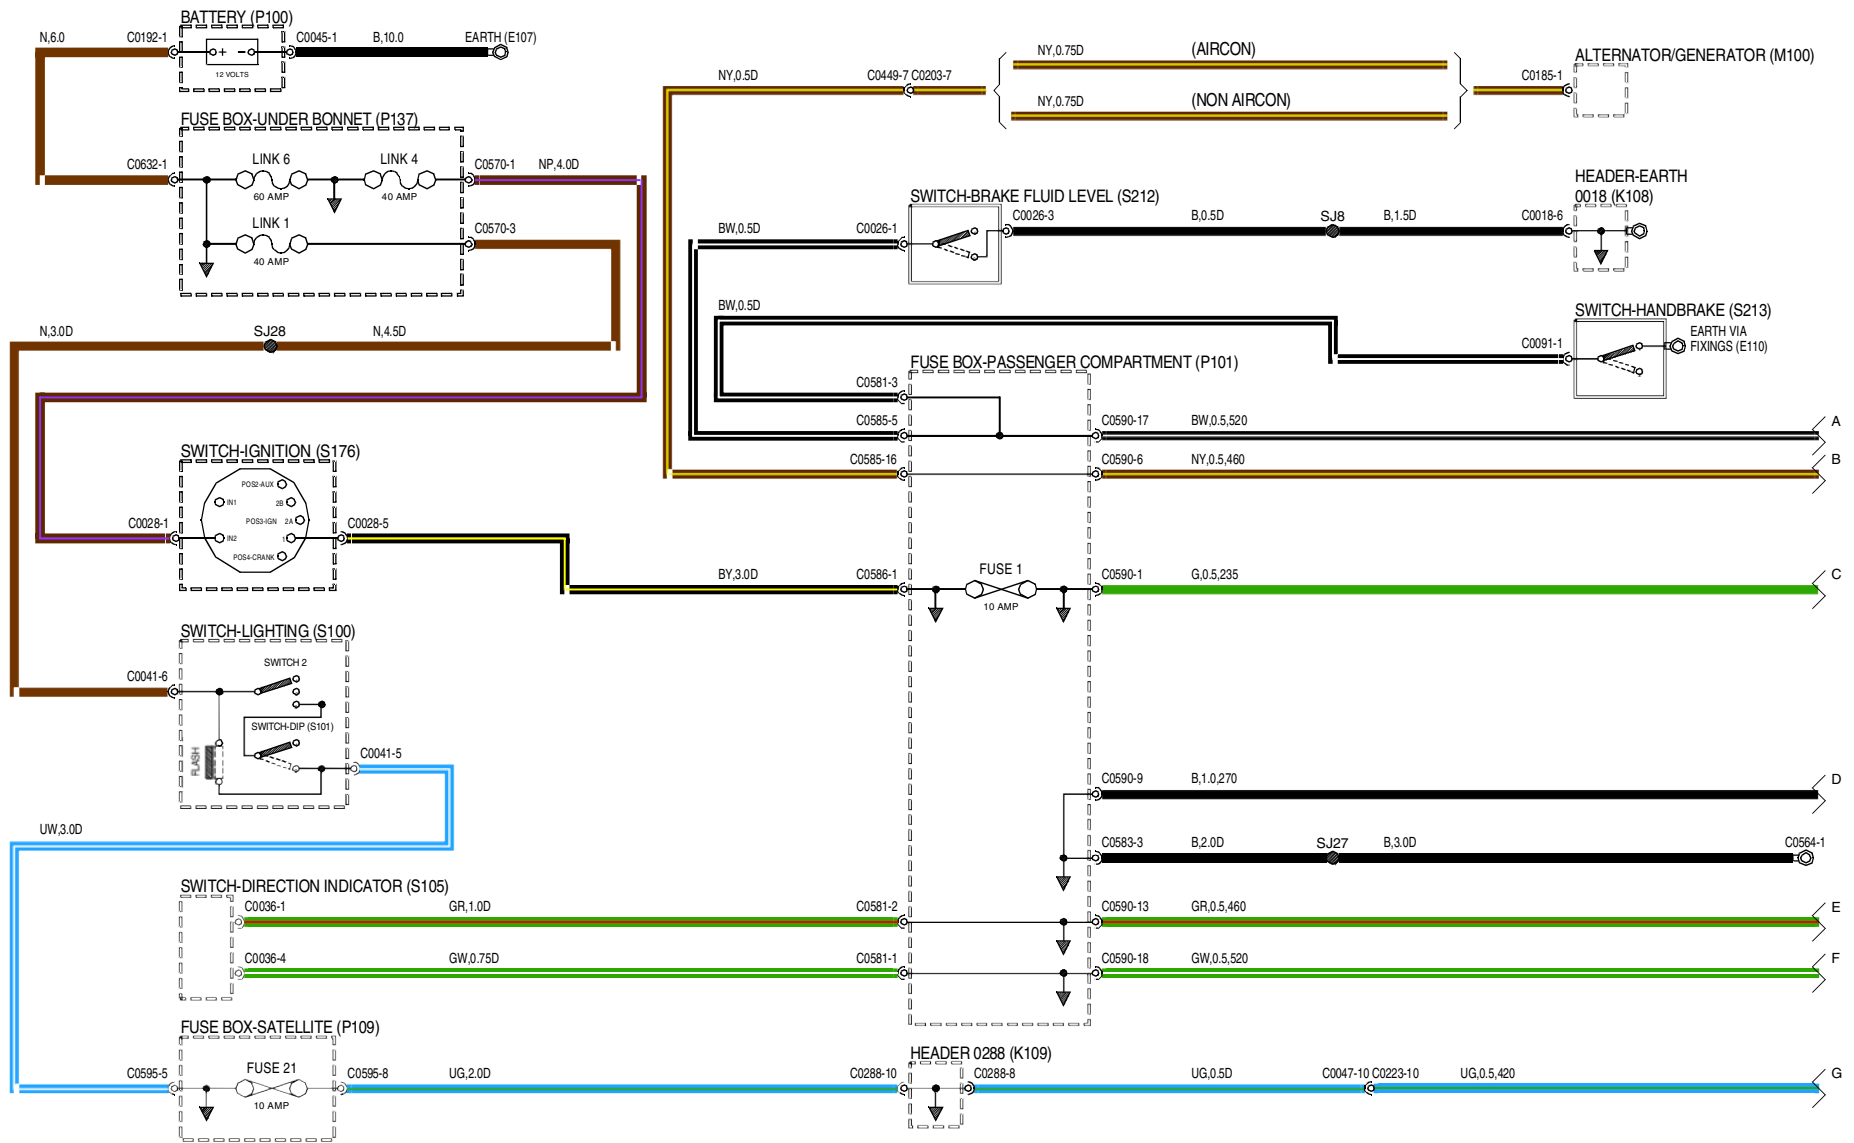

WVR119630-A-01

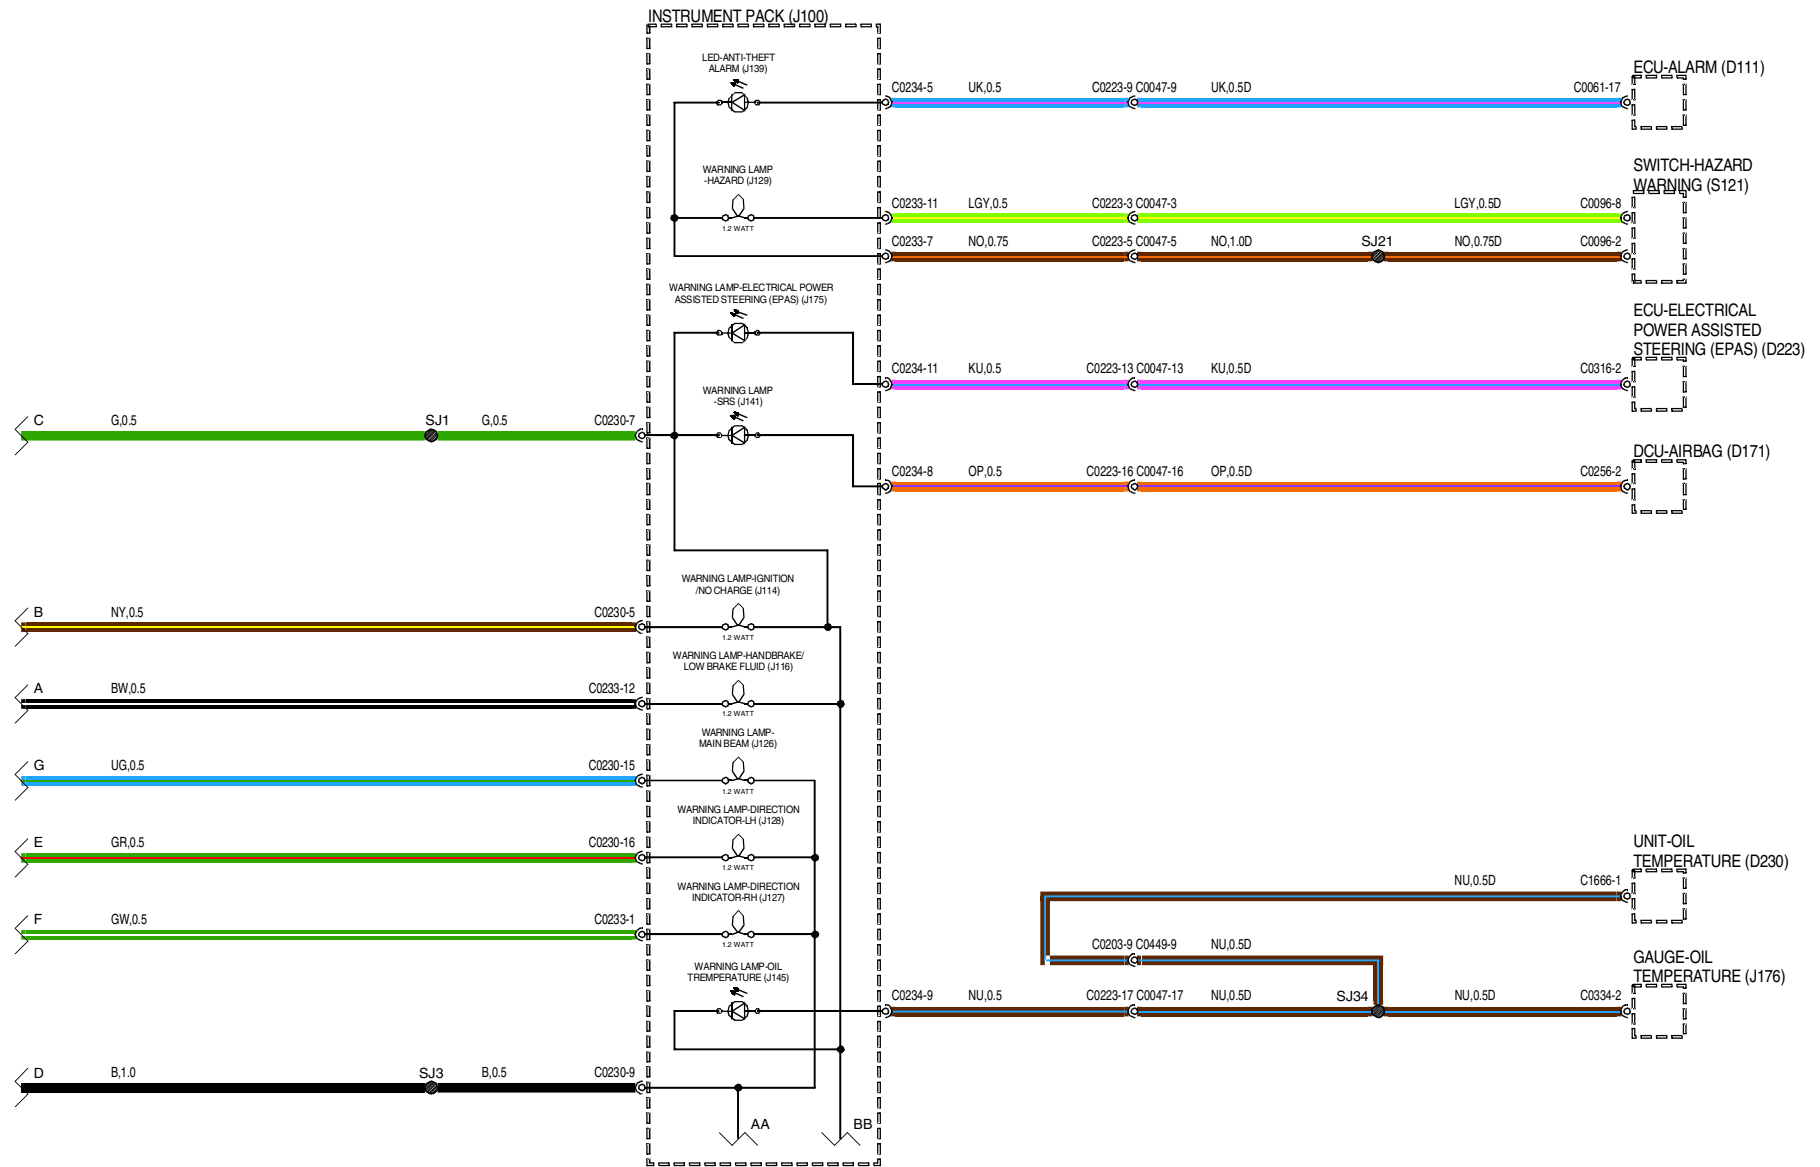


VWR119630-A-02

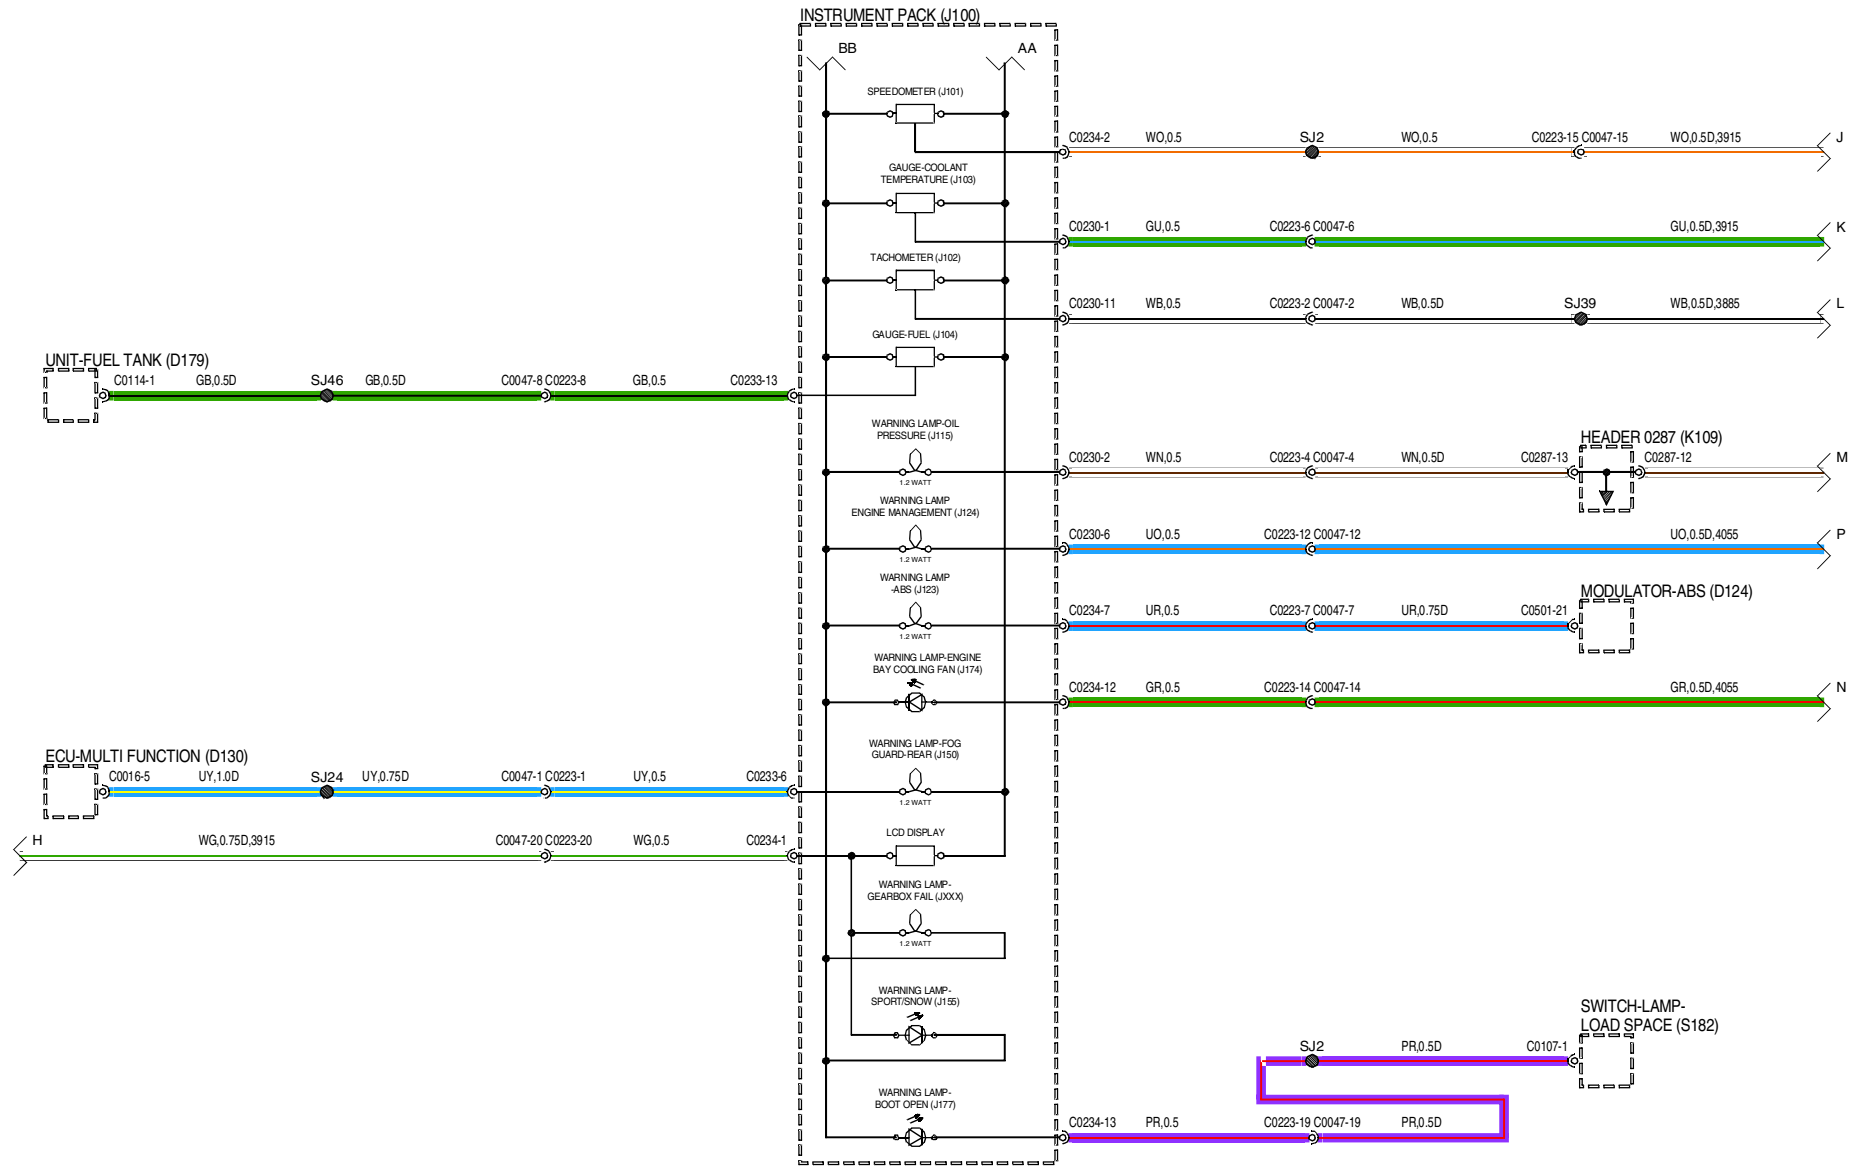


VWR119630-A-03

120 INSTRUMENTS

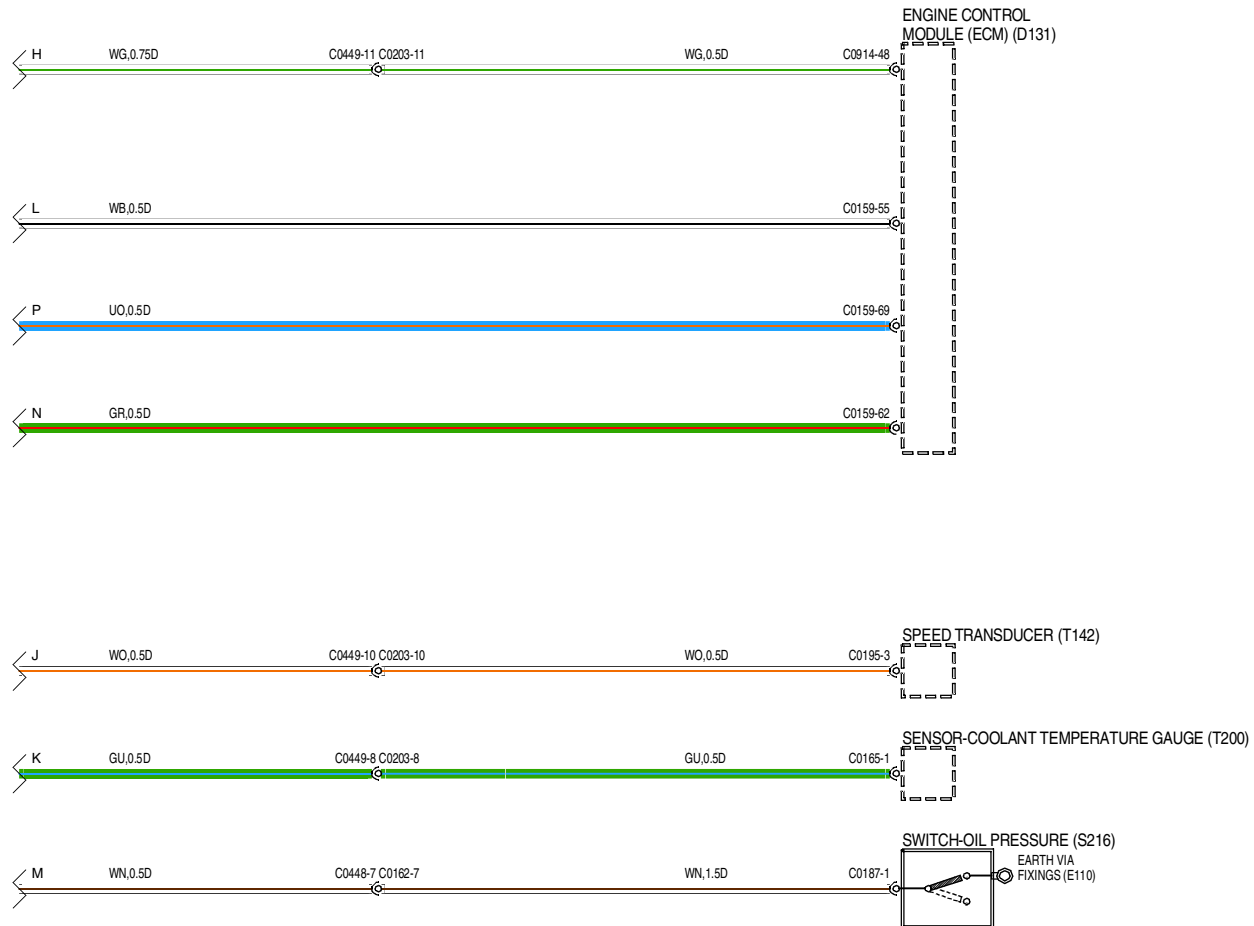


VWR119630-A-04

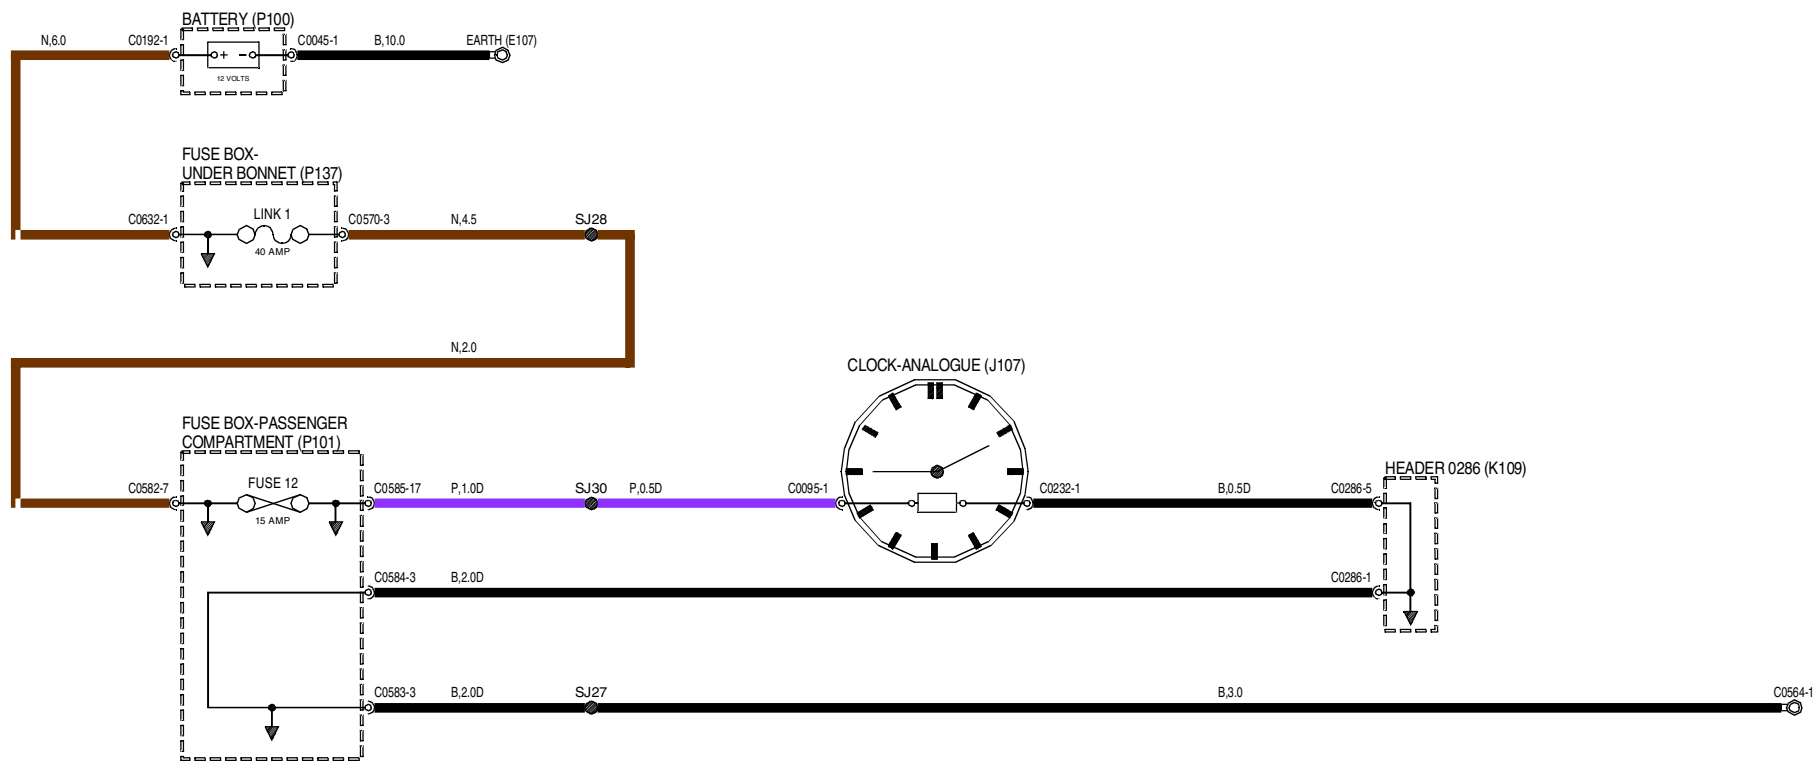


VWR119270-A-01

128 CIGAR LIGHTER

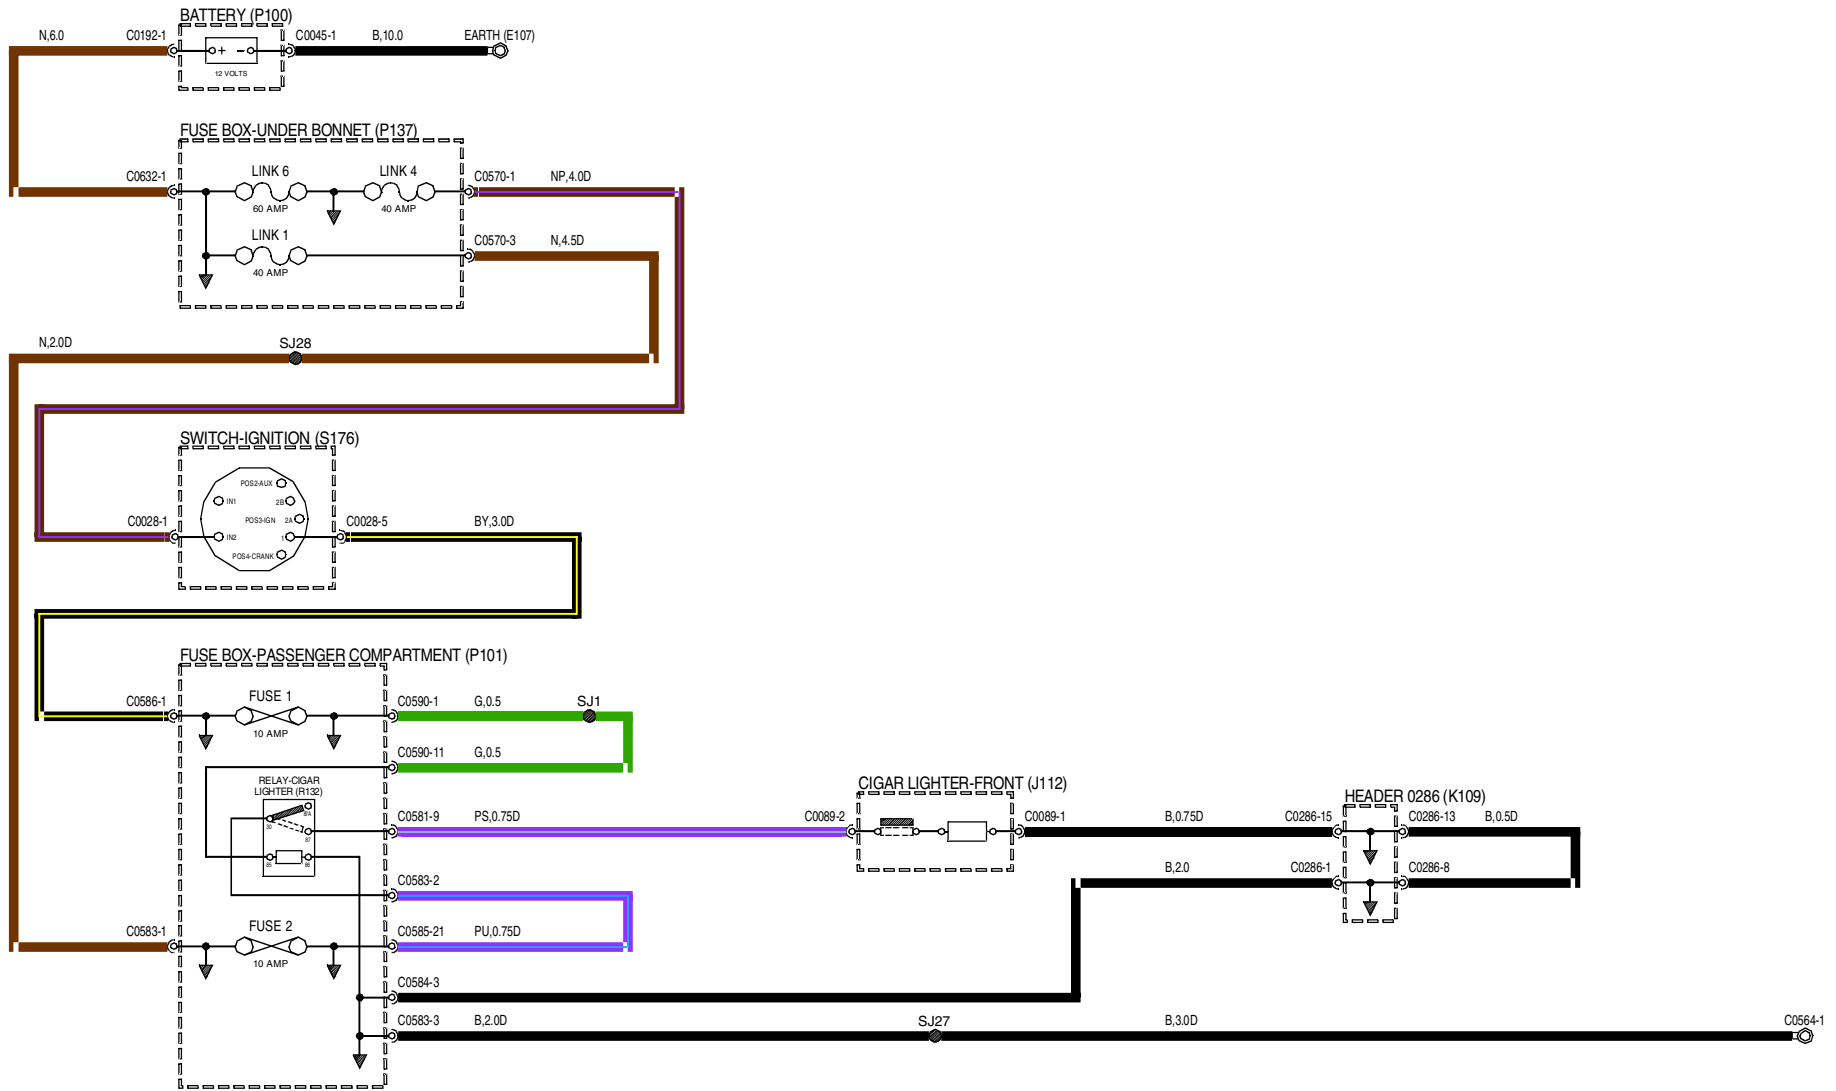


WVR119250-A-01

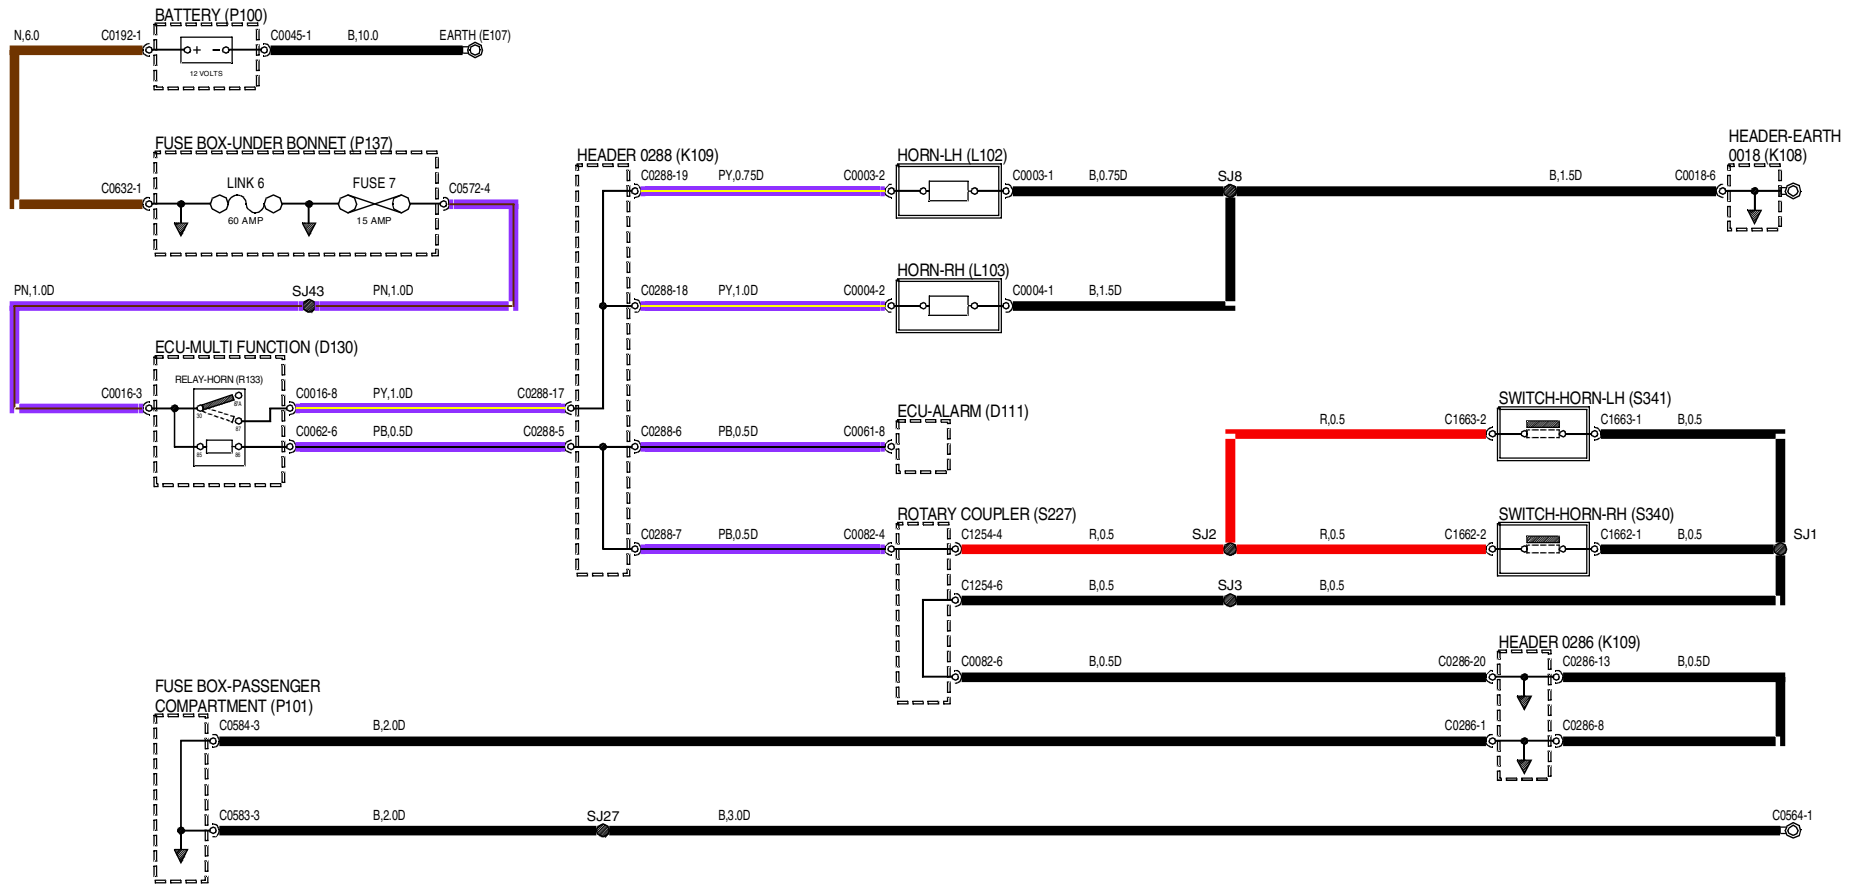


WVR119570-A-01



140 DOOR MIRRORS

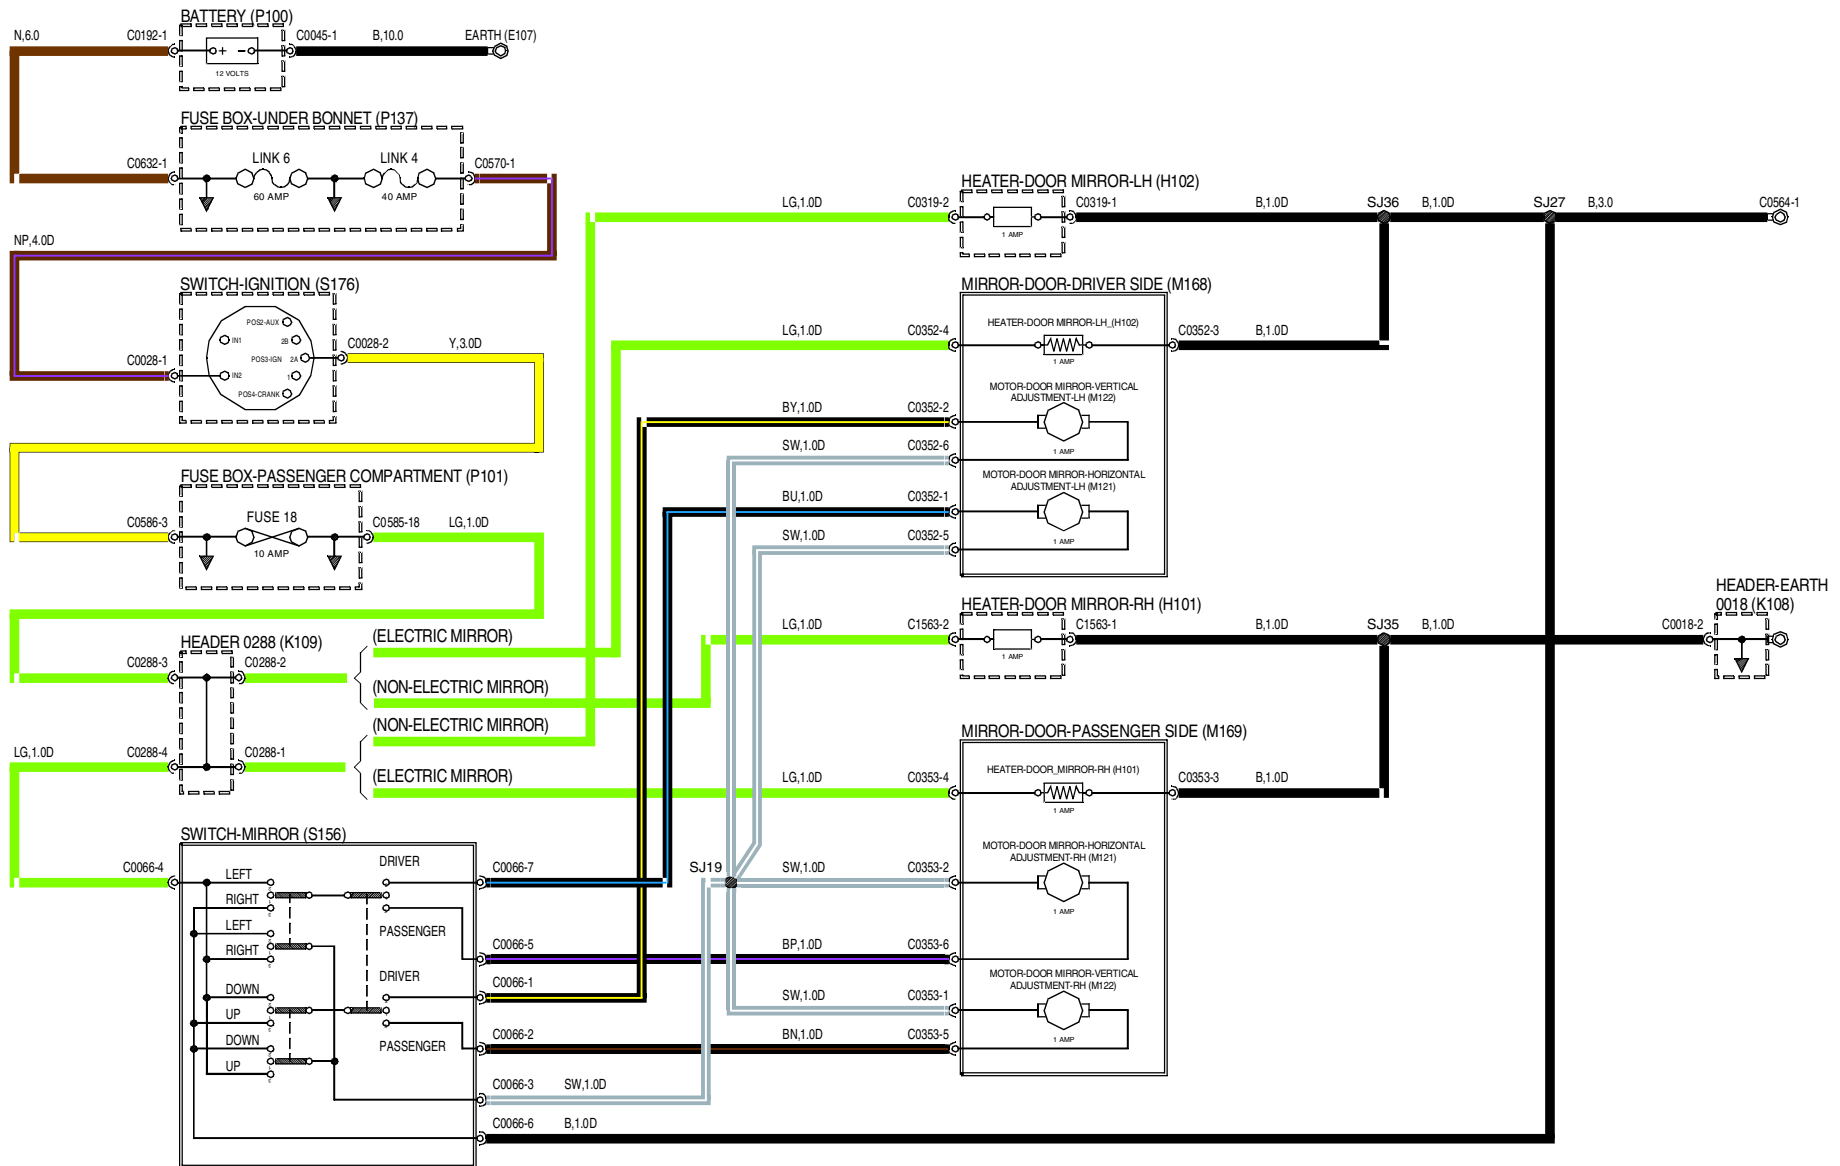


WVR119730-A-02

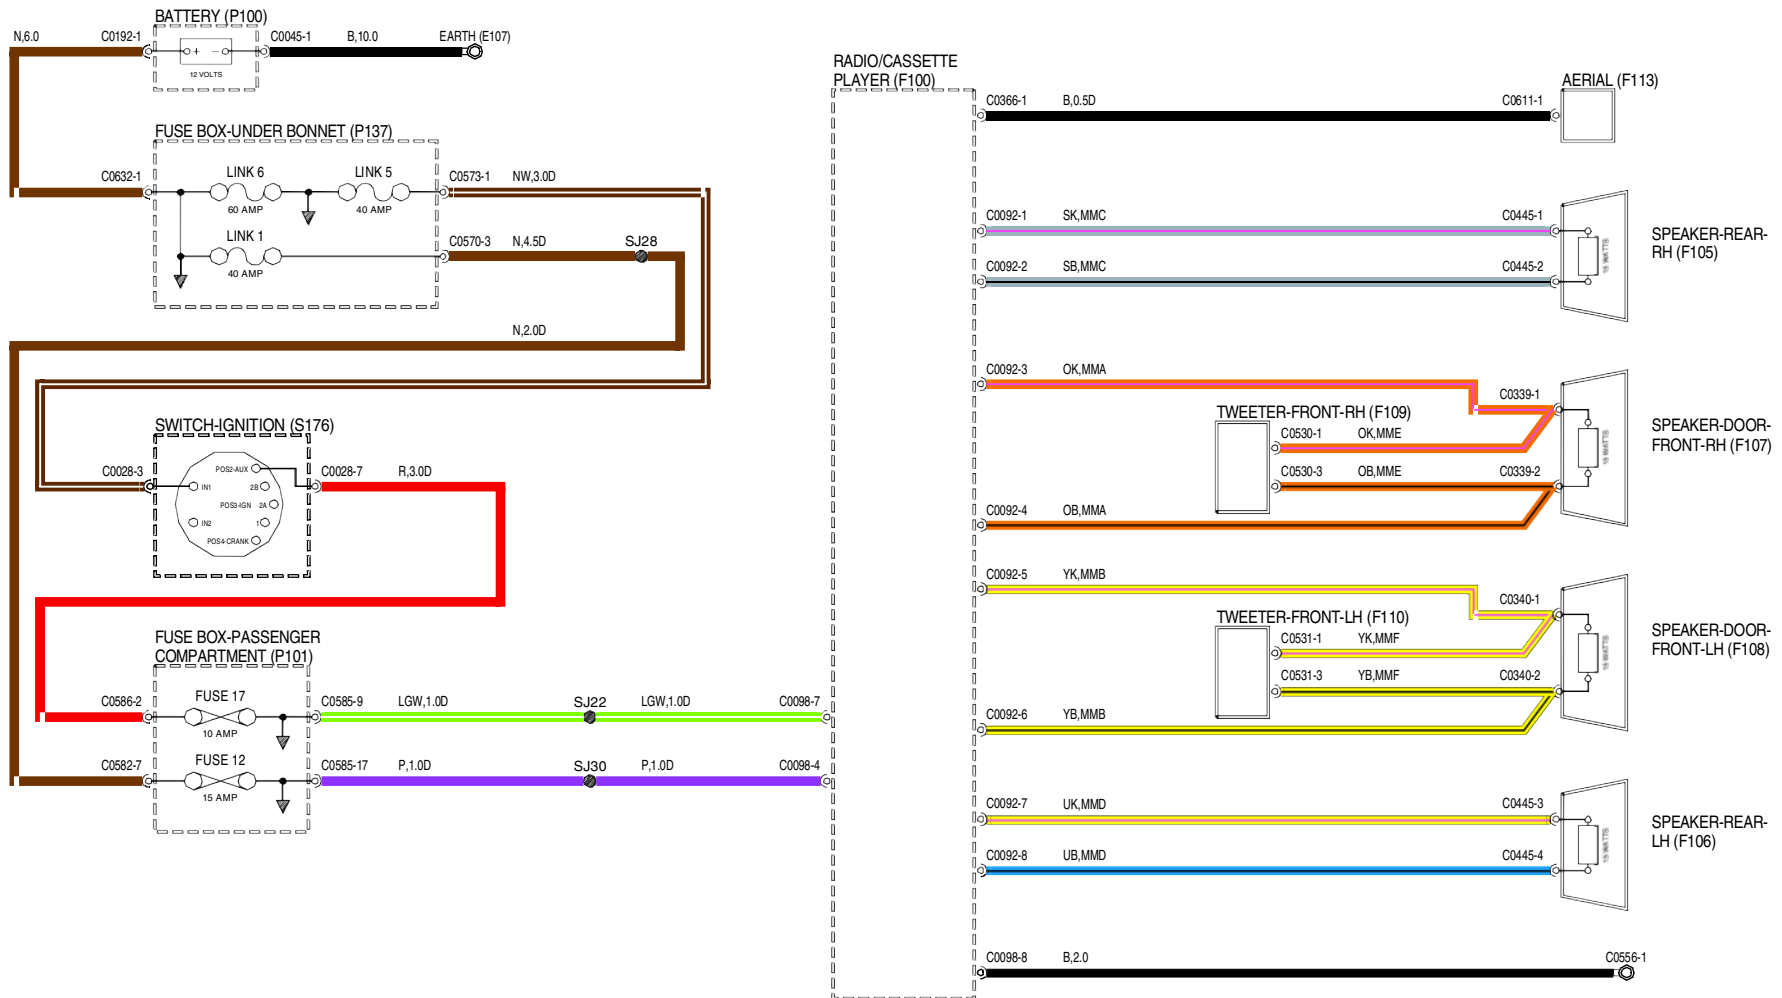


VWR119530-A-01

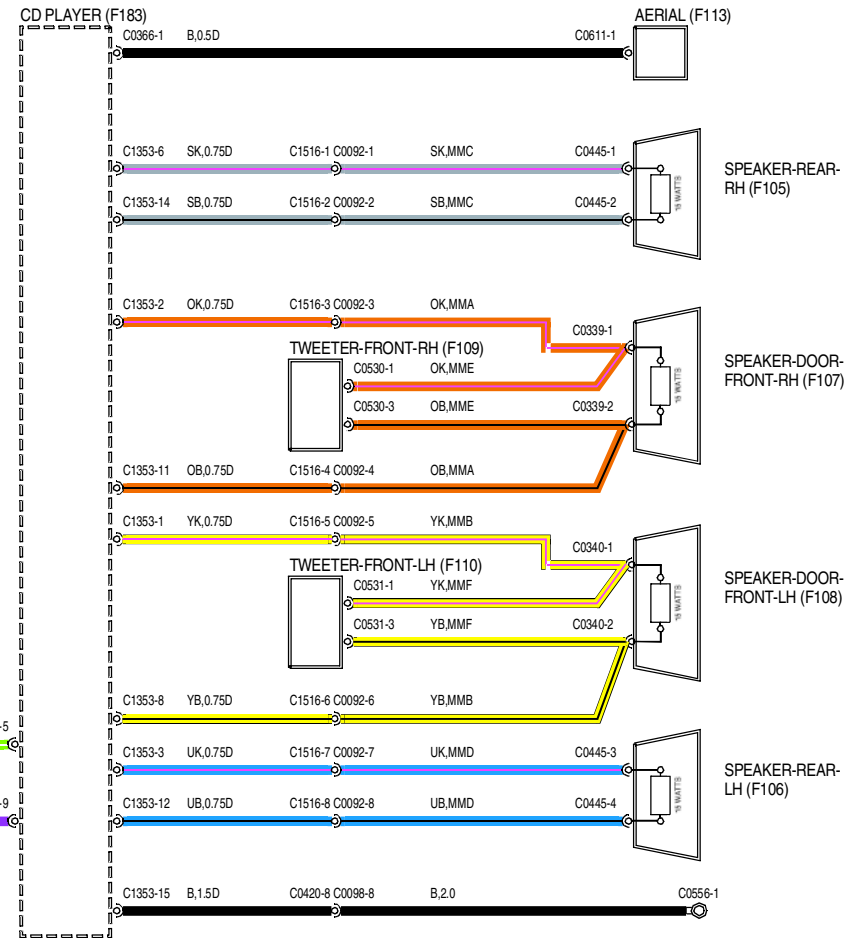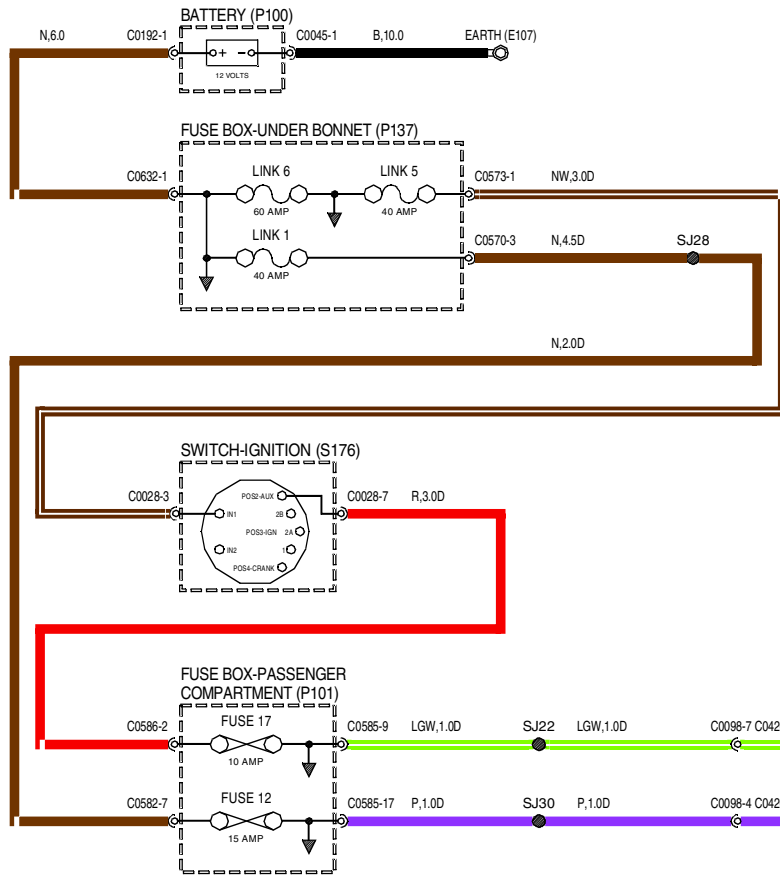

180 HEADER JOINTS

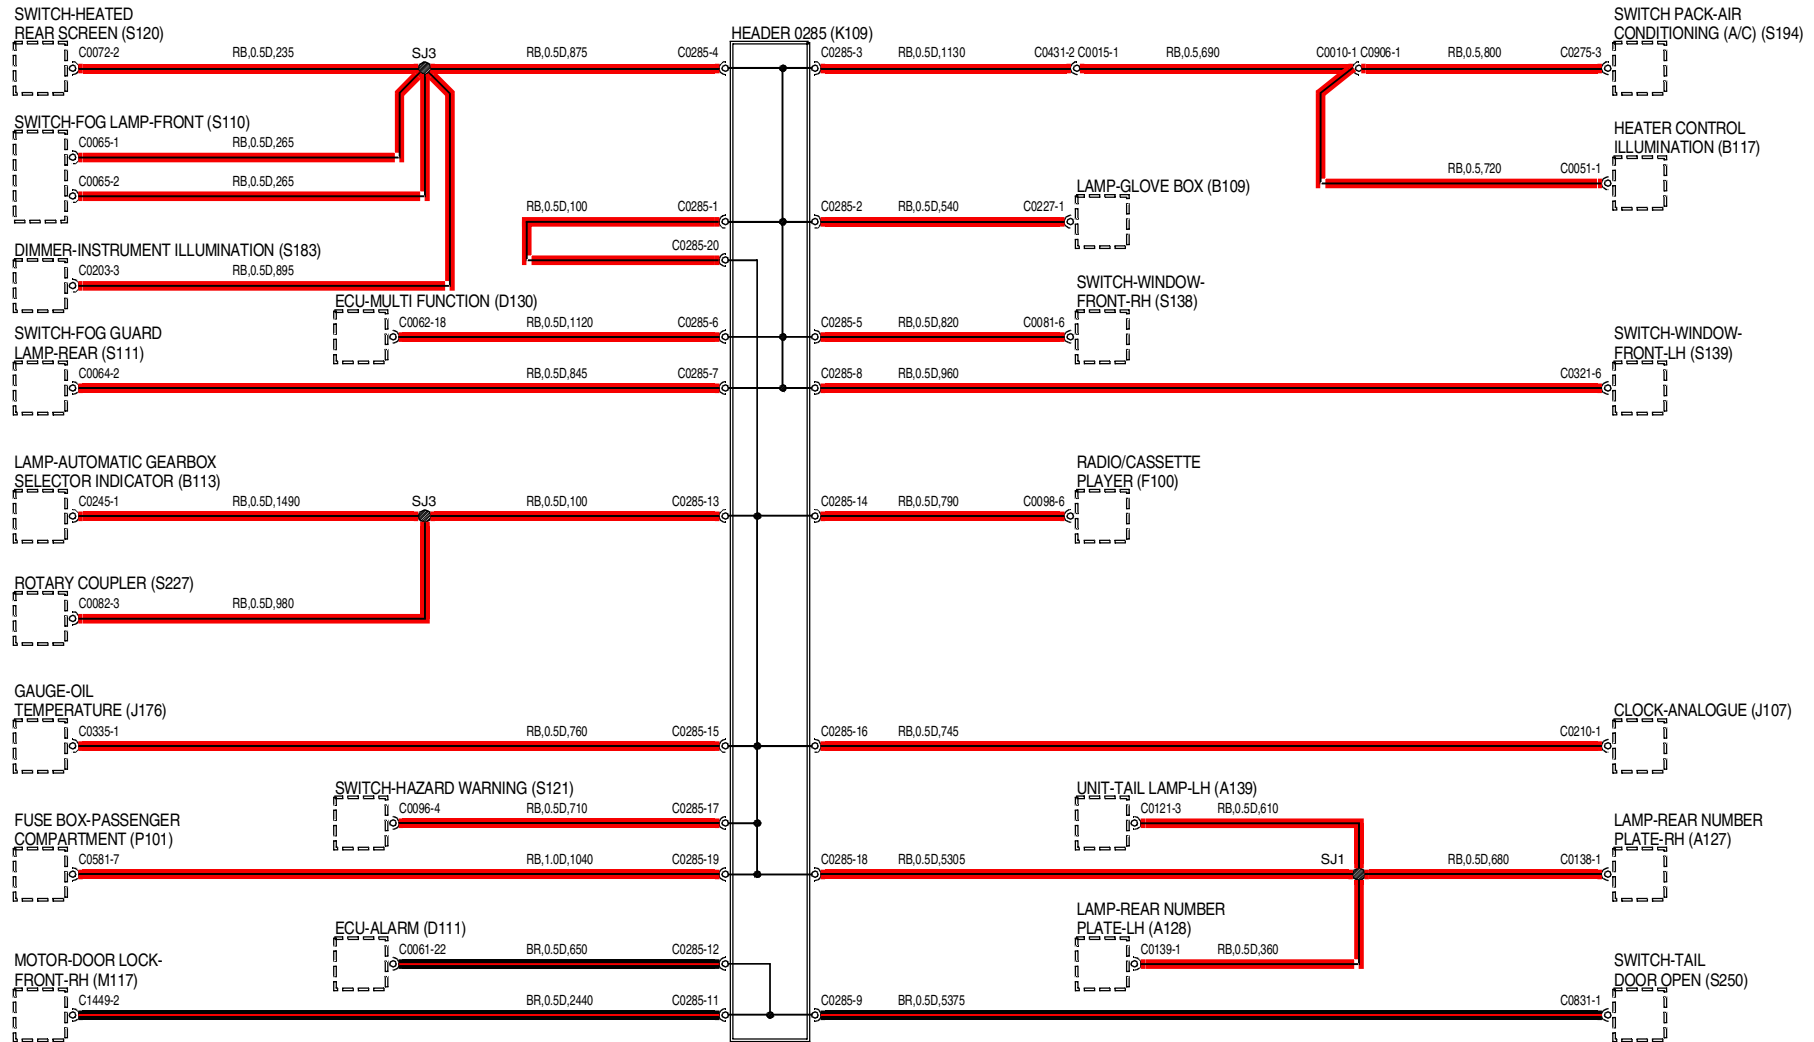


WWR119510-A-01

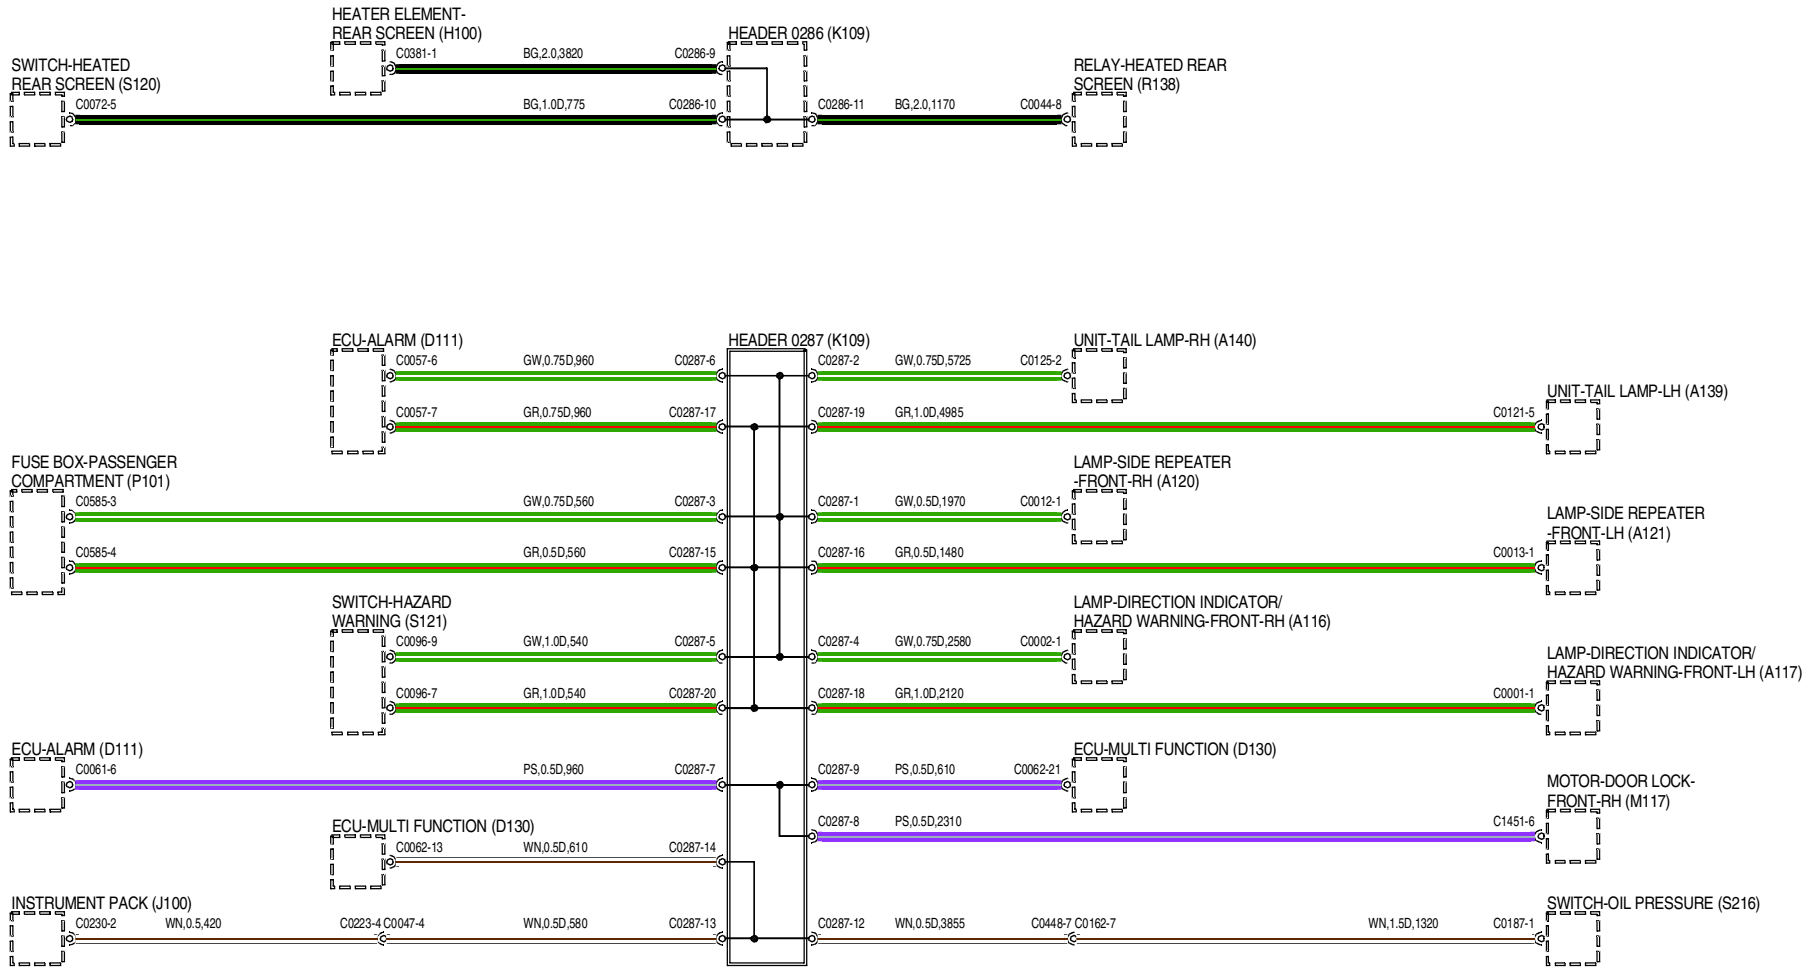





VWR119510-A-02

180 HEADER JOINTS


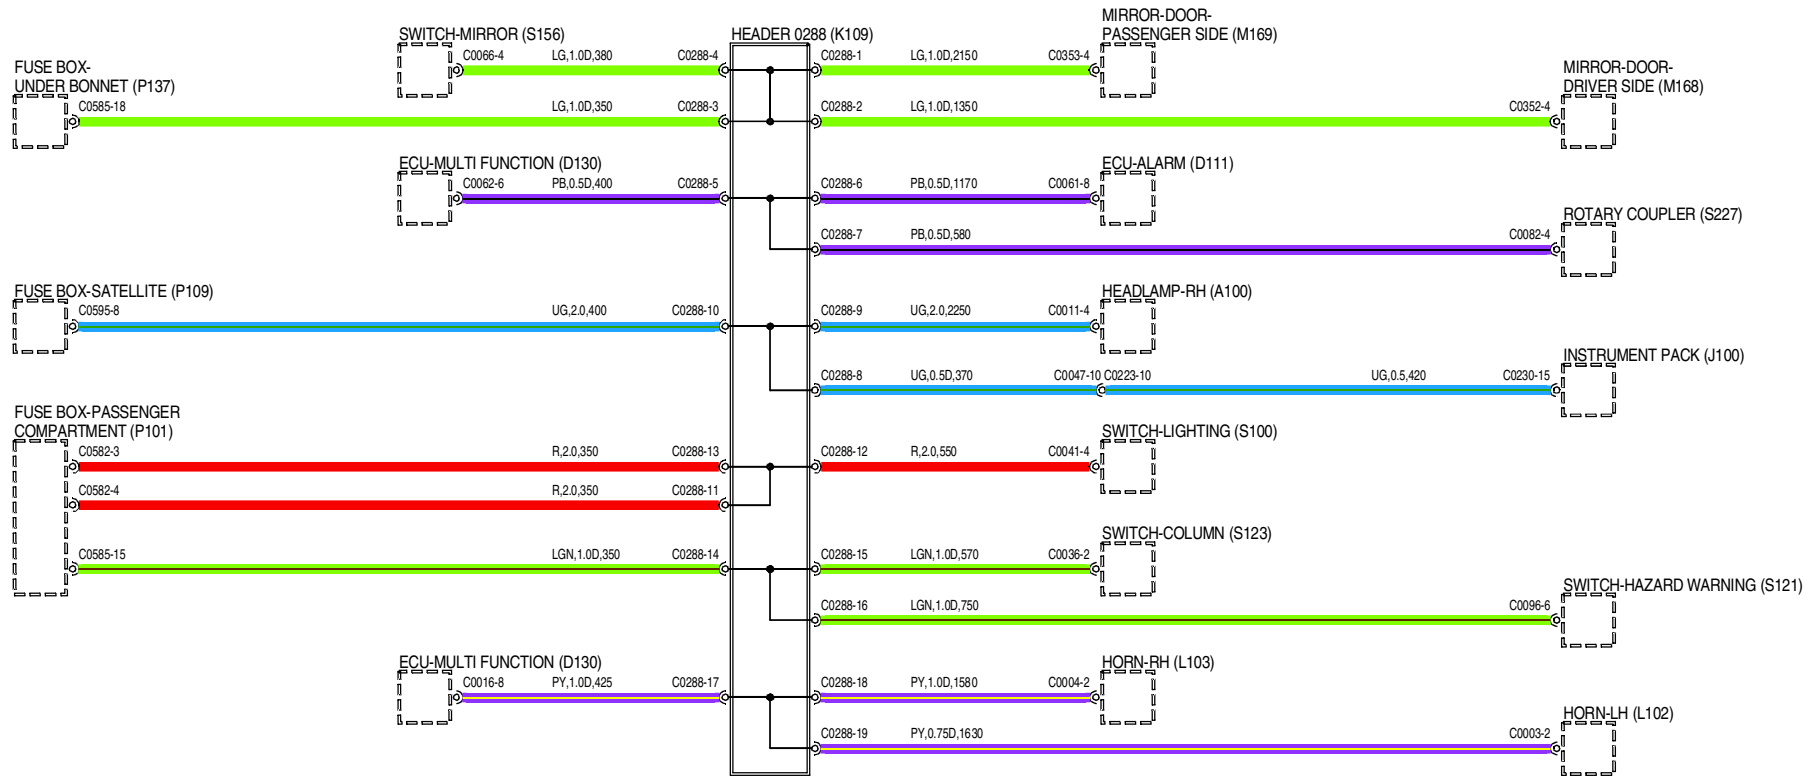


VWR119510-A-03

184 SPLICES AND CENTRE TAPS

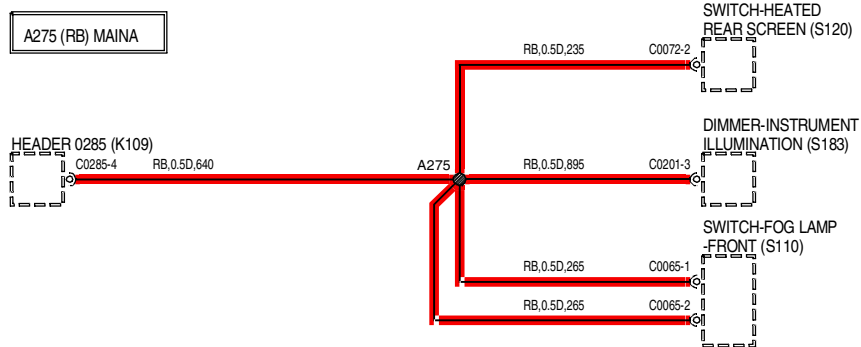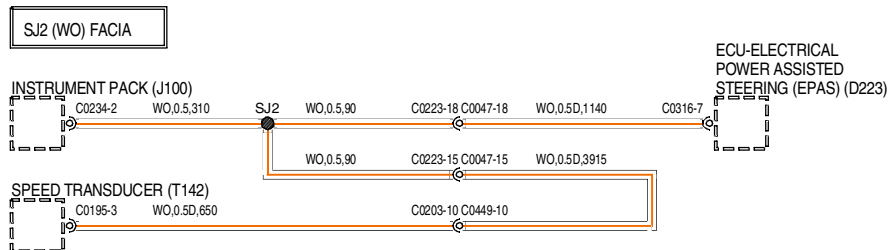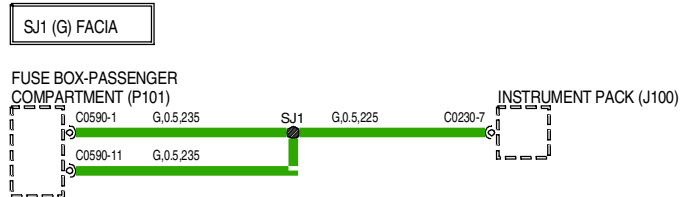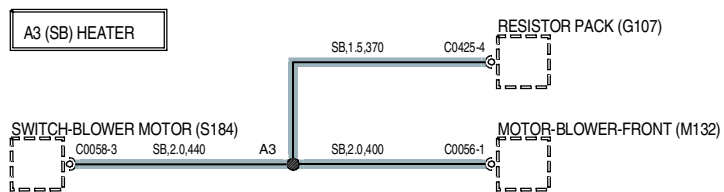


WR119810-A-01

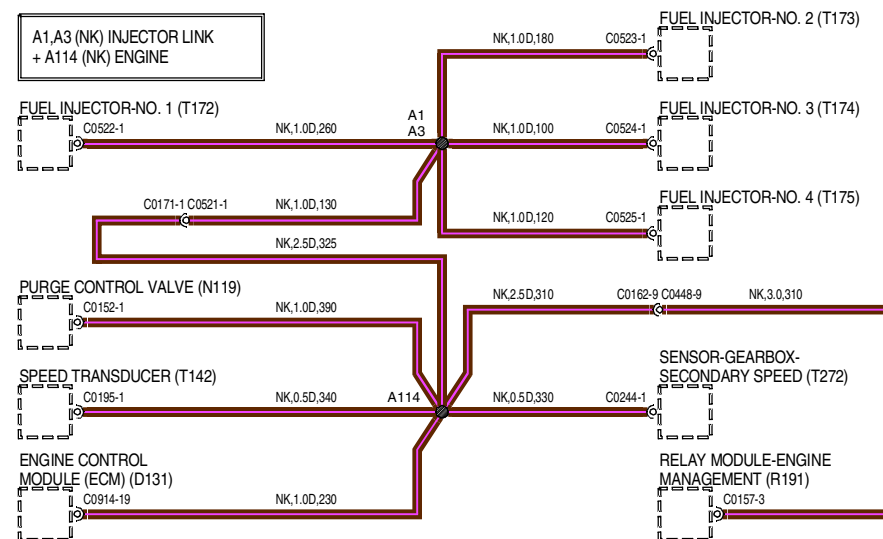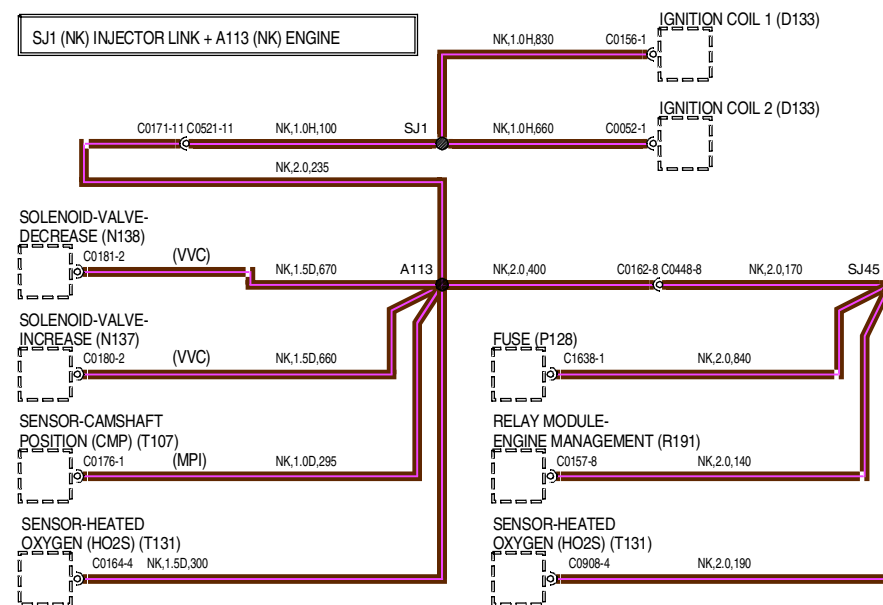


184 SPLICES AND CENTRE TAPS


SJ1 (RB) MAIN

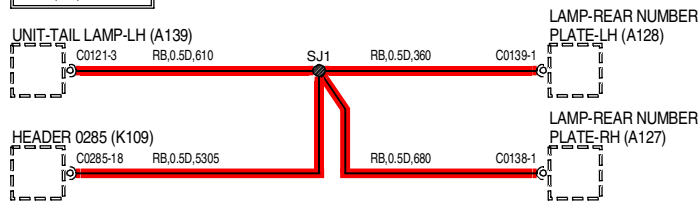


SJ2 (PR) MAIN

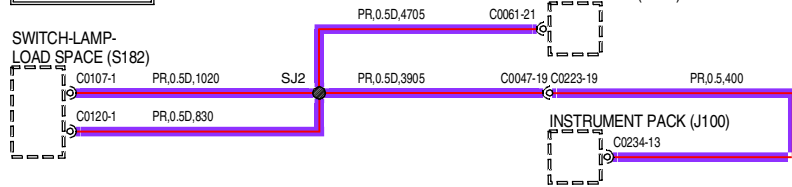


SJ17 (PR) MAIN

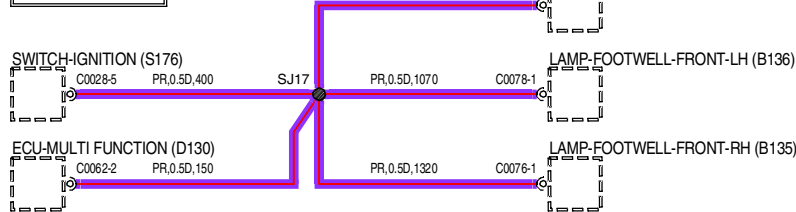

SJ5 (N) MAIN

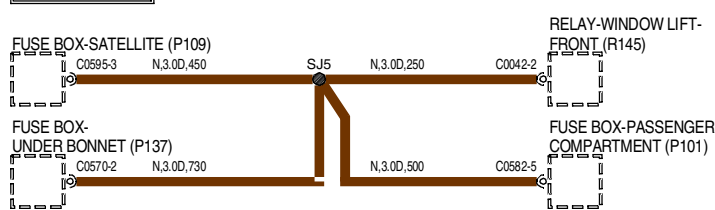


SJ3 (RB) MAIN

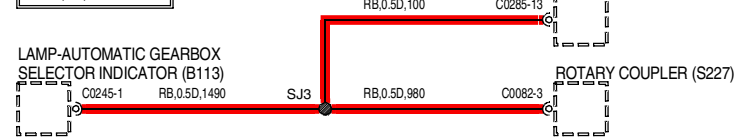


SJ9 (O) MAIN











SJ10 (K) MAIN

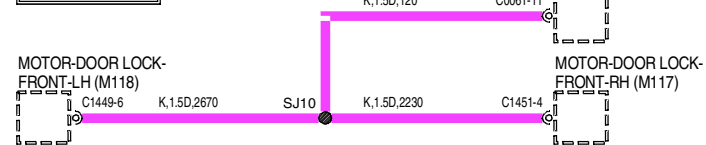

SJ12 (GN) MAIN








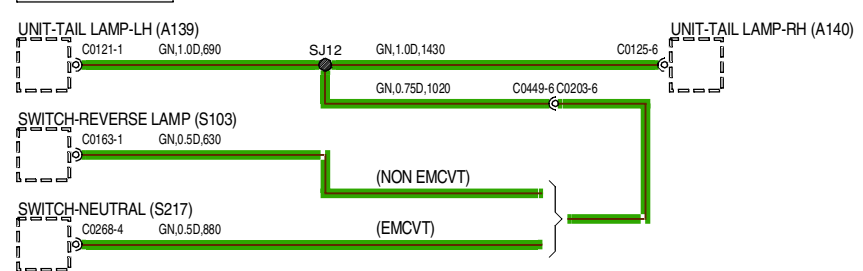


184 SPLICES AND CENTRE TAPS

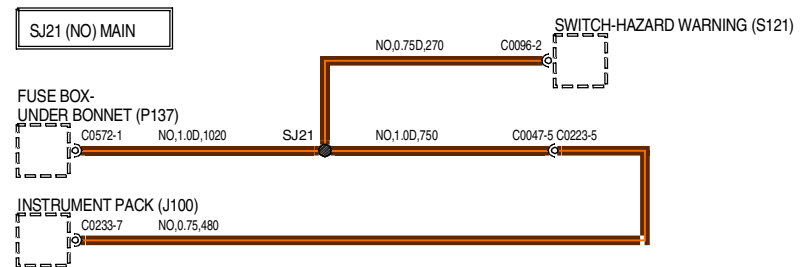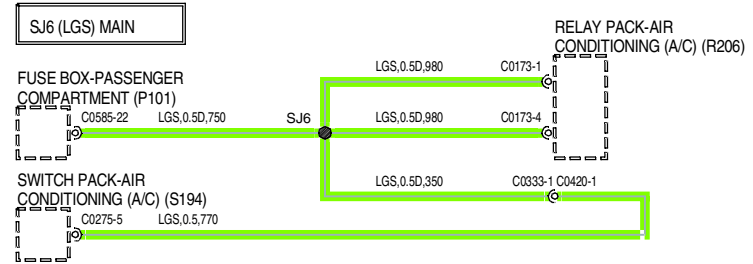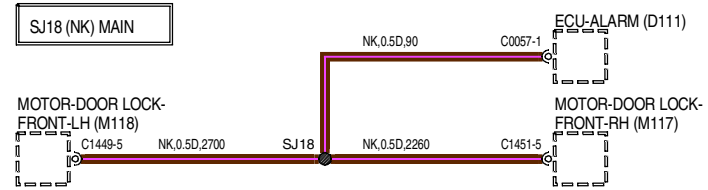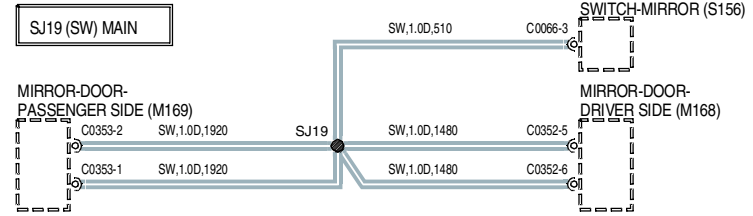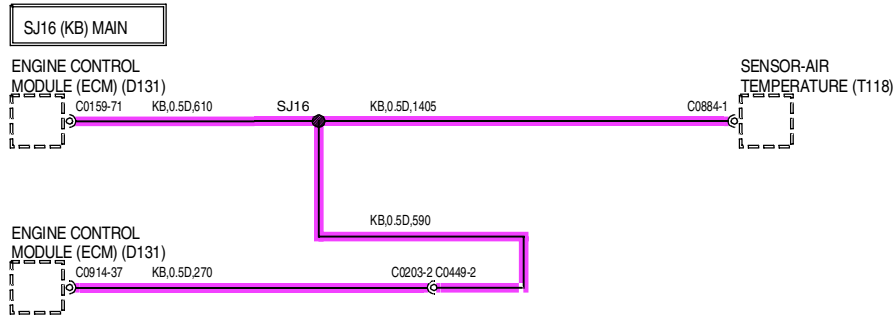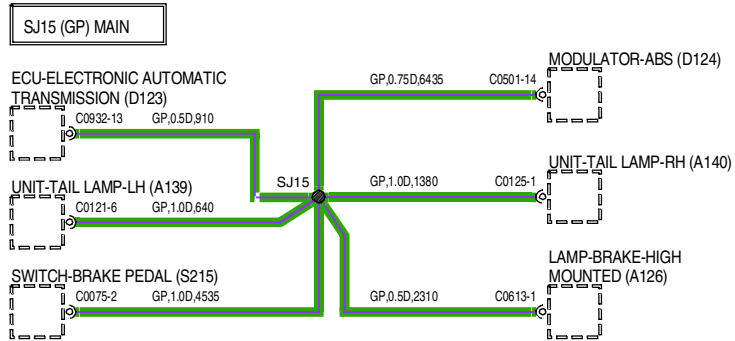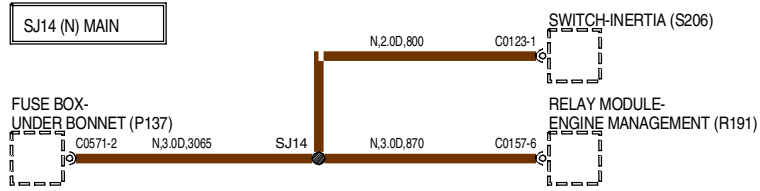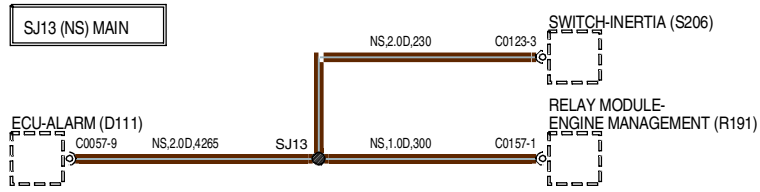


VWR119810-A-03

184 SPLICES AND CENTRE TAPS

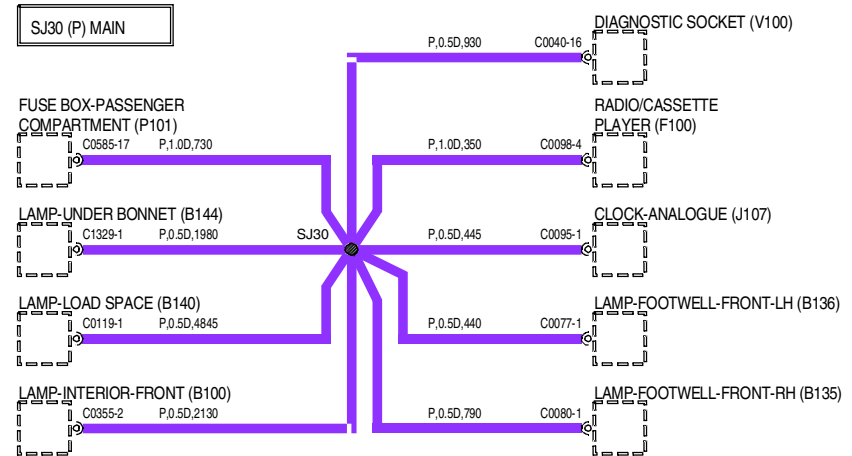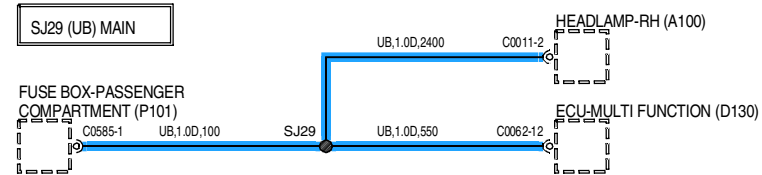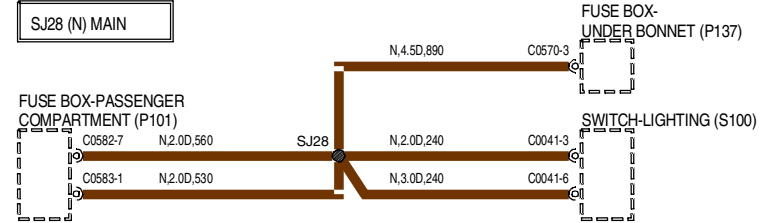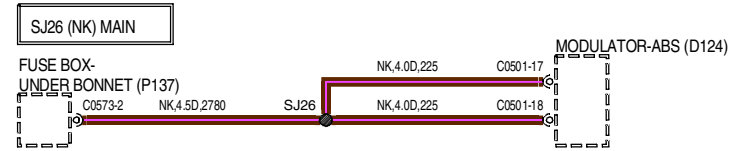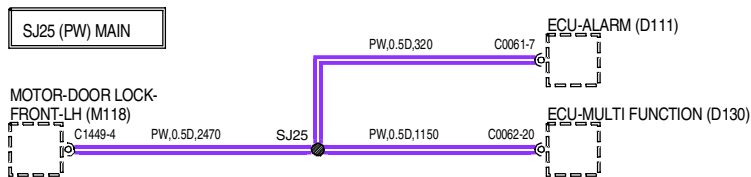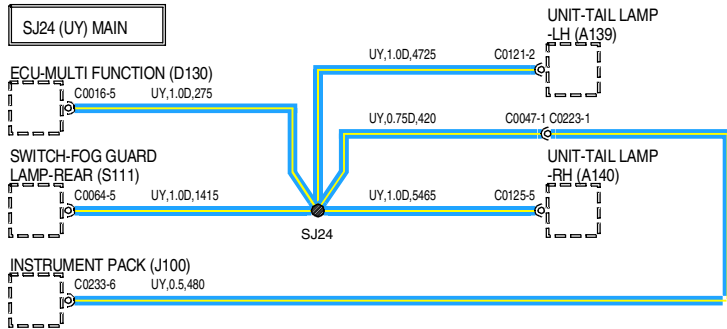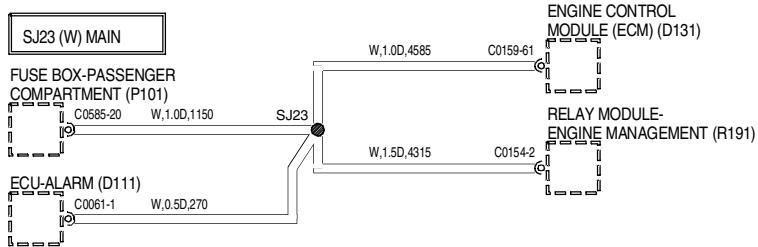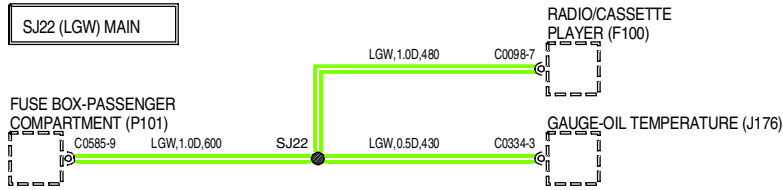


184 SPLICES AND CENTRE TAPS


SJ33 (W) MAIN

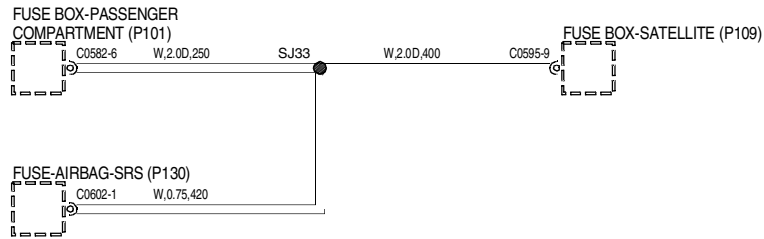


SJ34 (NU) MAIN

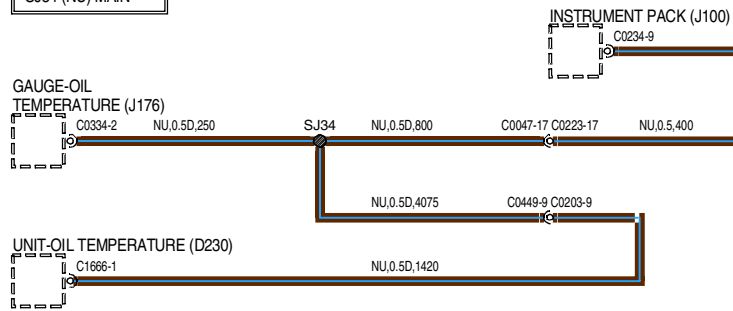


SJ37 (N) MAIN

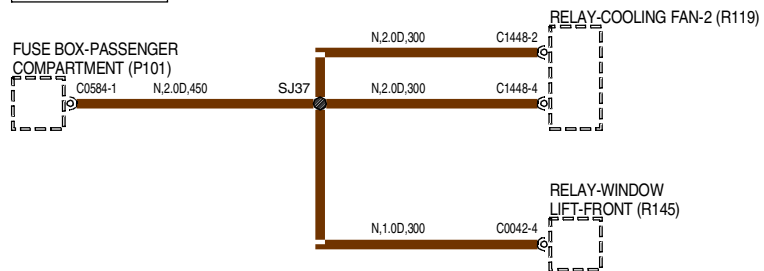


SJ38 (K) MAIN

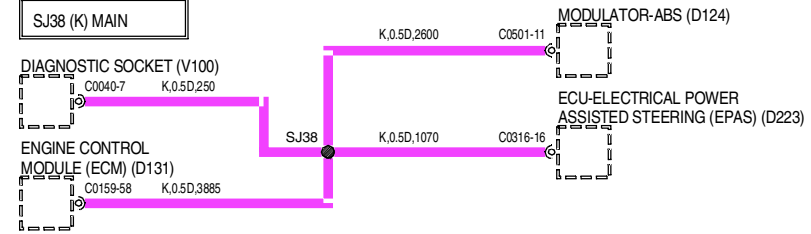


SJ39 (WB) MAIN

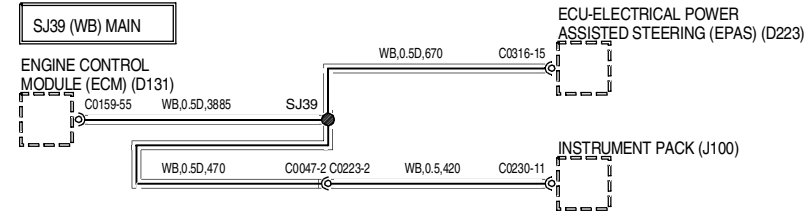

SJ40 (BP) MAIN

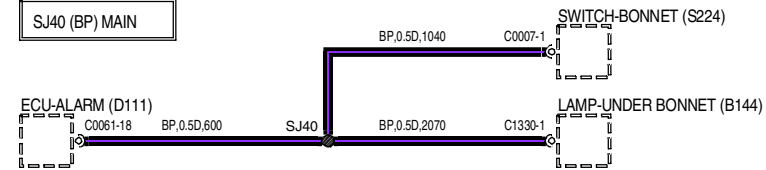

SJ7 (G) MAIN

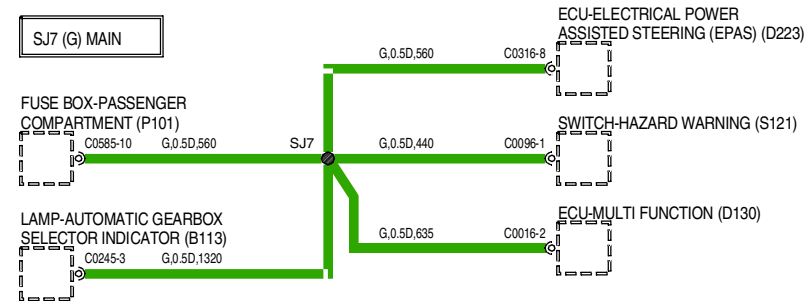

VWR119810-A-05

184 SPLICES AND CENTRE TAPS

